

ASSEMBLY AND CARE INSTRUCTIONS

MAXIMIZERS

124

VERSION: 8920010 (Revised 08/15)



SALES AND SERVICE sasportonline.com

SA Sport – Canada and International 135 Forestview Road, PO Box 40 Orillia, Ontario, Canada L3V 6H9

> Toll-Free: (800) 563-6479 Telephone: (705) 325-2274 Fax: (705) 325-1485

info@spiethanderson.com

SA Sport – USA 104 Nu Energy Drive, Suite 1 Aledo, Texas, USA 76008

Toll-Free: (800) 331-8068 Telephone: (817) 536-3366 Fax: (817) 536-3006

sales@sasportusa.com

Thank you for purchasing an SA Sport **124 - Maximizers**. We appreciate your business and value you as a customer.

Your 124 - Maximizers are manufactured of the finest materials and have been thoroughly inspected before leaving our plant. We are sure you will be pleased with their quality, durability, and performance.

Please carefully read the following instructions before assembling and using your new equipment, as they pertain to the particular equipment you have purchased.



The exclamation mark symbol when seen in this manual is used to indicate warnings or items that require special attention during the use or assembly of the apparatus.



Our 124 Maximizers are ONLY to be used with our 5101-002 Performance Series Uneven Bars with standard cable system and our 121PB Uneven Pro Bars.



Assembly, set-up and adjustment of this equipment should only be undertaken by qualified persons. At no time should children or other unqualified persons undertake the assembly, set-up, installation or adjustment of this equipment.



Be sure to follow our Floor Anchor Installation Instructions so that equipment will be properly secured to the floor (Please See page 5 of this manual).




Be sure to read and understand Safety Warnings on the last page of this manual. Make sure that those using and maintaining the equipment understand these Warnings.

1. Assembly Preparation

You have received a shipping carton which contains a set of four (4) **124 - Space Maximizer** packed with hardware as shown below. Quantities indicated are for a single Space Maximizer. Cables are supplied separately with our set of Uneven Bars.

Tools required to assemble the 124 Space Maximizer:

- One Measuring Tape & Marking Pencil
- Two ⁹/₁₆" Wrenches
- One 3/4" Wrench
- Slotted Screw Driver
- One 1/4" Allen Wrench
- Hammer Drill & 5/8" diameter carbide tipped concrete drill bit
- Drop-in Expansion Anchor Setting Tool

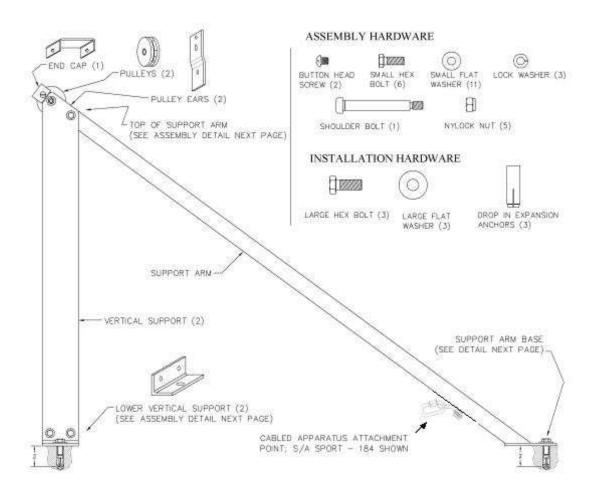


2. Assembly Instructions


2.1. Maximizers Assembly

- 1. Pre-assemble each of the Space Maximizers, as shown below, so that they will be ready for fastening to the floor. **Do not install Attachment Cables to the Space Maximizers at this time!**
- 2. Determine where the apparatus is to be located. The next step is to layout and anchor down the Space Maximizers.

TOP OF SUPPORT ARM ASSEMBLY

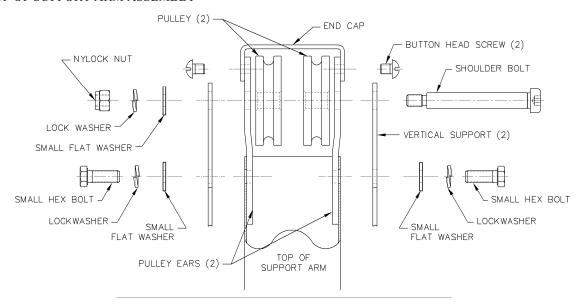

LOWER VERTICAL SUPPORT ASSEMBLY

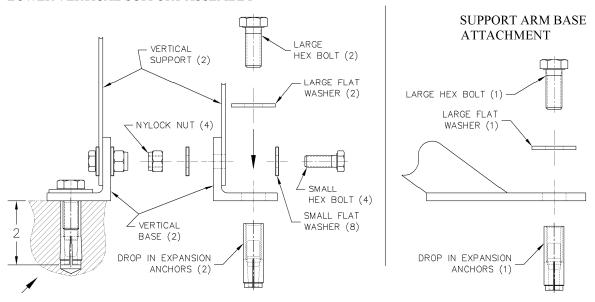



Before drilling and setting the concrete anchors, refer to Anchors Installation Instructions on page 5 to ensure safety of the system.

2.2. Installing Concrete Anchors



To determine anchor locations, please refer to the following section for your specific equipment to be anchored.


Tools Required (customer supplied):

- Tape measure
- Anchor setting tool or punch with a ⁵/₁₆" diameter & 1.5" long end
- ⁵/₈" diameter carbide tipped concrete drill bit
- Hammer drill
- 3/4" or 19mm Socket, Extension and Ratchet
- Hammer
- Safety glasses



Never place a floor anchor into a seam/crack, or an area within 9" from a seam/crack or outside edge of the concrete floor

- 1. With the 5/8" carbide drill bit installed in the Hammer drill, drill a hole into the concrete to 2 inches (+1/8").
- 2. Use a shop vacuum or turkey baster to remove all dust and concrete chips out of the holes. Ensure the hole depth is at least 2 inches (+1/8").
- 3. Turn a hex head bolt 3 full turns into a floor anchor, and insert it into the drilled hole.

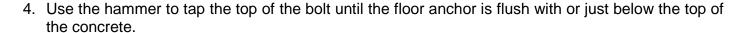






The step of locking or setting the anchors is critical. Ensure that it is done correctly!

Using a punch or setting tool (customer supplied), set the floor anchor by striking the plunger in the center of the floor anchor. Strike the setting tool or punch with a hammer repeatedly, to expand the anchor in the hole.



When attaching equipment to floor anchors, a bolt torque value of 20 ft lbs is recommended.

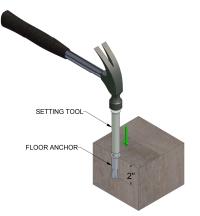

HEX HEAD BOLT

FLOOR ANCHOR


2.3. Layout & Installation

- 1. Determine the center of the apparatus, then draw a rectangle of 18" x 105" centered to the location where the bases of the Uneven Bars are to be placed. (Diagonal measurement is 106 ½ inches)
- 2. Install the Drop-in Anchors for the Support Arm Base at each corner of this box (18" x 105") as shown below. Once the drop-in Anchors are installed and set correctly, loosely fasten the support arm base of the 4 Space Maximizer arms at each corner of the drawn box.




As the step of locking and setting the concrete anchors is critical, ensure that it is done correctly, according to the instructions on the previous page.

3. Next, swing the Space Maximizers into their approximate positions.

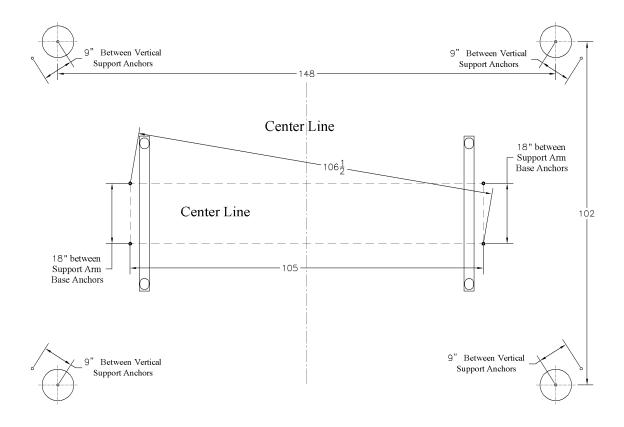

- 4. Then locate the outside Vertical Support Base holes on each Space Maximizer. They are shown in the diagram above as a circle with "cross hairs".
- 5. Position the outside Vertical Support Base holes so that they are of equal distance to each other, creating a box which measures 102" x 148" inches with a diagonal distance of 179 \(^3\)4 inches (also see the diagram on the next page).

6. Mark this location through the outside Vertical Support Base hole. Install a drop-in anchor and fasten only the one side of the Outside Vertical Support Base.

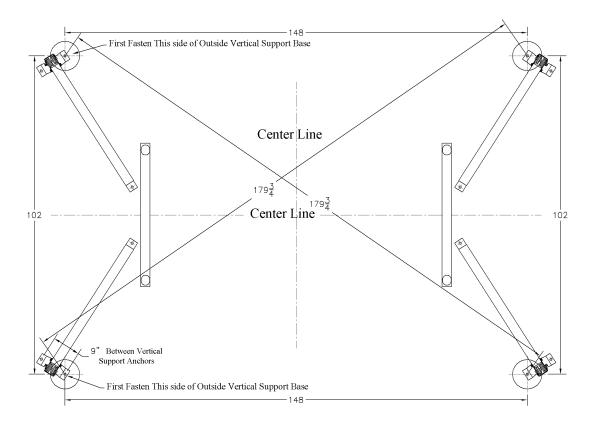

7. Now proceed to install the second anchor of the Vertical Support Base approximately 9 inches away from the inside base. Pulling on the Vertical Support outward to the 9" point, mark a location through the base hole to ensure that it will line up. Repeat on all 4 bases.



Ensure that all Fasteners have been tightened on the Space Maximizers as well as the 3 Anchor Bolts on each of the 4 Space Maximizers.

2.4. Mounting the Cable system

- 1. Remove the end caps on each Space Maximizer. Install the appropriate cable attachment mechanism for the cable system you are using. If turnbuckles are used ensure that they are installed to allow for adjustment.
- 2. Install the apparatus as per manufacturer's procedures and place the cables over the 2 pulleys of the Space Maximizers. Ensure that the Cable Sliders are between the apparatus' Uprights and above the Maximizer Pulleys. Now install the end caps on all 4 Maximizers.
- 3. The supplied 5/16" quick-link is used to connect the chain link of the cabling system to the maximizers. After hooking up the cabling system, adjust and tighten so that the Uprights are vertical and parallel to each other.

3. SAFETY



Any activity involving motion or height creates the possibility of serious injury including permanent paralysis and even death, from landing or falling on the neck, head, or other parts of the body.

You assume a risk of serious injury in using this equipment. However, this risk can be reduced by strictly following these rules at all times.

- 1. Use this equipment **only** under the supervision of a trained and qualified instructor.
- 2. This equipment must be used only when protected by proper matting as recommended by the Federation of International Gymnasts (F.I.G.). If in doubt concerning proper matting, do not use this equipment.
- 3. This equipment must be used with proper spotting equipment and qualified spotters suitable to the activity or skill. Always consult an instructor.
- 4. **Know your own limitations and the limitations of this equipment**. Follow progressive learning techniques and always consult an instructor.
- 5. Always inspect this equipment for proper stability before each use.
- 6. Always inspect this equipment for loose fittings and parts. Replace any worn, defective or missing parts.
- 7. Always inspect this equipment for improper or unsafe installation. If in doubt, do not use this equipment.