



INSTRUCTIONS FOR 30B0801 PORTABLE SHOE DRYER

1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify Kwik Goal immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
2. Before operating this shoe dryer, please read these instructions and retain for future reference.



3. **WARNING**

- Do not use the dryer in immediate vicinity of bath tubs, showers, wash basins or swimming pools.
- Never immerse the dryer into water or other liquids. If it has been in any contact with water – unplug immediately.
- Plug the dryer only into a standard household (120V A/C) outlet.
- Do not cover the dryer with coats, clothing, blankets, etc.
- After use and before cleaning, always unplug the dryer.
- Do not permit children to use or handle the dryer without proper supervision.
- If the power supply cord is damaged, it must be replaced by the manufacturer, a service agent, or a similarly qualified person in order to avoid a hazard.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock or fire, or damage the dryer.
- Handle the product with care. It can be damaged through impact or being dropped, even from low heights.

4. Operation

- 4.1. Plug the dryer into a outlet. It will begin to warm up immediately.
- 4.2. Place a heating element into a shoe or glove. Maintain around a 1 in. gap from the tip of the shoe or glove, so that the warm air can circulate.
- 4.3. The dryer will reach its maximum temperature of 132° F after around 10 minutes.
- 4.4. Leave the heating element in the shoe or glove until it is dry or sufficiently warmed.
NOTE: Do not use the heating elements for longer than 8 hours at a time.
- 4.5. Remove the plug from the outlet and remove the heating element from the shoe or glove.