




www.porterathletic.com  
(888) 277-7778

No. 236054 & 236154 Goals  
INST236

## **MOUNTING THE GOAL**

1. Check contents of box for goal, net, and hardware pack.
2. Remove the cover plate by removing the Phillips head screws on both sides.
3. Select the proper mounting hardware from the hardware pack, this will vary based on backboard and height adjuster.
4. Install the flange lock nuts from the backside of the backboard.
5. Inspect and tighten all hardware before reattaching the goal plate.

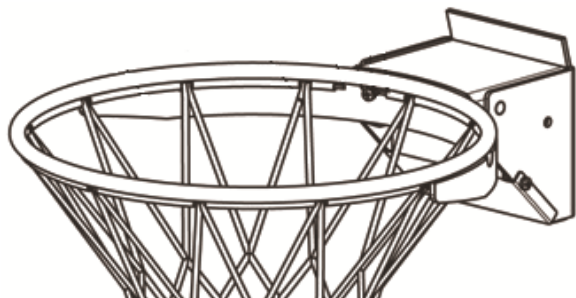

## **WARNING**

- Do not remove, loosen, or tamper with any screws or bolts. Assembly is under pressure and any disassembly may cause injury and void all warranties.
- In order to maintain warranty, goal should be inspected, greased, and lubricated before each season.
- Only adjust breakaway strength after goal has been mounted.

## **NOTE**

- The two vertical springs can be tightened if minor looseness or rattling occurs. One or two turns of the hex nut is sufficient. **DO NOT** over tighten as it will damage goal mechanism, backboard, and could lead to player injury.

## **ADJUSTING BREAKAWAY**

Amount of force required to release locking mechanism can be adjusted on No. 236054 Breakaway goals.

Remove the cover plate and insert 3/16" round tool in the hole in the adjustment screw mechanism. Place flat wrench provided with goal over Hex Head portion of adjusting screw (See Fig. A). Moving the wrench and round tool away from each other will increase breakaway force required, while moving them toward each other will decrease breakaway force.

Figure A

