



## ASSEMBLY INSTRUCTIONS FOR 10B6401 GOAL DOLLY


**\*GOAL DOLLIES MUST BE USED BY A MINIMUM OF TWO QUALIFIED PERSONS\***

1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify Kwik Goal immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
2. Read through entire instruction before beginning assembly and installation.


**NOTE: Components may be packaged in one or more additional boxes.**

### Parts


Dolly Plate (3)  
(Part# VZ879)

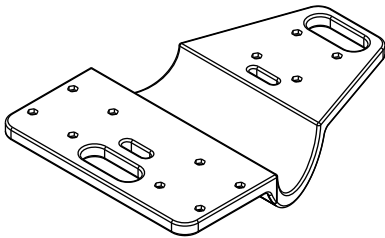


Wheels (9)  
(Part# VZ878)

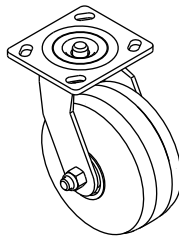

Goal Hold Down (3)  
(Part# VZ881)

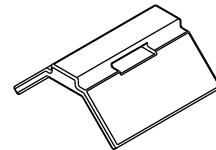

Dolly Strap (3)  
(Part# VZ877)

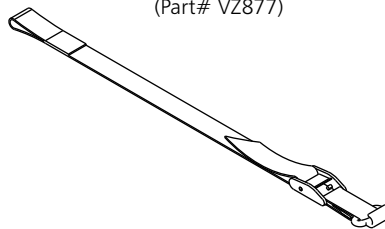


### **\*\*\*CAUTION\*\*\***


All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

## Assembly Tools

13mm & 14mm Wrench

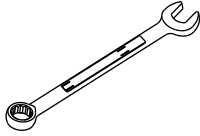


Ratchet with  
13mm & 14mm Socket

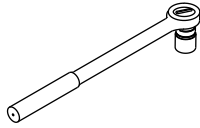

### Hardware (Part# JZ280)

M8 X 30mm Hex Bolt	(36)
M8 X 65mm Hex Bolt	(3)
M8 Flat Washer	(36)
M8 Lock Nut	(39)

3. Pass hex bolt through dolly strap and secure bolt with lock nut as shown. Temporarily remove the cam buckle and set aside for later assembly.

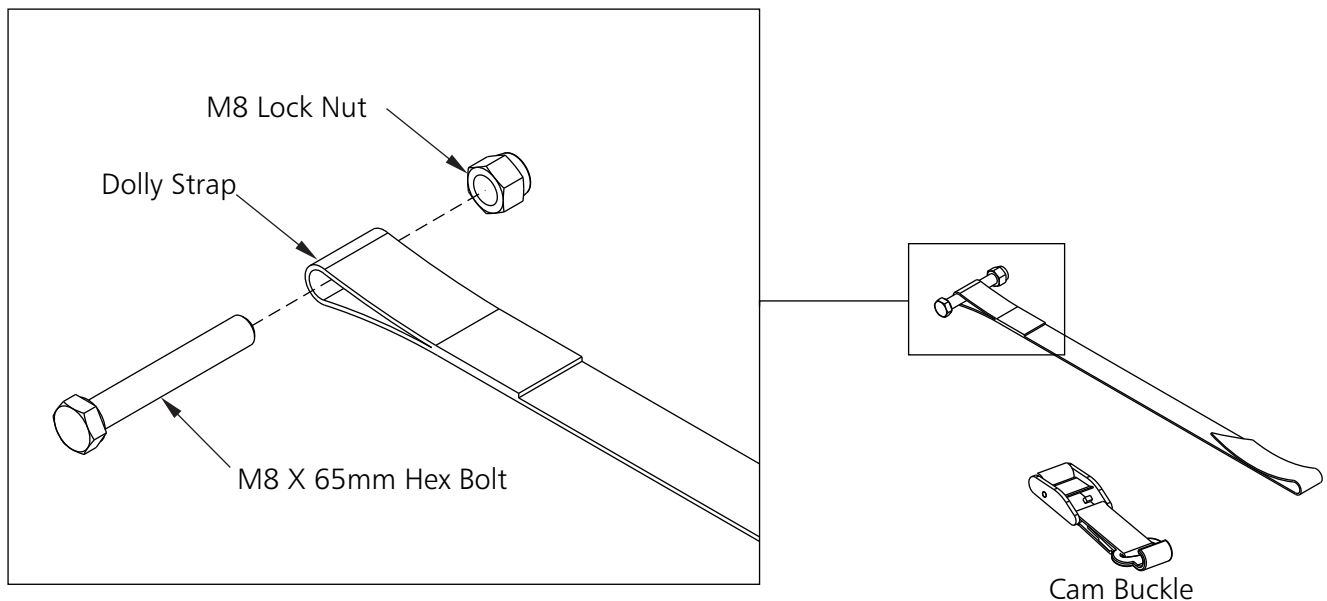


### \*\*\*CAUTION\*\*\*

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis.

Any modifications to this or any Kwik Goal product will void any and all warranties.



4. Place bolt end of dolly strap into rectangular well of dolly plate as shown. Feed excess dolly strap through slot then mount wheel as shown below.

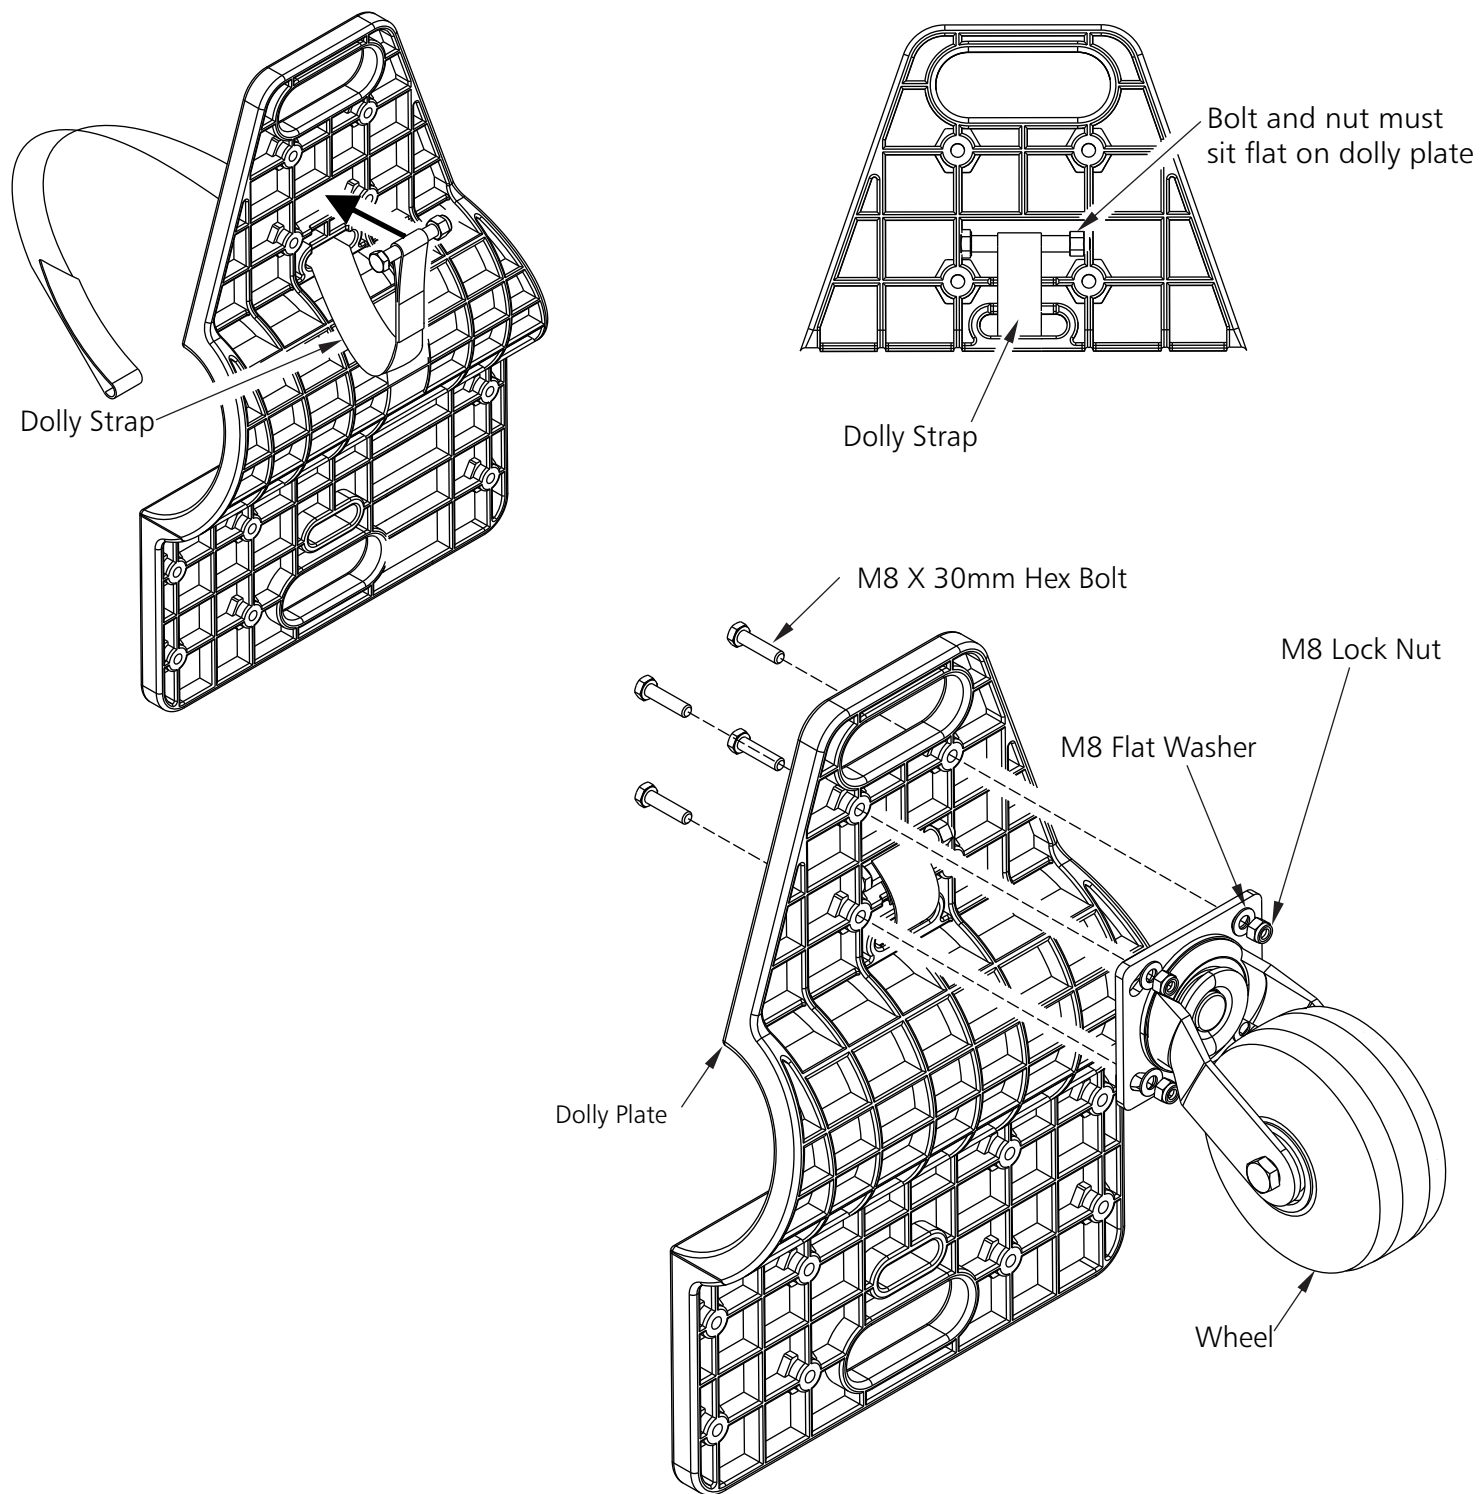

\*\*\*CAUTION\*\*\*

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

5. Attach remaining wheels to dolly plate as shown below.

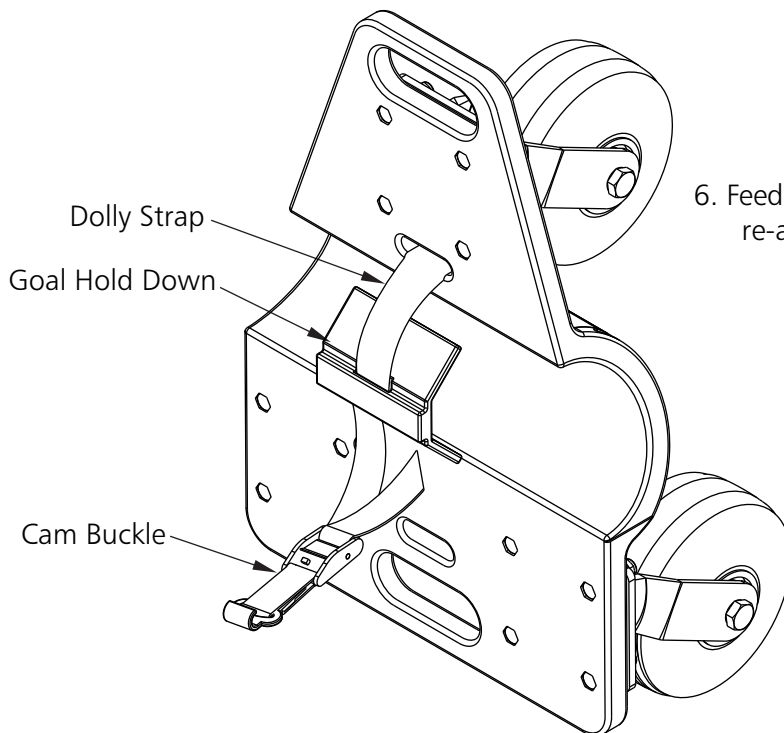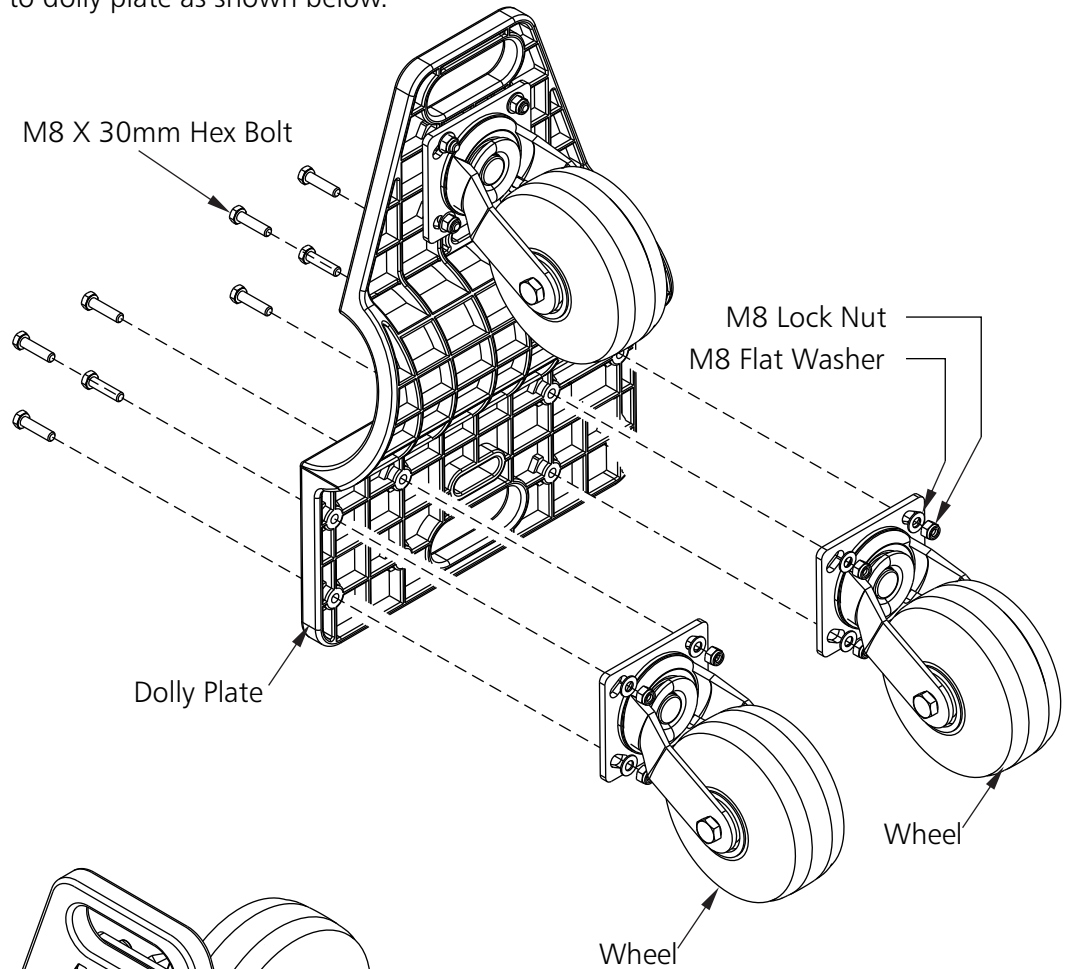


6. Feed the dolly strap through the goal hold down and re-attach the cam buckle as shown.

\*\*\*CAUTION\*\*\*

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

7. With two people, lift one post and place base of goal on dolly plate, approximately 1/3 of the goals total side distance from the post. With goal hold down centered on top of base secure using dolly strap catch at the smaller rear opening and pull strap tight as shown. Repeat for opposite side of goal. Lift with proper technique to avoid injury. Use features on goal to prevent dolly from sliding when in use. Examples: anchor plates, net clips, etc.

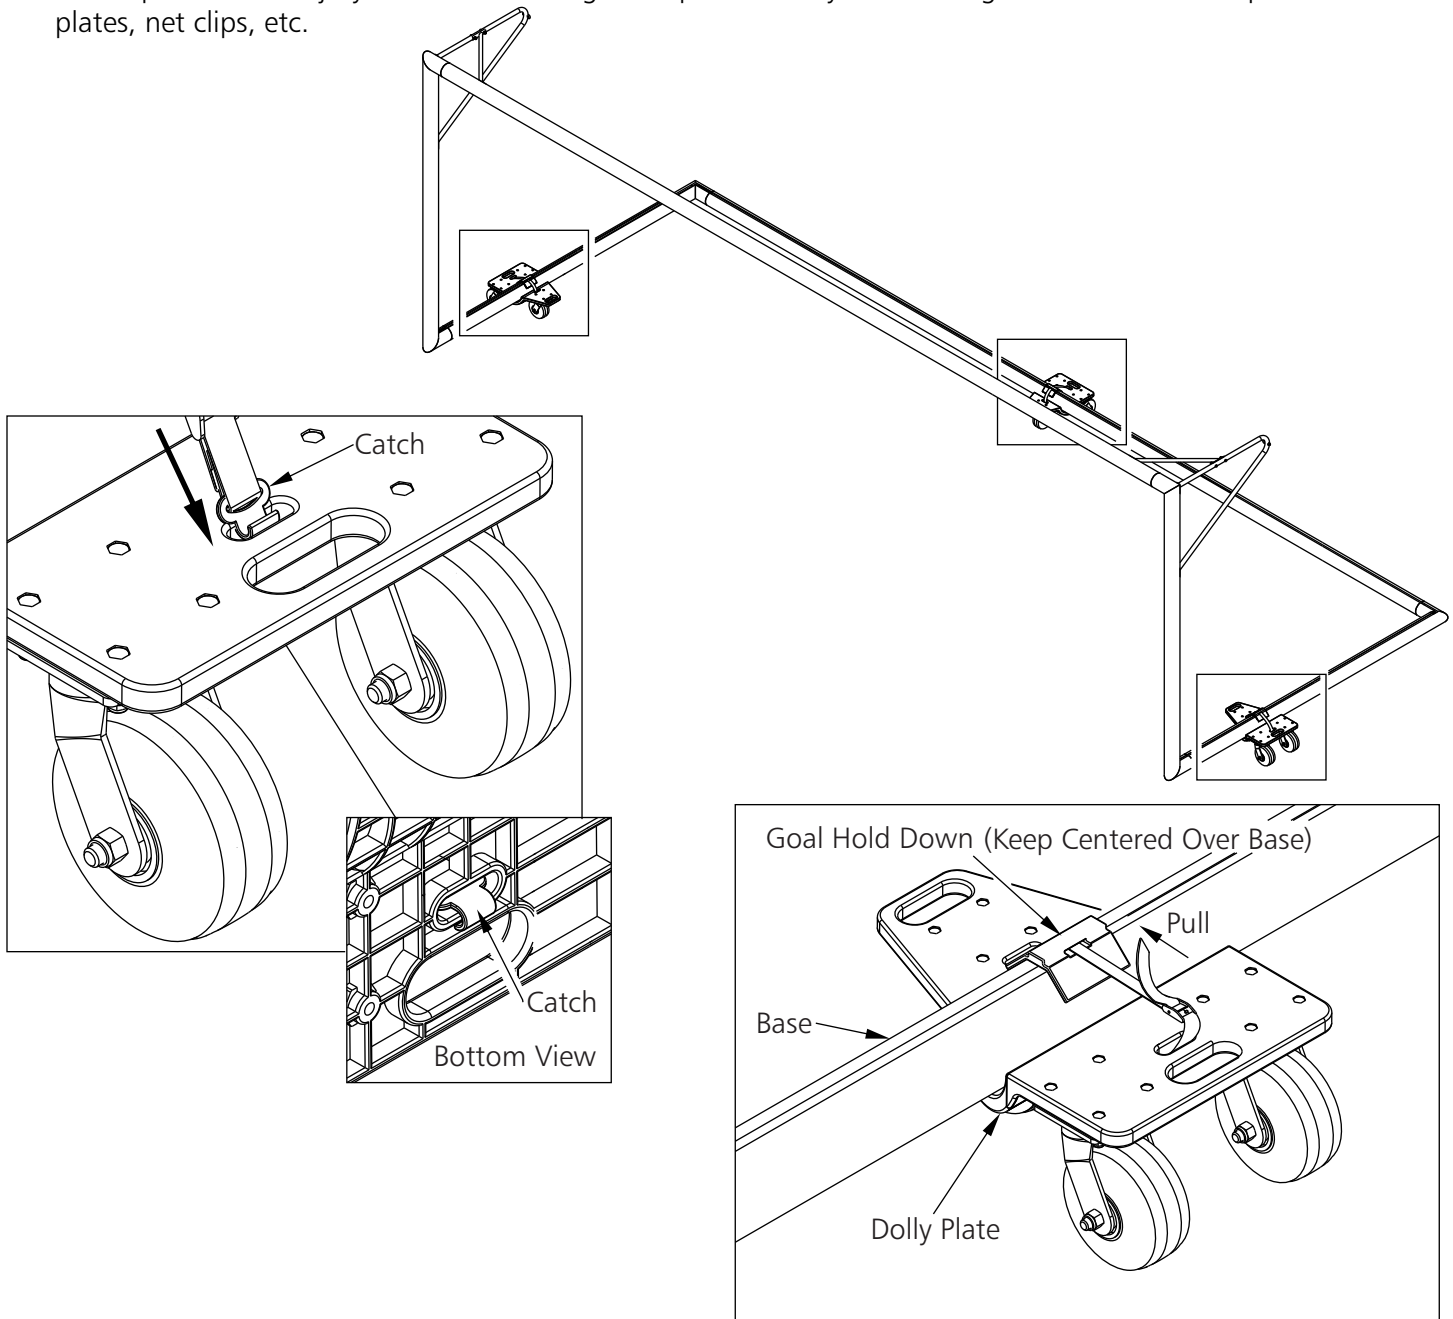


8. With two people, attach dolly at the center of the rear crossbar with same method used to attach to side bases of goal. Lift with proper technique to avoid injury. Use features on goal to prevent dolly from sliding when in use. Examples: anchor plates, net clips, etc.

\*\*\*CAUTION\*\*\*

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

9. Move goal with one person at each post, for best results push or pull at a diagonal.

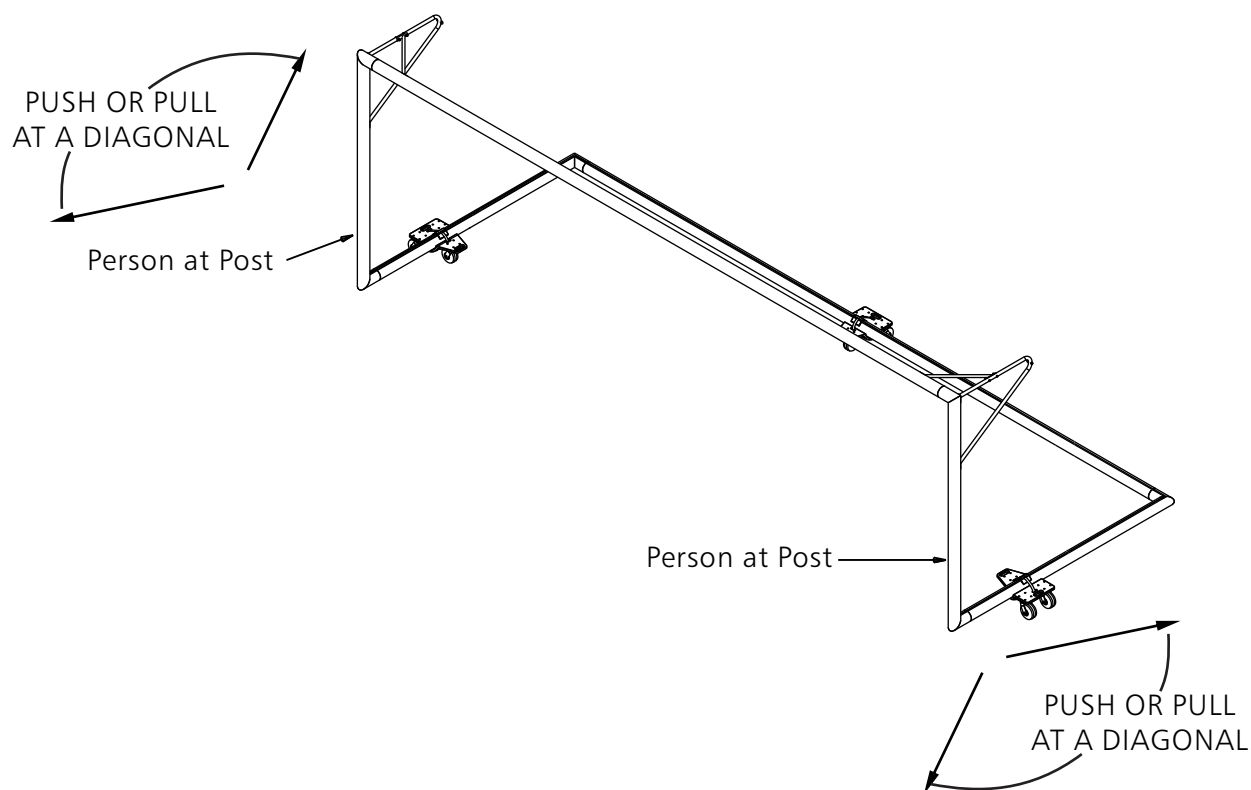

Go to [Kwikgoal.com](http://Kwikgoal.com) for additional product information.

**\*\*\*CAUTION\*\*\***

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.