

FIRST TEAM SPORTS, INC

Champ Series Assembly Instructions

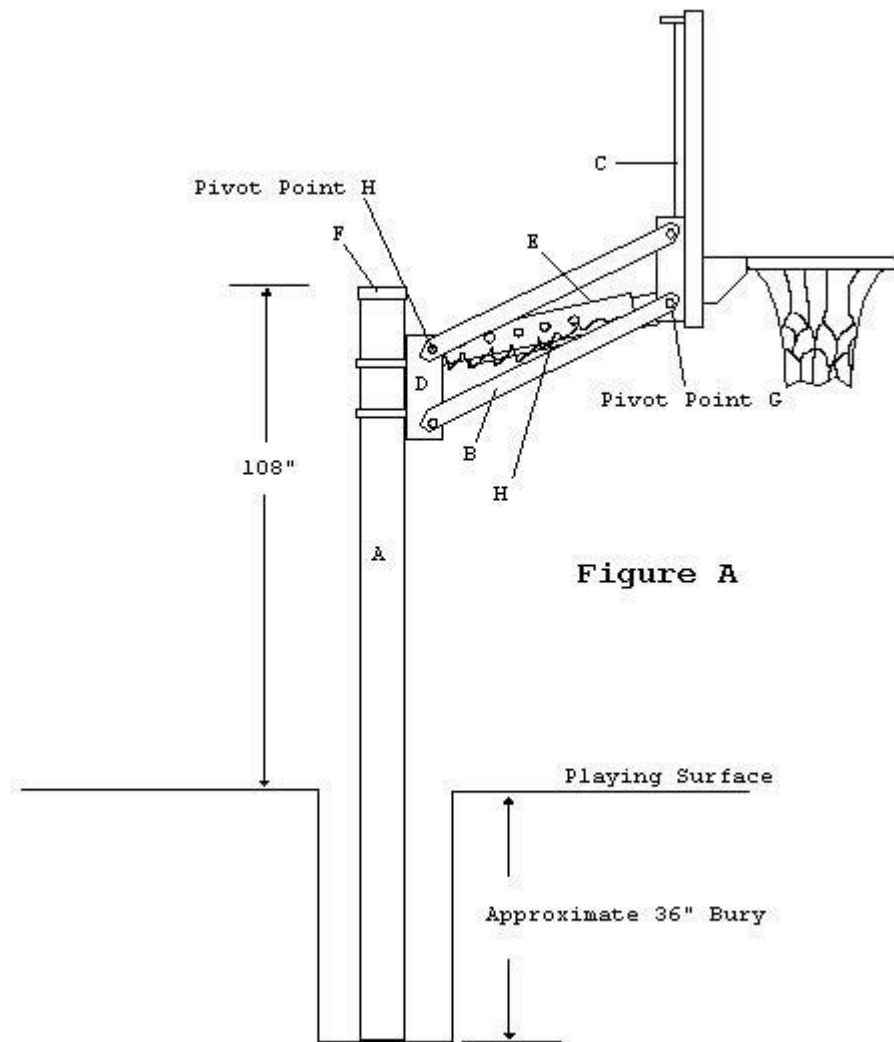


Figure A

Bill of Materials

A (1) Vertical Post	J (4) ½" Hex Nut	G (2) 4" U-Bolt	M (8) ½" Nylon Flatwasher
B (4) Extension Arm		H (1) Lift Spring	N(4) 5/16" x 1" Machine Bolt
C (1) I-Frame Backboard Support		I (4) ½" Lockwasher	O(4) 5/16" Flatwasher
D (1) Extension Arm Support	J (4) ½" Hex Nut		P(4) 5/16" Lockwasher
E (1) Insta- Just Bracket	K (4) ½" x 10" Hex Bolt		Q(4) 5/16" Hex Nut
F (1) 4" Square Post Cap	L (4) ½" Locknut		

NOTE: Immediately unpack all components and cross check against bill of materials. Report any shortages to First Team customer service at 1-888-884-6677.

1. Locate and dig a 12" minimum diameter x 36" deep hole.
2. Fill hole with wet premixed concrete, insert vertical pole leaving exactly 108" above desired playing surface. Vibrate to settle concrete.
3. Check post again, it is important that the top of post be exactly 108" above playing surface. Make sure post is straight and plumb. Brace while drying if necessary. Allow 24 hours minimum drying time before continuing assembly. Place 4" square post cap on top of pole.
4. Using 4"x ½" U-Bolts, lockwashers and nuts attach the extension arm support to the vertical pole either at desired rim height or at ground level. If you choose to use the unit at the 10' playing level, the bottom of extension arm support D will be located approximately 96" up from playing surface.
5. Loosely attach the lower two extension arms to the extension arm support using a ½"x 10" hex bolt, ½" locknut and (2) ½" nylon flatwashers. (Flatwashers fit between extension arm support and extension arms to prevent paint rubbing) Then, attach the upper two extension arm to the extension arm support as described above, while doing so make sure to also attach the Insta-Just bracket using the same ½"x 10" hex bolt as shown on Figure A. Figure C indicates which end to attach to Pivot Point H. The Insta-Just bracket should be installed with the open side facing down.
6. Attach the I-Frame Backboard support to the lower set of arms (I-Frame should be "FACE FORWARD") using a ½"x 10" hex bolt, locknut and nylon flatwashers. ATTENTION: Make sure to also bolt Insta-Just bracket to Pivot Point G at this time. It fits on the ½" hex bolt located at pivot point G (see figure A) and straddles the 1" square tubing support at the bottom of the I-Frame. Note: Insta-Just bracket should be installed with the open side pointing down. Next, attach the upper set of extension arms to the I-Frame backboard support as described above.
NOTE: DETERMINE IF YOU HAVE A TEMPERED GLASS BACKBOARD OR CLEAR ACRYLIC BACKBOARD!!! If you purchased a TEMPERED GLASS backboard (FT216 or FT221) your backboard should have been provided with (4) rim grommets located in the rim holes in the glass. If the grommets are not in the holes look in the box, if you cannot locate them DO NOT PROCEED WITH INSTALLATION, call First Team immediately, 1-888-884-6677. If you have a clear ACRYLIC backboard (FT210, FT215 or FT220) your backboard is provided with (2) rubber gaskets instead of grommets mentioned above.
7. Remove and discard the plastic shipping block currently located at the backboard joint. Hang the backboard on the I-Frame as shown in Figure B. Then, using the 5/16" hardware provided with the backboard frame, bolt the Backboard I-Frame support to the center four holes located at the top of your backboard as shown in Figure B. DO NOT TIGHTEN 5/16" HARDWARE AT THIS TIME. Leave the nuts loose, they will be tightened at the end of the installation.
8. Next, loosely attach the bottom of the I-Frame to the aluminum frame in the backboard as shown in Figure B using the 5/16" hardware provided in your hardware pack.
9. Attach desired rim with the hardware provided in the rim box. IF YOU HAVE AN ACRYLIC BACKBOARD place one rubber gasket (included with the backboard) between the face of the backboard and the backplate of the rim, the other should be placed between the Backboard I-Frame support and the backside of the backboard. Trim gaskets if necessary. IF YOU HAVE A TEMPERED GLASS BACKBOARD, make sure all four rim grommets are inserted into the four

holes in the glass, these grommets will prevent the glass from being crushed when you tighten the rim bolts.

10. Tighten the 5/16" hardware holding the I-Frame Backboard Support to the Aluminum Backboard frame discussed above in step 7 & 8. (see Figure B) It is best to tighten the four 5/16" bolts at the bottom of the backboard before doing the top.
11. Tighten all bolts. Make sure rim is level to board, etc. If you are working at ground level do not tighten the 4" U-Bolts yet.
12. If the assembly is at ground level: slide entire unit to desire height and tighten U-Bolts making sure entire project is level and square. IMPORTANT! Overtightening U-Bolts can cause damage to the extension arm support, just tighten U-Bolts until they are snug.
13. With the unit adjusted all the way up, attach one lift spring from pivot point G to pivot point H. If you purchased a Champ III, Champ Select, Champ Turbo, Champ Nitro package you should have received 2 lift springs, attach one on either side of the Insta-Just bracket.

Helpful Tip: You may find it helpful to loop a rope over pivot point H and attach it to one end of the spring. Then with the spring already attached to pivot point G pull down on the rope, extending the spring until it hooks itself over pivot point H.

Figure B


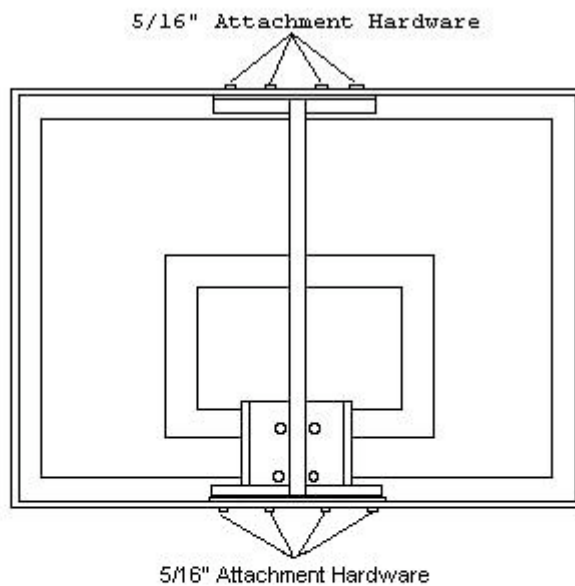


Figure C

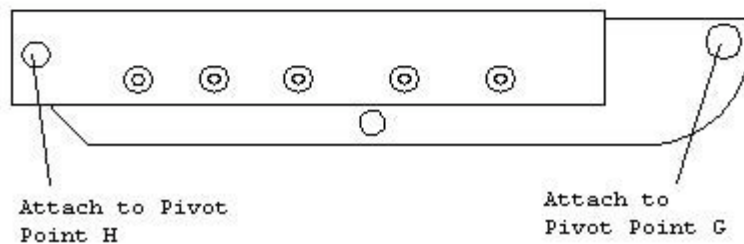

ADJUSTING THE RIM HEIGHT

Your Champ series adjustable basketball system is adjustable from regulation 10' down to as low as 7 1/2' in 6 inch increments.

To adjust the rim height, simply place a broomstick into the adjustment mechanism's cup shaped notch located on the backside of the backboard directly behind the rim.

Press firmly upward. You will hear a click and the weight of the backboard will be transferred to the broomstick.

Slowly and carefully, lower the stick allowing the backboard and rim to fully descend to its lowest point (7 1/2')

Remove pole.

TO RAISE UNIT TO VARIOUS RIM HEIGHTS

Place a broomstick under the bottom of backboard (NOT INTO THE ADJUSTMENT MECHANISM). Press firmly upward causing the backboard to raise.

You will hear a click each time the rim moves up 6". Stop lifting once you achieve the appropriate rim height.

Remove pole.

**FIRST TEAM SPORTS, INC.
902 COREY ROAD
HUTCHINSON, KS 67501
TOLL FREE: 888-884-6677**

FIRST TEAM SPORTS INC.
HUTCHINSON, KS 67501

1-800-649-3688

www.firstteaminc.com

CHAMP BP BASKETBALL GOAL BOLT DOWN POST PRODUCT SUBMITTAL

BACKBOARD SIZE 36"x48", 36"x54" OR 36"x60"
AVAILABLE IN CLEAR
ACRYLIC OR TEMPERED GLASS

FLEX GOALS

4" SQ 1/8"
SINGLE
PIECE POST

108.00

95.00

18.00
POST TO BACKBOARD

24.00

90.00

OPTIONAL FT76
POLE PAD

120.00

PLAYING SURFACE

36.00 DEEP HOLE

4 J BOLTS (5/8"x 12")

4 REBARS

20.00 DIA HOLE

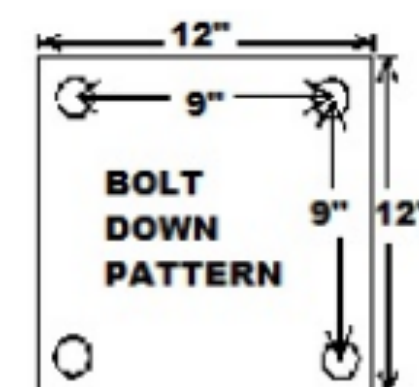


Plate is
12"x12".

Anchor
Bolts are
9"x9" on
centers.

FIRST TEAM SPORTS INC.
HUTCHINSON, KS 67501

1-800-649-3688
www.firstteaminc.com

CHAMP BASKETBALL GOAL PRODUCT SUBMITTAL

