



CATAPULT™



Thank you for choosing SKLZ Catapult. We are dedicated to providing you with the best tools and instruction possible to help you unleash your athletic potential. If there is anything else we can do to help you optimize your training, don't hesitate to send us an email (customerservice@sklz.com) or give us a call (1-877-225-7275).

SKLZ Catapult can be used indoors or outdoors. When using the Catapult outdoors, avoid getting dirt, debris or moisture into the Motor. When possible, brush any moisture or debris from balls before returning to the Feeder.

BEFORE YOU BEGIN:

- » Make sure you have all of the Catapult components. Please contact SKLZ customer service toll free at 877-225-7275 x128 if you are missing anything.
- » Read all setup and usage instructions carefully.
- » Adult assembly recommended.
- » Not suitable for children under 3 years of age.

⚠WARNING:

- » Do not put hands or fingers inside the Catapult with the power cord plugged in or batteries in the unit.
- » Make sure all persons and pets are clear of the Catapult and the path of the ball before powering on.
- » Make sure Catapult is aimed and functioning properly before allowing a batter to step towards the Catapult and hit balls.
- » The Catapult is designed to use regulation 5-ounce weight and 9-inch circumference baseballs and 9-inch circumference plastic practice balls
- » Always operate under adult supervision.
- » Anyone hitting balls must wear a NOCSAE (National Operating Committee on Standards for Athletic Equipment) Approved batting helmet.


⚠CAUTION:

- » Do not power Catapult on without balls in the ball catapult. This can damage the Catapult throw arm.
- » Only operate the Catapult on level surfaces.
- » Adjust the rear stability bar to ensure Catapult is level.
- » Do not position the Catapult directly in front of batter and do not hit balls towards the Catapult. If the Catapult is struck by a ball, permanent damage may occur.
- » Do not allow dirt or moisture to get into the Catapult. Store indoors when not in use.



CATAPULT IS PERFECT FOR: BASEBALL + SOFTBALL

CATAPULT PARTS:


A – CATAPULT BASE WITH MOTOR

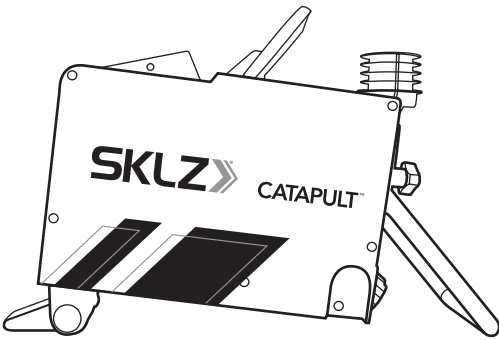




B – SPIRAL BALL FEEDER TOP

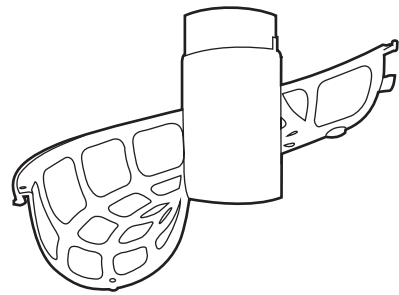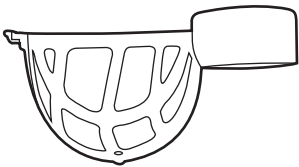

C – SPIRAL BALL FEEDER MID-SECTION
D – SPIRAL BALL FEEDER BOTTOM
(Parts C & D are identical)

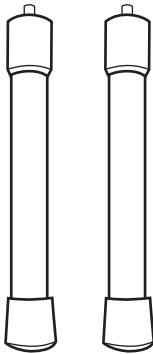

E – LEGS (2)

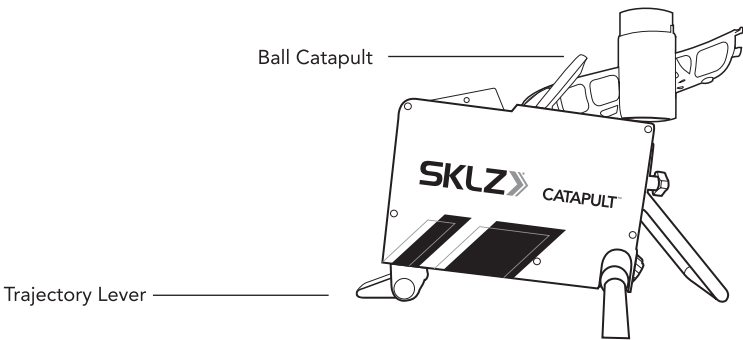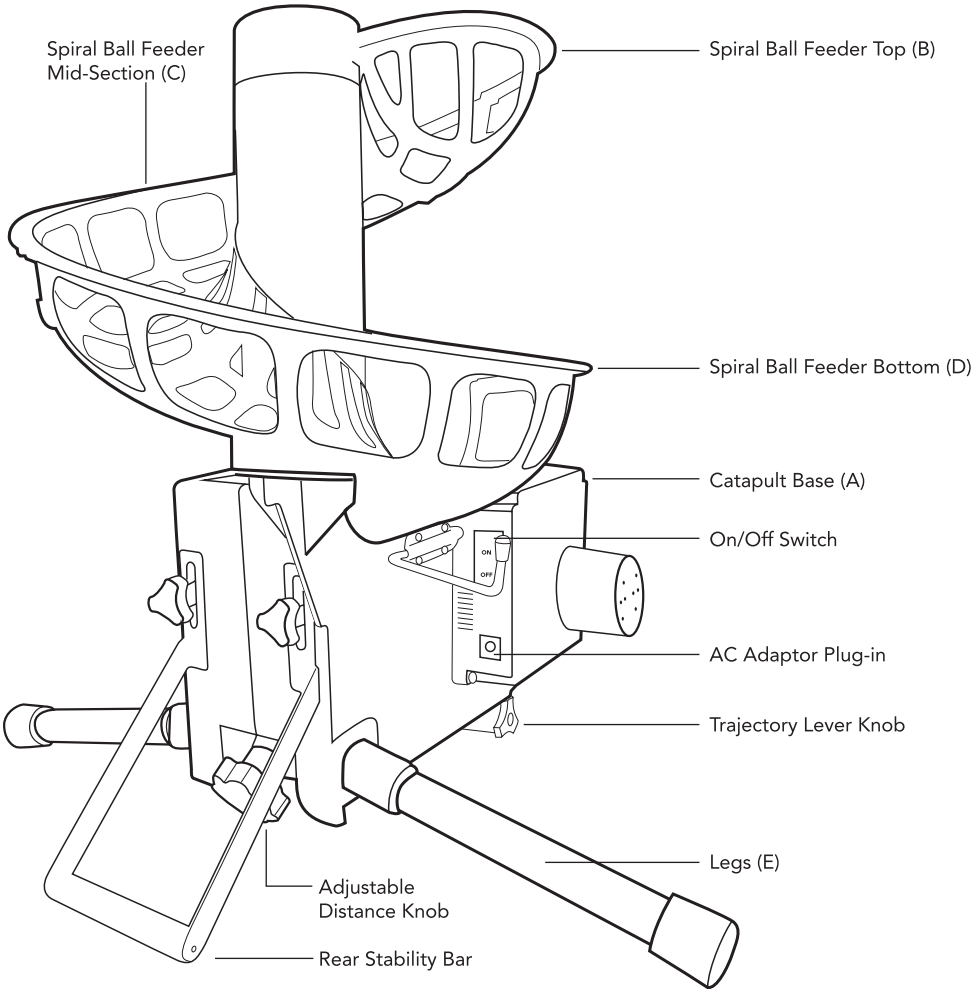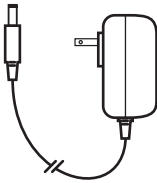


CATAPULT ASSEMBLY:

STEP 1-ATTACH LEGS TO CATAPULT BASE
Attach one Leg (E) to each side of the Catapult Base (A) by screwing into place.

STEP 2-ASSEMBLE SPIRAL BALL FEEDER
Attach Spiral Ball Feeder Top (B) to Mid-Section (C) by aligning notches. Lock into place by connecting push-thru tab on end of Spiral Ball Feeder. Attach Spiral Ball Feeder Bottom (D) in the same manner.

STEP 3-ATTACH FEEDER TO CATAPULT BASE
Lower center of Spiral Ball Feeder on to cylindrical fitting at top of Catapult Base (A). Align end of feeder with u-shaped opening on Catapult Base (A). Secure by connecting push-thru tab on side of Catapult Base and end of Spiral Ball Feeder.

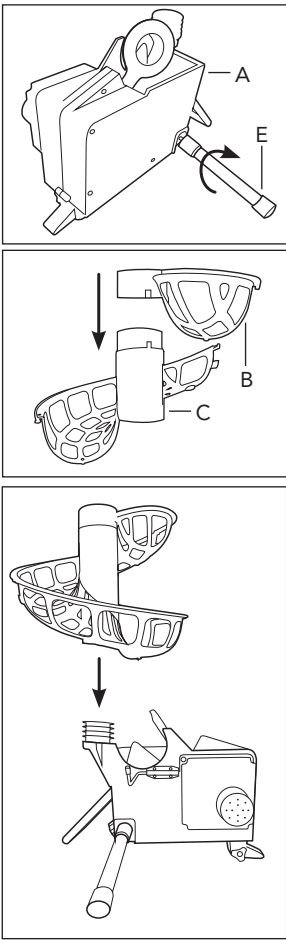

CATAPULT USAGE:

ADD BALLS TO MACHINE
Prior to starting the machine, add up to 8 balls to the Spiral Ball Feeder.

ADJUST BALL FLIGHT ANGLE
WARNING: Before adjusting the ball flight angle, turn OFF the Catapult.


Loosen the trajectory lever knob at the front of the machine. Adjust leg up or down to change the ball flight angle. Tighten trajectory lever knob to secure into place. Stabilize Catapult by adjusting the rear stability bar. Unscrew knobs on both sides of the bar and adjust height so that the bar rests on the ground. Secure into place by tightening each knob.

ADJUST BALL THROWING DISTANCE
WARNING: Before adjusting the ball throwing distance, turn OFF the Catapult.

NOTE: Do not unscrew the adjustment knob all of the way. Doing so will disconnect an internal spring that cannot be reconnected.

Using the adjustable distance knob, tighten to increase ball throwing distance, loosen slowly to decrease ball throwing distance.

POWER UP MACHINE
The Catapult runs on 4 D Batteries (not included) or with the provided AC Adapter. If using the AC Adapter, connect to the side of Catapult Base below the power switch. If using batteries, flip the Catapult over. Press down on the black tab and slide the battery cover off. Install batteries as shown. Turn product ON to power up and OFF to power down. Ensure all persons and pets are clear of the Catapult and the path of the ball before powering on.

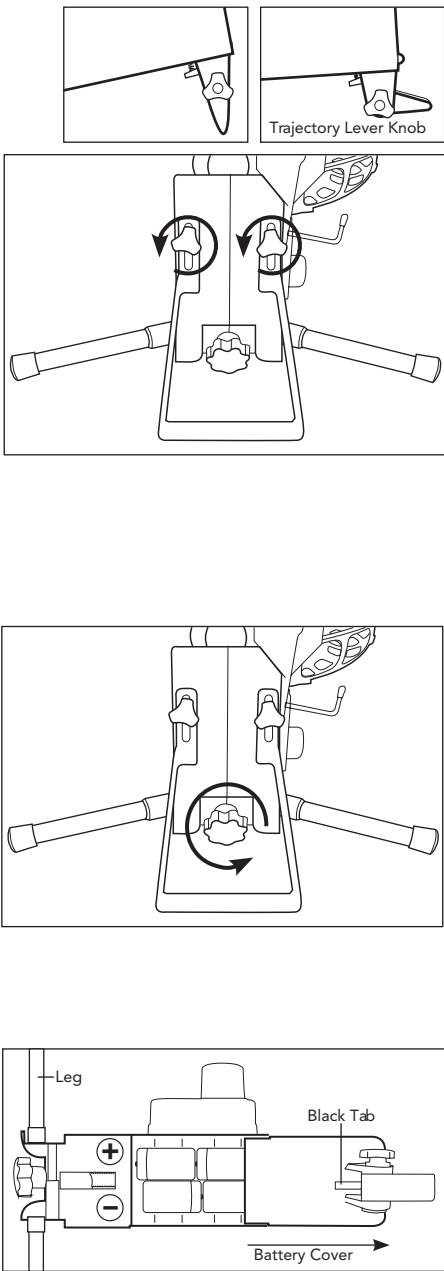


CATAPULT DRILLS:

The Catapult helps you sharpen both your offensive and defensive skills.

SOFT TOSS
Use regulation baseballs for hitting training during practice or pregame warm-up. The Catapult can be used in multiple positions for a variety of drills to improve swing mechanics and timing. Drills can be performed by right or left handed batters.


RECOMMENDED CATAPULT POSITIONING

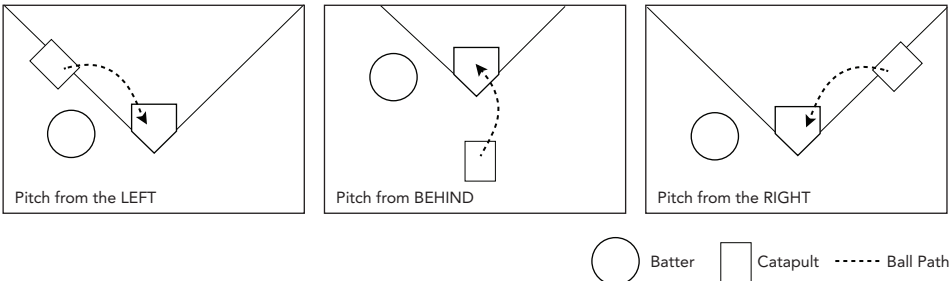

POP FLIES
Use 9-inch plastic balls for pop fly practice. Set the throwing distance and ball flight angle to desired position and begin practice.

DOUBLE PLAYS
Use regulation baseballs to practice footwork and glove-hand ball transfer. Position the Catapult to simulate the preferred double play feed angle (for example, position the Catapult between first and second base to simulate a feed from the second baseman). Set the throwing distance and ball flight angle to desired position and begin practice.

PERFECT FOR PRACTICE WITH: QUICKSTER® REP NET

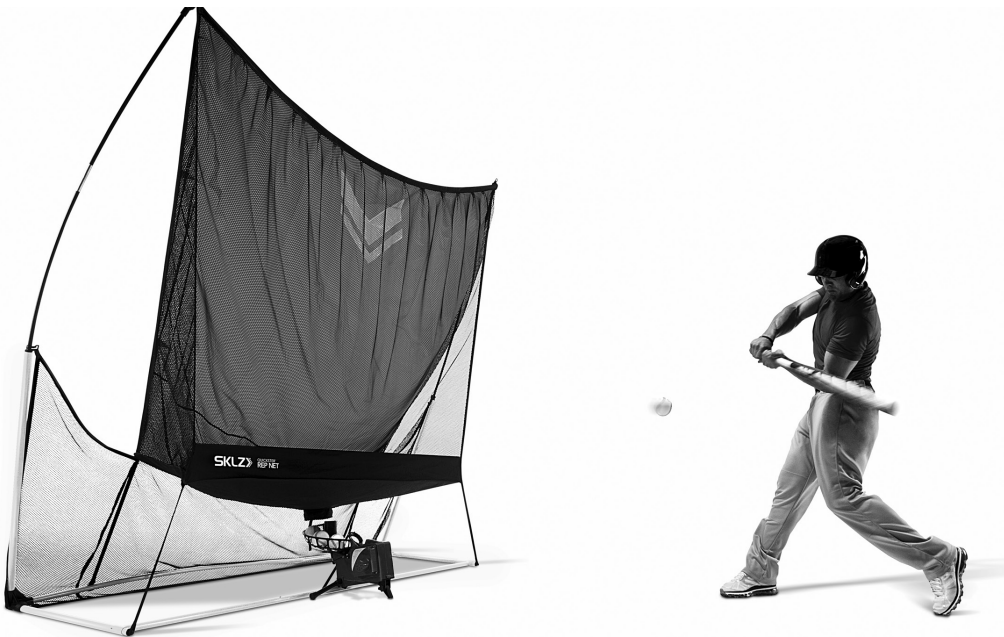

- » 7' x 7' multi-sport collection net
- » Funnels balls for easy collection into SKLZ Catapult Soft Toss Machine
- » Durable net and back screen for hard hits
- » Portable and easy to set up/break down

IDEA SUBMISSION
If you have an idea for a new and innovative sports training product, visit SKLZ.com to submit your concept. Some restrictions may apply.

U.S. Patent Pending

LIMITED WARRANTY

REGISTER YOUR PRODUCT AT SKLZ.COM TO ENSURE WARRANTY COVERAGE, GET NEW PRODUCT INFORMATION AND SPECIAL DEALS FROM SKLZ

Pro Performance Sports (PPS) / SKLZ warrants to the original consumer purchaser of any PPS/SKLZ product it manufactures that the product will be free of defects in materials or workmanship for 90 days (unless specified in alternate warranties) from the date of purchase. If defective and purchased from a retail store, return the product along with receipt to the retail store where the product was purchased. If the item was purchased from PPS/SKLZ, return the product along with the packing slip (proof of purchase) postage prepaid to the address below for replacement consideration. Label: Attn: Returns

This warranty does not cover damages resulting from accident, misuse, abuse or lost merchandise. Only valid in the USA. All returns sent to PPS/SKLZ require a Return Merchandise Authorization number (RMA). For returns to PPS/SKLZ and for all other Customer Service inquiries, please email customerservice@sklz.com or call toll free, 1-877-225-7275 for a return authorization number for any exchange.

Made in China. ©2013 Pro Performance Sports, LLC. All rights reserved. Manufactured and distributed by SKLZ/Pro Performance Sports: 2081 Faraday Avenue, Carlsbad, CA 92008 U.S.A. SKLZ, SKLZ Pro Grade, SKLZ Chrome and Sport-Brella are registered trademarks of Pro Performance Sports, LLC., its subsidiaries and affiliates. Product features, appearance, and specifications may be subject to change without notice. Unauthorized duplication is a violation of applicable local and international laws.



Training Videos & Articles: SKLZ.com
facebook.com/SKLZbaseball
twitter.com/SKLZ

SKLZ.COM