



www.gillathletics.com
800-637-3090

E49872 - ELECTRONIC TWO DIGIT DISPLAY INSTRUCTIONS

Uses:

- Lap Counter Display
- PV Standard Settings Display
- Wind Speed Display

Contents:

- Two Digit Display
- Power cord for plugging the unit into a standard 120V outlet
- Tripod
- Rain Cover
- Foam Lined Carry Case

Operation:

The Electronic Two Digit Display is controlled using the on-board keypad.

There are two modes of operation: LAPS and DISPLAY.

To change modes, just press the corresponding button on the keypad.

CLEAR will reset the display, but it will stay in the same mode.

LAPS Mode:

Press numbers to change the display.

Press the "+" or "-" buttons increase or decrease the current value by one.

The "." button has no affect.

DISPLAY Mode:

Press numbers to change the display.

Press the "+" or "-" buttons to toggle the "+" and "-" symbols on and off.

Press the "." button to toggle the "." on and off.

The brightness button toggles the LEDs through three brightness levels.

Care Instructions:

- Keep the Electronic Two Digit Display dry.
- Fully charge the battery before putting it into storage.
- It is recommended to recharge the battery approximately every 4 weeks, or to keep the unit plugged in while in storage.



THIS WARNING IS GIVEN IN COMPLIANCE
WITH CALIFORNIA'S PROPOSITION 65:

WARNING

This product contains chemicals known to the
State of California to cause cancer, birth defects
or other reproductive harm.