


Scoreboard Operator's Instructions

MPCW-7 Control

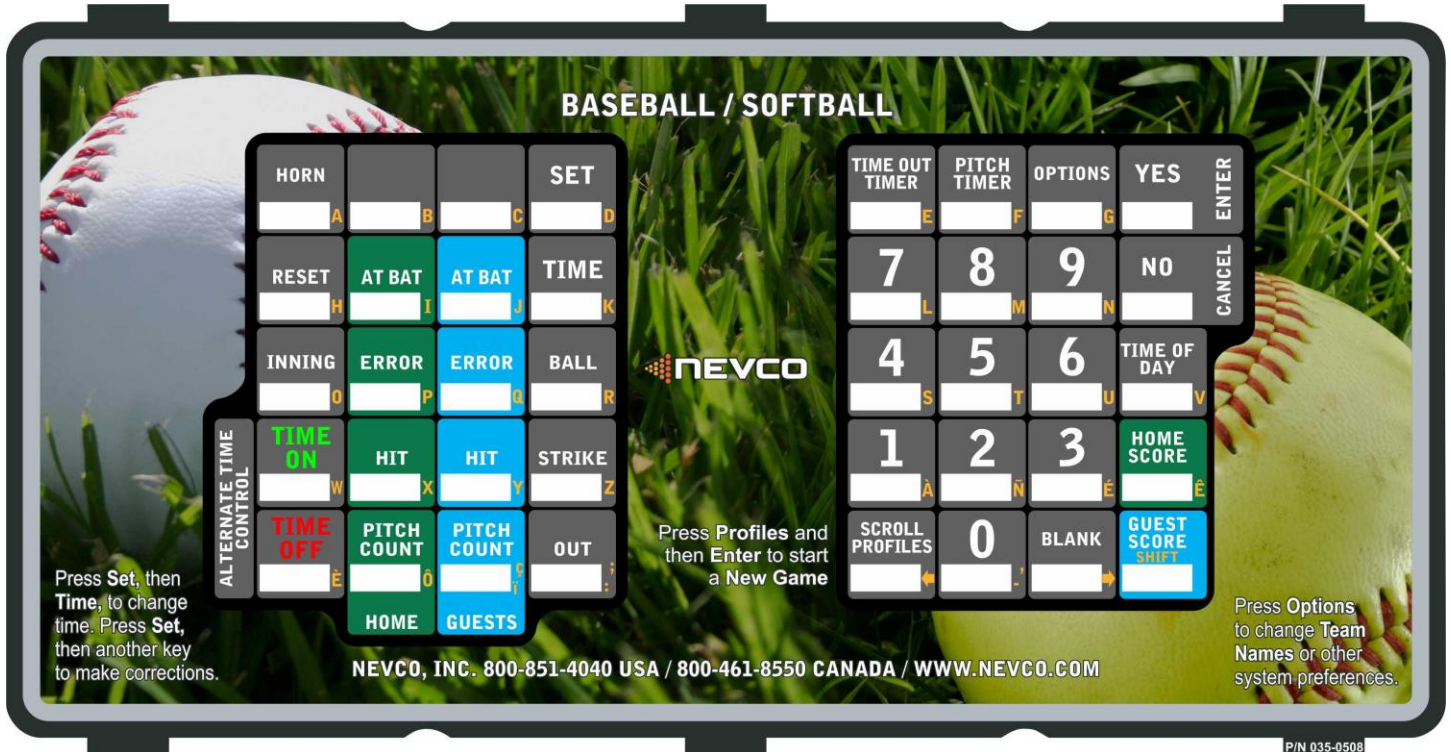

Some features on the keyboard overlay may not be included on the particular model being operated.



Since 1934

These Instructions are for the Following Models:

LED Scoreboards	Incandescent Scoreboards
1500, 1510, 1530, 1535, 1550, PCD	1000, 1010, 1030, 1035
1503, 1506, 1508, 1540, PCD	1000, 1003, 1006, 1010, 1030, 1035
1515, 1520, 1525, PCD	1415, 1025, 9405, 1020
1600,1610,1612-PC,1617-PC,1630,1635,1650,1655,1615,1620,1625,1632,3600,3602,3604,3614,3615,3616,3617,3618,3619,3620,3621,3625,3634,3650,3655, 3658, 3656,3680,3682, 3685, 3688,7604,7605,7614,7615,7616,7620,7624,7625,7630,7631,7632,7680,7685,8601,8602, 88xx, 9605, 9620, 9715, PCD	
1603(-PC),1604(-PC),1606(-PC),1608,1609,1640, PCD	
7504,7524	7404,7424
7505,7516, 7520,7525,7530	7005,7405,7415,7416,7425,7430
3500,3504,3514,3515,3516,3534,3550	3400, 3416, 3002, 3402, 3425, 3016, 3404, 3434, 3025, 3414, 3455, 3030, 3415, 9405

BASEBALL

Thank You

Thank You for choosing NEVCO. We appreciate your business.

The following instructions will help you become familiar with the operation and features of the scoreboard system.
Please take a few minutes to study this manual, and to practice with the control.

If you ever have any questions or comments, please call or email us.

NEVCO, Inc. 301 East Harris Avenue Greenville, IL 62246-2151 USA
USA TOLL-FREE 800-851-4040 CANADA TOLL-FREE 800-461-8550 International Telephone: +1-618-664-0360
Website: www.nevco.com Email: info@nevco.com

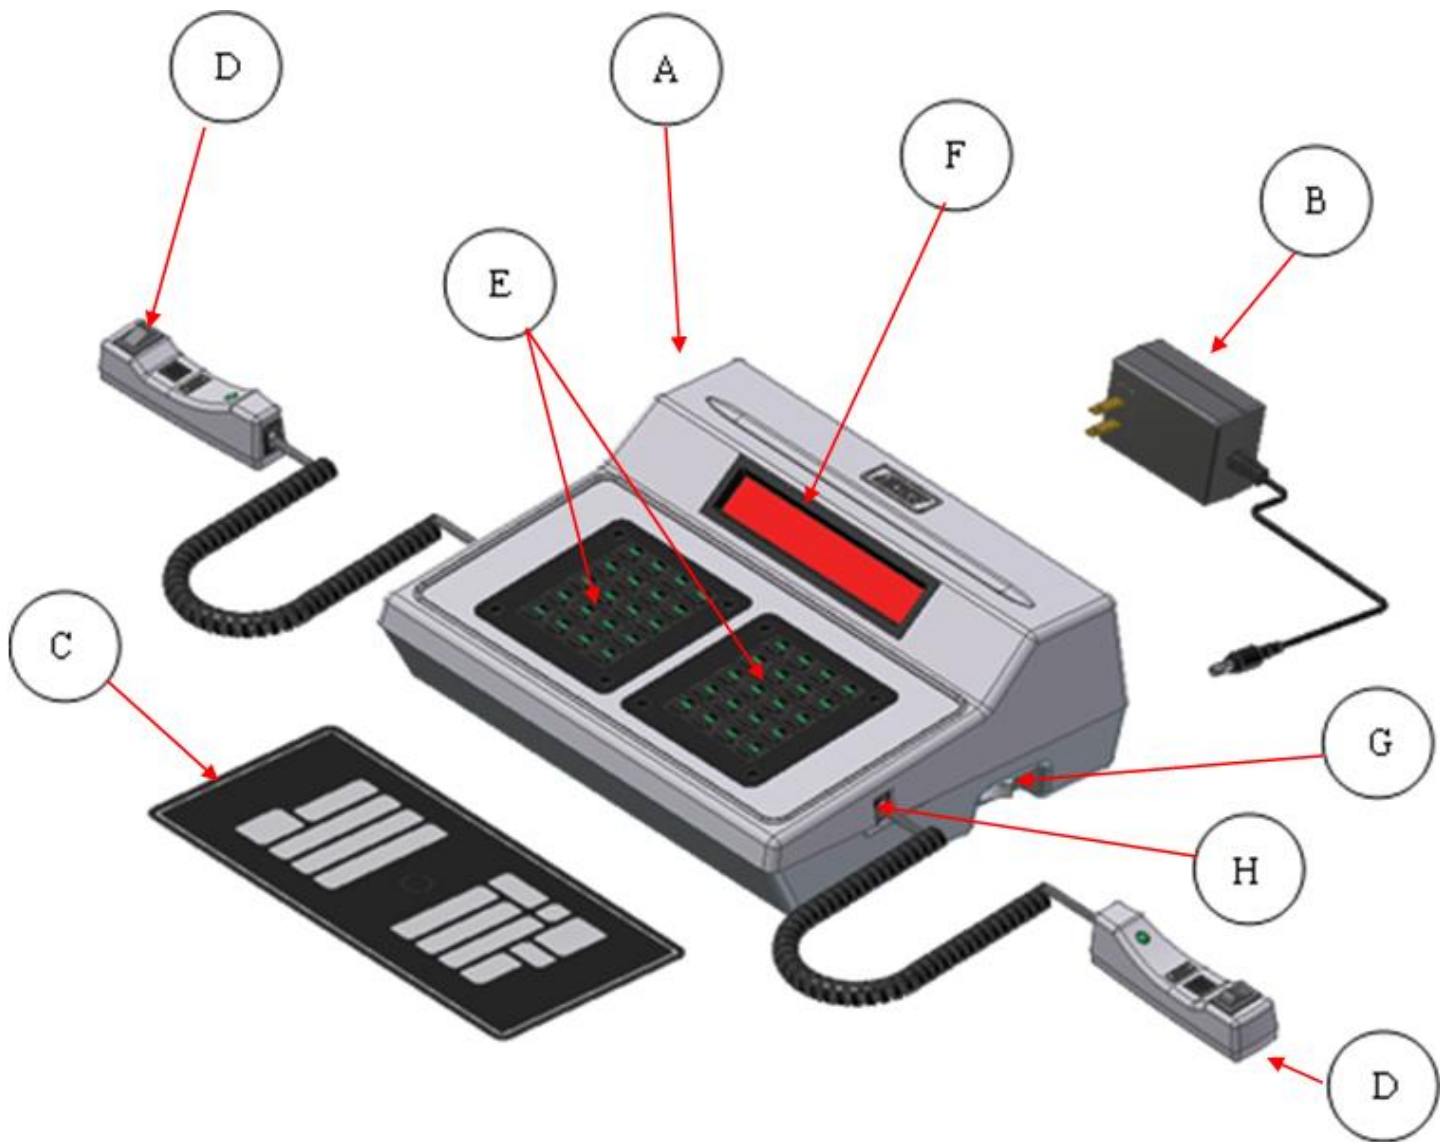


Figure 1 – MPCW Control (front view)

A.	MPCW Control	Can operate scoreboards for a wide range of sports and features.
B.	Power Supply	9 V DC (included with the control)
C.	Overlay	Fits on top of control to label the keys (included with system)
D.	Hand Held Switch	A TCS-7 time control switch is included with each control. Other switches are included with the accessories they operate.
E.	Keypads	Left and Right (20 keys each)
F.	16 character display	Bright LED for better visibility
G.	Power On / Off switch	Removes power from the control only (does NOT turn power off to scoreboard)
H.	Jack for hand held switch	One on each side of control (use either jack for any Hand Held switch)

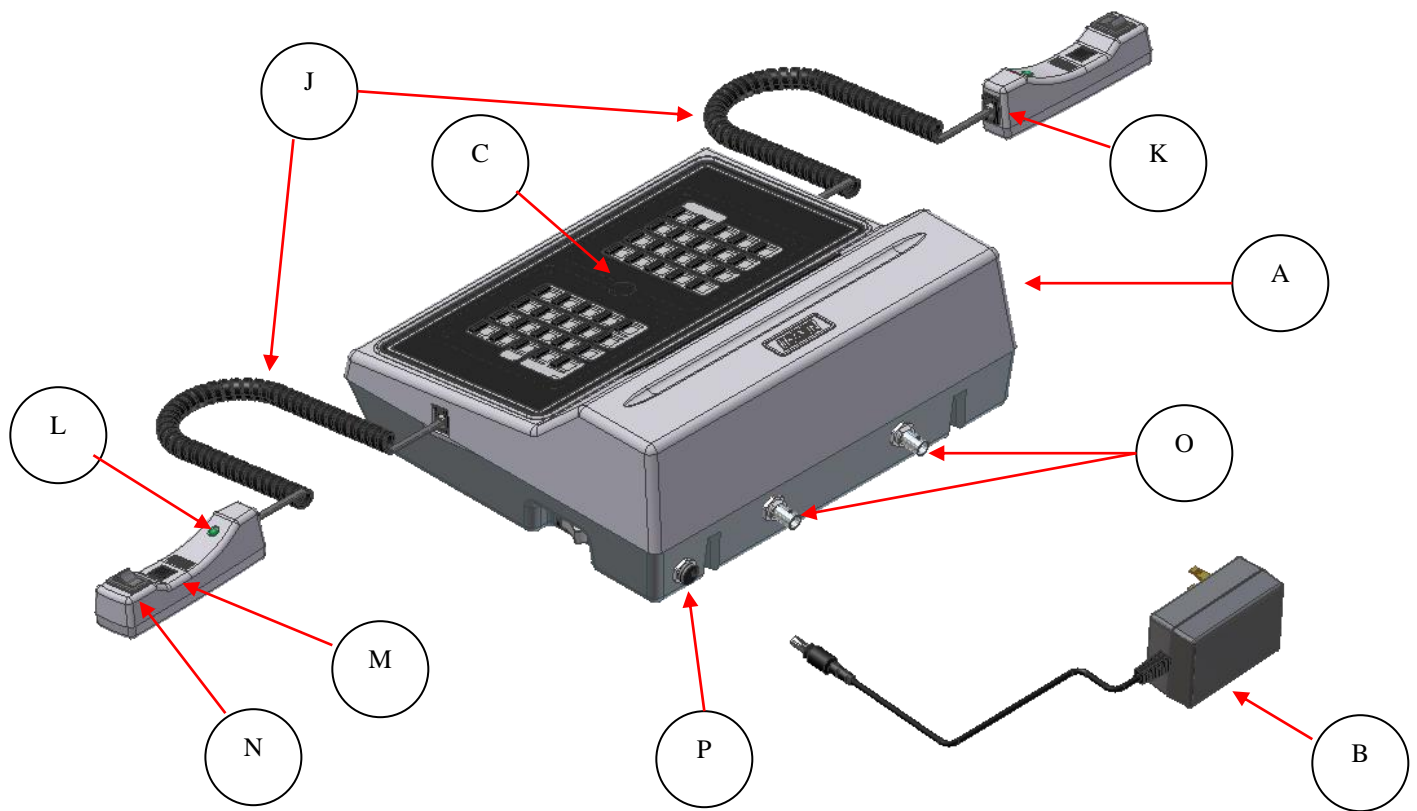


Figure 2 – MPCW Control (rear view)

A.	MPCW Control	Universal – to change sports, change the Overlay and enter the new Model Code.
B.	Power Supply	9 V DC (included with control)
C.	Overlay	For the sports used with the scoreboard
J.	Coiled Cord	Stretches to over 4 ft. (included with switch)
K.	Socket for coiled cord	Makes it easy to replace the cord
L.	LED test indicator	Verifies that the Hand Held switch is working
M.	Remote push button switch	Function depends on type of Hand Held switch (on TCS-7 – sounds the horn)
N.	Remote rocker switch	Function depends on type of Hand Held switch (on TCS-7 – controls the time)
O.	Output to scoreboard	BNC connector for coax cable (use either or both as needed)
P.	Jack for power input	9 V DC

TABLE OF CONTENTS

SETUP	1
<i>NEW SPORT</i>	1
<i>SCOREBOARD MODEL</i>	1
<i>WIRELESS</i>	2
<i>CREATING A PROFILE</i>	3
START UP	4
<i>NEW GAME</i>	4
QUICK START GUIDE	5
KEYBOARD FUNCTION	6
TIME FUNCTION	7
<i>STANDARD TIME FUNCTIONS</i>	7
INNING Key	7
TIME OF DAY Key	7
<i>INNING</i>	7
To Set the Inning	7
<i>TIME OF DAY</i>	7
To Set Time of Day	7
IN-GAME STATS	8
<i>SCORE</i>	9
Adding to Score	9
Setting Score	9
<i>SCORE (INNING BY INNING SCOREBOARD)</i>	10
Adding to Score	10
Setting Score	10
<i>AT BAT</i>	11
Setting At Bat	11
<i>ERROR</i>	11
Adding to Error	12
Setting Error	12
<i>HIT</i>	12
Adding to Hit	12
Setting Hit	13
<i>PITCH COUNT</i>	13
Adding to Pitch Count	13
Setting Pitch Count	13
Setting Ball	14
<i>STRIKE</i>	14
Setting Strike	14
<i>OUT</i>	15
Setting Out	15
BASEBALL OPTIONS	16
<i>AUTOMATION</i>	16
<i>SCOREBOARD MODEL</i>	18
MPCW-7 Model and Scoreboard Correlation for Baseball	18
Selecting a Scoreboard Model	18
OPTIONS	19
<i>OPTIONS MENU NAVIGATION</i>	19
OPTIONS key	19
YES key	19

NO/CANCEL key	19
<i>BRIGHTNESS</i>	20
<i>TEAM NAMES</i>	20
Electronic Team Name keypad	20
<i>Backspace</i>	21
<i>Space</i>	21
<i>Shift Key</i>	21
Changing Team Names	21
<i>MAIN TIME</i>	22
Changing the Direction of Main Time	22
Turning Auto Horn On or Off	22
Changing Main Time Style	22
Disabling and Enabling 0.1 Seconds Time Shift	22
<i>AUX TIME</i>	23
Setting Aux Time	23
Changing Direction of Aux Time	24
Setting Time Switch Operation	24
Setting Aux Stop Time	24
Changing Aux Time Style	24
<i>SEGMENT TIMER</i>	25
Segment Timer Projects	25
<i>Saving a Segment Timer Project</i>	25
<i>Interval Horn</i>	25
<i>Practice Timer</i>	26
Main Menu	26
Enable or Disable	27
Display on Scoreboard	27
Edit Segment	27
<i>TIME OUT TIMER</i>	29
Display Time Out Timer on Scoreboard	29
Edit Time Outs Menu	29
<i>SWAP HOME AND GUEST</i>	30
<i>AUXILIARY DISPLAY</i>	30
<i>HORN SETTINGS</i>	31
Horn Volume.....	31
EOP Horn Tone	31
Horn Key Tone.....	32
Aux Horn Tone.....	32
Time out Timer Tone	32
Segment Timer Horn Tone.....	32
<i>WIRELESS</i>	32
Add Receiver.....	33
Link Receiver	33
Delete Receiver	34
<i>TIME OF DAY</i>	34
Stick TOD	34
24 Hour Time	34
<i>PROFILES</i>	35
Load Profile.....	35
Save Profile	36
Default Lock.....	36
Backup / Restore	36

SETUP

Upon first power up of the MPCW-7 control the control is configured to operate with an x6xx scoreboard as a baseball control.

New Sport

Scroll Profiles changes the MPCW-7's input and output to operate a new sport. Profiles settings are set with the last profile loaded or saved in that sport. To change sports:

Place the desired sport overlay on the control.



Press  the MPCW-7 will display.


##-SPORT

Enter the sport name using the keyboard or continue to press

Scroll Profiles until the desired sport is displayed.

Refer to the top of the overlay for what to enter into the control.

- The letters are on the right side of the keys.
- All sports are entered in all capital letters
- Once the control can distinguish the sport entered it will auto complete the rest
- If the wrong sport is entered press NO/CANCEL and begin again

 Press YES once the desired sport is displayed, the control will then change to the sport.

Scoreboard Model


The scoreboard model setting must be set to match the scoreboard being operated.

It is highly recommended to create a profile to save this setting if the MPCW-7 is going to be used to control multiple board models.

Scoreboard model will be fully covered in the Sport OPTIONS portion of this manual


NOTE: The scoreboard model should be set before connecting to a Scoreboard.

To change the scoreboard model:

1. Press  until the MPCW-7 displays

Model >>

2. Press 

3. Press  until the desired scoreboard series is displayed

4. Press 

Wireless

- The MPCW-7 can operate one or more selectable wireless receivers depending on the customer's need.
- The receivers can be linked or unlinked depending on the operational requirements at game time.

It is strongly recommended to save wireless settings in each profile used.


Different wireless settings should be saved to different profiles.

Note: The receiver desired to be linked has to be programmed into the MPCW-7.

To do this follow the instructions in the OPTIONS section of this manual.

Wireless will be further explained in the OPTIONS portion of this manual


To Link or Unlink receivers:

1. Press  until the MPCW-7 displays

Wireless >>

2. Press  MPCW-7 will display

 
Link Receiver

3. Press  MPCW-7 should display the first receiver in the list.

Rec Name 1 *

Press YES again to link or unlink that receiver. The "*" displayed on the control next to the receiver name means the receiver is linked

4. To link another receiver:

Press  to cycle through available receivers







Rec Name 2

Press YES to link that receiver.

Creating a Profile

A profile needs to be created after the scoreboard model and wireless settings are set. It is recommended to save this profile to profile number 1.





To create a profile:

1. Press  until the MPCW-7 displays. Profiles >>
2. Press  MPCW-7 will display. Load Profile
3. Press  until the MPCW-7 displays. Save Profile
4. Press  MPCW-7 will display. Profile (##) : ◀
Enter the profile number and name using the keyboard.
Refer to the top of the overlay for what to enter into the control.
 - The letters are on the right side of the keys.
 - If the wrong profile is entered press NO/CANCEL and begin again
5. Press  MPCW-7 will save profile and will display. 1-MY PROFILE_
6. Press  to verify profile, MPCW-7 will display. 1-MY PROFILE

For more information about profiles refer to the OPTIONS section of this manual.

Note: A default profile for each sport is programmed at the factory for your scoreboard model. If you wish to use a different profile you must turn off the default lock setting before you can load the profile you have created. Each time the control is powered on the default lock is automatically turned on.

To Turn off the Profile Default Lock:

1. Press  until the MPCW-7 displays Profiles >>
2. Press  MPCW-7 will display Load Profile
3. Press  until the MPCW-7 displays Default Lock*
4. Press  to turn the default lock off Default Lock

START UP

New Game

Scroll Profiles changes the MPCW-7's input and output to operate a new game or sport. Profiles settings are set with the last profile loaded or saved in that sport. To start a new game or sport:



Press  the MPCW-7 will display.

##-PROFILE NAME


Enter the profile name using the keyboard or continue to press

Scroll Profiles until the desired profile is displayed.

Refer to the top of the overlay for what to enter into the control.

- The letters are on the right side of the keys.
- All sports are entered in all capital letters
- Once the control can distinguish the sport entered it will auto complete the rest
- If the wrong sport is entered press NO/CANCEL and begin again



Press  when the desired profile is displayed, the control will then change to that profile.

For more information about profiles refer to the options menu section of this manual

QUICK START GUIDE

Score



To Add To Hit



Pitch Count



Then press a number key to add to the total value

Ball



To Set Strike



Out



Each time one of these buttons are pressed it will add 1 to the total


Keyboard Function

YES key



Use to accept settings, confirm data input, and to navigate through options menu

NO key

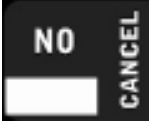

Use to cancel an operation, reset changes in the process of making them, exit a sub-options menu, and to send the MPCW-7 back to the screen that displays the name of the sport being played.

SET key



Use ahead of a function key to directly enter a value, set times, and correct errors. These functions will be further described throughout the manual

HORN key



Press to sound the scoreboard horn. Release the key to stop the horn.

NOTE: The duration of the horn is limited to 4 seconds.

SCROLL PROFILES key



Press to view profiles and sports. Each key press moves to the next profile/sport.

OPTIONS key



Press to enter and move through the options menu. Each press of the OPTIONS key moves to the next option in the options menu

RESET key



Press to reset balls and strikes to zero

Time Function

STANDARD TIME FUNCTIONS

1. Inning – A number to keep track of which inning the game is on
2. Time Of Day – The MPCW-7 will keep track of time of day

Note: For [timed leagues](#), a time limit in addition to the inning number could determine the end of the game. In these cases the timer can be set with a value up to 99:59 or the AUX timer could be used to time durations up to nearly 100 hours. For instructions see pages 21-23.

INNING Key



Press INNING to set the game inning

TIME OF DAY Key





Press TIME OF DAY to verify the time set within the control and display the time on the scoreboard.

INNING

The inning keeps track of where the game is.

To Set the Inning

1. Press  then  the control will then display

Inn: #



2. Press the number corresponding to the Inning

TIME OF DAY

When Time Of Day is set the MPCW-7 will keep track of Time of Day:

- Time Of Day can function with the 12 and 24 hour clock
- A press of TIME OF DAY will display time of day on the scoreboard in the main time place

To Set Time of Day

1. Press  then  the control will then display

TO D: HH:MM ◀

2. Enter the Hours and Minutes.
 - a. After all four digits are filled it automatically accepts the time.
 - b. If less than 4 digits are entered and YES is pressed, then zeros will be placed in the unfilled digits and the time will be accepted.
 - c. If less than 4 digits are entered and there is an error press NO/Cancel.
 - i. The previous value is set
 - ii. The control goes back to the ball/strike/out screen

In-Game Stats

In-Game Stats are entries in the control that can or will display on the scoreboard.

Note: Not all in game stats are available to display on all scoreboards.

Baseball In-Game Stats are HOME and GUESTS:

SCORE	AT BAT	BALL	STRIKE
OUT	ERROR	HIT	PITCH COUNT

Following are descriptions of the In-Game Stats in detail and how to use them.

Depending on the stat's function there is a possibility of entering game time stats three ways: adding, setting, and indicating.

Adding – Adding is the usual function for In-Game Stats after the stat key (Score, Ball, Etc) is pressed the following number key pressed is added to the total. To add more, press the stat key again. For direct entry and corrections refer to Setting.

Example	
HOME SCORE is pressed and the screen displays:	<div style="border: 1px solid black; padding: 2px 10px; display: inline-block;">3+ Score 4</div>
6 is pressed the result is:	<div style="border: 1px solid black; padding: 2px 10px; display: inline-block;">9+ Score 4</div>

Setting – Rather than add to the total stat selected one can directly enter it. This is setting. It is typically used to directly set the stat selected or correct a previous add.

Example	
SET then HOME SCORE is pressed and the screen displays:	<div style="border: 1px solid black; padding: 2px 10px; display: inline-block;">13◀ Score 4</div>
1 then 2 are pressed the result is:	<div style="border: 1px solid black; padding: 2px 10px; display: inline-block;">12 Score 4</div>
Or 1 then YES/CONFIRM is pressed. The result is:	<div style="border: 1px solid black; padding: 2px 10px; display: inline-block;">1 Score 4</div>

Indicating – Indicating illuminates indicator lights or designated digits to indicate events within a game. For example: possession, penalties, hits, errors, and time outs left. Not all scoreboard models have this function.

Example	
Press HOME HIT and the home hit indicator displays on a 3504 Scoreboard	
Press HOME HIT again and the home possession indicator goes out	

Note:

1. The # represents numerical values in the following examples
2. The “+” indicates the MPCW-7 is in add mode. The side the “+” is on is what side is being added to.
3. The “◀” or the “▶” indicates the MPCW-7 is in set mode. The side the “◀” or the “▶” is on is what side is being set.
4. The left or right is relative to the side of the board that value is going to be displayed, not home or guests. This setting can be changed using the Swap Home & Guests option.
 - a. Refer to the OPTIONS section of this manual

SCORE

Note: If using an inning by inning scoreboard see the Score Inning by Inning Scoreboard section of the manual to add/set score.



Press **HOME SCORE** to enter the home score ADD mode.

The control will display

##	+	Score	##
----	---	-------	----



Press **GUEST SCORE** to enter the guest score ADD mode.

The control will display

##	Score	+	##
----	-------	---	----

Adding to Score

1. Press  or 

2. The control will display

##	+	Score	##
----	---	-------	----

 or

##	Score	+	##
----	-------	---	----

3. Enter any value 0-9 and it will add that value to the value with the “+”.
a. To add more start from step 1

Note:

1. You cannot subtract from the value. To correct a mistake refer to Setting Score

Setting Score

1. Press  then  or 

2. The control will display

##	◀	Score	##
----	---	-------	----

 or

 
##	Score	▶	##
----	-------	---	----


3. 1st digit: Enter any value 0-9
a. If that single digit value is the desired setting then press YES, if not continue to step 4

4. 2nd digit: Enter any value 0-9

Note:

1. A zero in the 10's spot will automatically be removed and leave a single digit value.
2. Setting the score to blank may have undesired effects on older scoreboard models.



At any time before the 1's digit is placed  can be pressed to restore the previous value and cancel the function.

SCORE (INNING BY INNING SCOREBOARD)

Note: The following directions only work for an inning by inning scoreboard. This scoreboard model must be selected under Model in the Options menu. For more instructions on selecting the model see the Options portion of the manual.



Press **HOME SCORE** to enter the home score ADD mode.

The control will display

I: #	H: #+	Tot: #
------	-------	--------



Press **GUEST SCORE** to enter the guest score ADD mode.

The control will display

I: #	G: #+	Tot: #
------	-------	--------

Adding to Score

1. Press  or 

2. The control will display

I: #	H: #+	Tot: #
------	-------	--------

 or

I: #	G: #+	Tot: #
------	-------	--------

3. Enter any value 0-9 and it will add that value to the value with the “+”. It will automatically add the amount to the total score also.
- To add more start from step 1

Note:

- You cannot subtract from the value. To correct a mistake refer to Setting Score

Setting Score

1. Press  then  or 

2. The control will display

I: #◀	H: Tot: #
-------	-----------

 or

I: #◀	G: Tot: #
-------	-----------


3. Enter the Inning number and press YES

4. The control will display

I: #	H: #◀	Tot: #
------	-------	--------

5. Enter the score for the Inning and press YES. The total score will automatically be updated.



At any time before the 1's digit is placed  can be pressed to restore the previous value and cancel the function.

AT BAT



Press Home **AT BAT** to enter the number of the home player at bat.

The MPCW-7 will display

< At Bat:



Press Guests **AT BAT** to enter the number of the guest player at bat.

The MPCW-7 will display

At Bat: >

Setting At Bat

1. Press then or
2. The control will display

< At Bat: or At Bat: >
3. Enter value

ERROR



Press HOME **ERROR** to enter the home errors ADD mode.

The control will display

+Errors

Note: if Model “x6xx InnByInn” is selected the control will display

FP + Error

This allows entry of fielder position which will be displayed on the scoreboard in the “E” digit
One error will be added to Home total errors



Press GUESTS **ERROR** to enter the guest errors ADD mode.

The control will display



 

+Errors ##

Note: if Model “x6xx InnByInn” is selected the control will display

FP Error +

This allows entry of fielder position which will be displayed on the scoreboard in the “E” digit
One error will be added to Guests total errors




 

Adding to Error

1. Press  or 
2. The control will display  or 
3. Enter any value 0-9 and it will add that value to the value with the “+”.

Note:

1. You cannot subtract from the value. To correct a mistake refer to Setting Error

Setting Error

1. Press  then  or 
2. The control will display  or 
3. Enter any value 0-9

HIT



Press HOME **HIT** to enter home hits ADD mode




 
The control will display



Press GUESTS **HIT** to enter guest hits ADD mode

The control will display




 

Adding to Hit

1. Press  or 
2. The control will display  or 
3. Enter any value 0-9 and it will add that value to the value with the “+”.

Note:

1. You cannot subtract from the value. To correct a mistake refer to Setting Hit


Setting Hit

1. Press  then  or 
2. The control will display  or 
3. Enter value

PITCH COUNT



Press HOME **PITCH COUNT**




 
The control will display 






 
 
Press GUESTS **PITCH COUNT**

The control will display 

Adding to Pitch Count

1. Press  or 
2. The control will display  or 
3. Enter any value 0-9 and it will add that value to the value with the “+”.

Setting Pitch Count

1. Press  then  or 
2. The control will display  or 
3. Enter any value 0-199

BALL



Press **BALL** to enter the Ball SET mode

The control will display

B: S: O:

 
Setting Ball



1. Press

2. The control will display

B: S: O:



3. Press to add 1 ball; each time it is pressed it will add 1



4. To correct or reset the number of balls press and it will reset to zero

STRIKE



Press **STRIKE** to enter the Strike SET mode

The control will display

B: S: O:

 
Setting Strike



1. Press

2. The control will display

B: S: O:



3. Press to add 1 strike; each time it is pressed it will add 1 to total strike



4. To correct or reset the number of strikes press and it will reset to zero

OUT



Press **OUT** to enter the Out SET mode

The control will display

B:	S:	O:
----	----	----



1. Press

2. The control will display

B:	S:	O:
----	----	----



3. Press to add 1 out; each time it is pressed it will add 1 to total outs

Note:

1. You cannot subtract from the value. To correct a mistake refer to Setting Out

Setting Out



1. Press

then



2. The control will display

B:	S:	O:
----	----	----

4. Enter value

Baseball Options

There are three options that are unique to baseball. They are Automation and Pitch Time Reset

AUTOMATION

Automation options are:

Balls & Strikes - Automatically adds to pitch count each time balls and strikes are entered

Outs Reset At - Allows you to choose the number of outs when you want ball, strike and out to reset to zero

Balls & Strike Reset & Add to Outs - Automatically resets balls and strikes on the third strike and adds to outs

OPTIONS

 Press OPTIONS until the MPCW-7 display reads Automation

Automation

YES

 Press YES to enter automation menu

OPTIONS

 Press OPTIONS again to scroll through the automation menu

Balls & Strikes


The first selection in the automation menu is B&S Add to PC (Balls & Strikes Add to Pitch Count)

YES

1. Press  to select Balls & Strikes Add to Pitch Count

B&S Add To PC

YES

2. Press  again to turn this option on or off

B&S Add To PC*

Note: the asterisk means that it is enabled

Outs Reset At


The second selection in the automation menu is Outs Reset At

YES

1. Press  to select Outs Reset At

Outs Reset At:


YES

2. Press  and then enter any number (to disable press  instead of entering a number)


BLANK

Balls & Strikes Reset & Add to Outs

The third selection in the automation menu is B.S.O. Rst/Add

1. Press  to select B.S.O. Rst/Add

B.S.O. Rst/Add *

2. Press  to disable (enabled by default)

PITCH TIME RESET


Allows you to set number of seconds for the left and right pitch timers

Press  to select Pitch Time Reset

Pitch Time Rst>>

Press  to scroll from left to right

R Rst Time: 020

Press  to select and then enter desired seconds (up to 999)

L Rst Time: 090

Press  to view the Pitch Time on the MPCW-7 display

SCOREBOARD MODEL

The Scoreboard Model option is used to set the scoreboard model in the MPCW-7 to display properly on the scoreboard purchased. This setting is generally set at the factory if the control and scoreboard are purchased at the same time. Also see profiles for instructions to save this setting permanently in the control.



Press OPTIONS until the MPCW-7 display reads

Model >>



Press YES to enter Scoreboard Model menu

MPCW-7 Model and Scoreboard Correlation for Baseball

Use the following to determine which model to select in the MPCW-7 to use with each Nevco scoreboard.

Scoreboard Model	LED Scoreboards	Incandescent Scoreboards
Standard	1500, 1510, 1530, 1535, 1550, 1600, 1610, 1630, 1635, 1650, PCD	1000, 1010, 1030, 1035
Inn By Inn	1503, 1506, 1508, 1540, 1603(-PC), 1604(-PC), 1606(-PC), 1608, 1609, 1640, PCD	1000, 1003, 1006, 1010, 1030, 1035
With Timer	1515, 1520, 1525, 1615, 1620, 1625, 1655, (9505, 9605, 9715) ,PCD	1415, 1025, 9405, 1020
x6xx Standard	1600,1610,1612-PC,1617-PC,1630,1635,1650,1615,1620, 1625,3600,3602,3604,3614,1615,3616,3617,3618,3619,3620, 3625,3634,3650,3655,3656,1658,3680,3685,3688,7604,7605, 7614,7615,7616,7620,7624,7625,7630,7631,7632,7680,7685, 8601,8602,9605,9715, PCD	
x6xx InnByInn	1603(-PC),1604(-PC),1606(-PC),1608,1609,1640,1600,1610, 1630,1635,1650,1615,1620,1625,3600,3602,3604,3614,3615, 3616,3617,3618,3619,3620,3625,3634,3650,3655,3656,3658, 3680,3685,3688,7604,7605,7614,7615,7616,7620,7624,7625, 7630, 7631, 7632,7680,7685,8601, 8602,9605,9715, PCD	
75xx A	7504,7524,7605,7615,7625,9505 **,9605 **,9715 **	7404,7424
75xx B	7505,7516, 7520,7525,7530,7605,7615,7625, 9505 **, 9605 **,9715 **	7005,7405,7415,7416,74 25,7430
35xx	3500,3504,3514,3515,3516,3534,3550,3600,3602,3604,3614, 3615,3616,3617,3618,3619, 3620,3625,3634,3650,3655,3680,3685,3688,7604,7614,7616, 7620,7624,7630,7631,7632, 9505 **,9605 **,9715 **	3400, 3416, 3002, 3402, 3425, 3016, 3404, 3434, 3025, 3414, 3455, 3030, 3415, 9405

Selecting a Scoreboard Model

From the scoreboard model menu change the scoreboard model:



Press OPTIONS until the desired scoreboard series is displayed

X6xx Series



Press YES to accept/enable

X6xx Series *

Note: the model number should be set before connecting the control to a scoreboard.

OPTIONS

The OPTIONS menu consists of game settings and added features useable during a game or practice.

The OPTIONS are set into 13 possible selections:

- | | | |
|---------------|-----------------------|----------------------|
| 1. Brightness | 6. Segment Timer | 11. Wireless |
| 2. Team Names | 7. Time Out Timer | 12. Scoreboard Model |
| 3. Profiles | 8. Swap Home & Guests | 13. Time of Day |
| 4. Main Time | 9. Aux Display | |
| 5. Aux Time | 10. Horn Settings | |

Each press of the OPTIONS key will toggle through these options. Press a function key or cancel to abort the options mode. It is important to note that unless you save the profile these option settings will revert when the new game key is pressed, so after changing the brightness, programming timeout timers, etc. Go to the Profiles section.

OPTIONS menu Navigation

There are three keys to use to navigate through the OPTIONS menu: OPTIONS, YES, and NO/CANCEL.

OPTIONS key



Use to scroll to the next option in the OPTION menu and sub-options menus.

YES key



 
1. Used to select an option or enter a sub-option menu
2. Used to confirm changes made
3. Used to change a value

NO/CANCEL key

 


1. Used to exit a sub-option.
2. If pressed enough times it will bring one back to the screen that displays the name of the sport being played.
3. Used to Cancel/Reset a change if the change has not been completed or confirmed

 
Navigation Example 1

1. **OPTIONS** is pressed until  displays.
2. **YES** is pressed to enter the Segment Timer menu
3. **NO/CANCEL** is pressed to Exit the segment timer menu

Navigation Example 2

1. Left Team name is entered to 
2. **YES** is pressed to confirm changes made
3. If **NO/CANCEL** is pressed rather than YES it will cancel the name entered and cease modifying Left Team Name

Navigation Example 3

1. **OPTIONS** is pressed until  displays.
2. **YES** is pressed to change the Brightness to High
3. **NO/CANCEL** is pressed to exit the options menu back to the main screen

BRIGHTNESS

Ambient lighting conditions may cause the scoreboard to be too bright or dim. To remedy this go to the brightness options to toggle scoreboard brightness between bright or dim.

Example

Brightness: High

Better suited for daylight conditions to better see the scoreboard
Not well suited for low light conditions

Brightness: Low

Well suited for low light conditions
May be difficult to see during daylight conditions

To Change Brightness:

OPTIONS

YES

Press OPTIONS until the MPCW-7 display reads

Note: “*****” represents High or Low

To toggle between High or Low scoreboard brightness


Brightness: ****

TEAM NAMES

The team names option works with the Electronic Team Names (ETN) package in a Nevco scoreboard system. Using this system can replace the usual vinyl HOME and GUESTS with an LED display used for displaying the team names.

Electronic Team Name keypad

The Team name keypad is marked in the orange color on the MPCW-7 keypad.

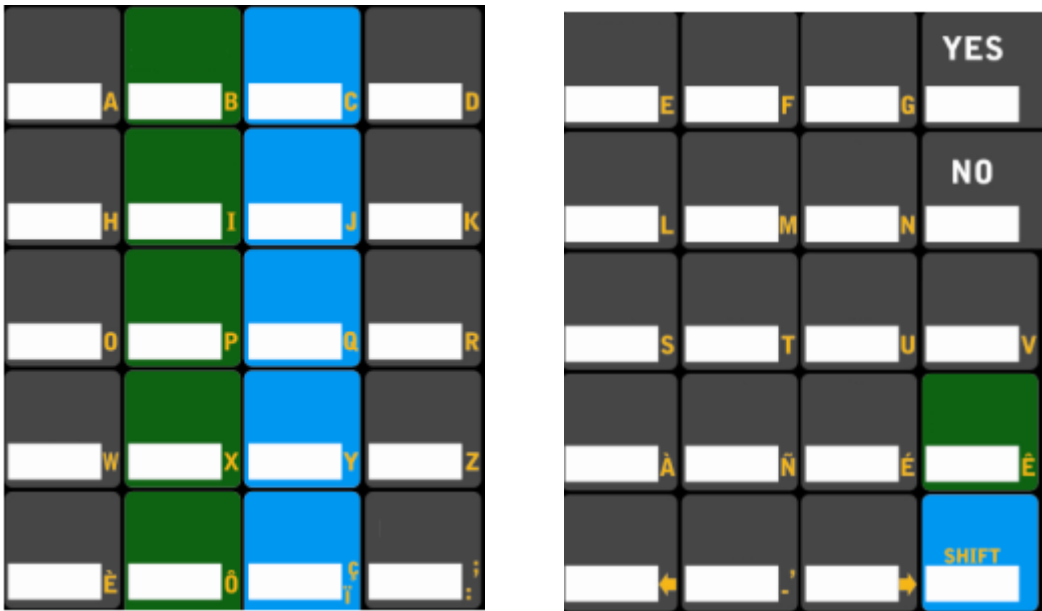


Note: The standard function text and symbols have been removed for example only.

The letter and number keys are self explanatory. There is however a few function keys that are important to know in the Electronic Team Name keypad.


Backspace



The  key is used as a backspace button while entering team names

Space




The  key is used as a space during while entering team names


Shift Key

Default: uppercase letter state



 
1st press “”: Changes to lowercase letters

2nd press “#”: Changes from letter entry to number entry

3rd press “”: Back to uppercase letters

Changing Team Names

First enter the **Team Names Menu**



Press OPTIONS until the displays reads

 
Team Names >>



Press to enter Team Names Menu display reads

Home Team Name


Note:

1. During entry of a team name  be pressed to cancel changes and move to another selection
2. Team names can be up to 12 characters
3. Depending on the display, if the team name is long enough it will shrink both left and right displays to fit one or both

Guests Team name

Guests Team Name is the default entry point to the team names menu




1. Press  to modify guest team name
 - a. This enters the Guests team name editing screen
2. Enter the team name using the letters (upper and lower case), numbers, backspaces, and spaces as required.

Guest Team Name

GUESTS ▲

ABCdef123000 #




3. Press  to confirm the team name entry
 - a. Menu will then go to the Home team name option

Home Team Name

Home Team name

Home Team Name is automatically the option after modifying the right team name.




1. Press  on the left team name screen
 - a. This enters the HOME team name editing screen
2. Enter the team name using the letters (upper and lower case), numbers, backspaces, and spaces as required.



HOME ▲

Comets ▲



3. Press  to confirm the team name entry
 - a. Control will then go back to the option to edit Guests team name
 - b. Press YES if there is a correction required if not;

Guest Team Name

4. Press  to return to the main OPTIONS menu or press  to return to main time screen.

MAIN TIME

Main time options are:

Direction – Main time can count up or down

Auto Horn – The horn sounding when time runs out or when time reaches Stop Time.

Style – Allows you to display main time in hour/minute format or minute/second format.

Disable 0.1 – When main time is under a minute, it will shift to display SS.TT instead of MM:SS. This is the default behavior. When “Disable .1” is selected, then main time will always display as MM:SS. (M for minutes, S for seconds, and T for tenth of seconds.)



Press OPTIONS until the MPCW-7 display reads

Main Time



Press to enter main time menu

Changing the Direction of Main Time



1. From Main Time menu press

Note: The direction arrow could be ▼ ▲

Direction: ▼



2. Press to toggle the direction of time

Direction: ▲

Turning Auto Horn On or Off



1. From Main Time menu press

Note: The “*” designates the Auto Horn is on.

Auto Horn:



2. Press to turn Auto Horn On or Off.

Auto Horn: *

Changing Main Time Style

Within Main Time menu:



1. Press until the MPCW-7 display reads

Style >>



2. Press

MM:SS



3. Press to scroll through the styles

HH:MM



4. Press to enable the time style you want to use

a. An asterisk indicates which style is enabled

Disabling and Enabling 0.1 Seconds Time Shift



1. From Main Time menu press

Note: The “*” designates the Disable .1 is on. (Will not shift time)

Disable .1



2. Press to disable 0.1 seconds shift.

Disable .1 *

AUX TIME

The control has a built in auxiliary timer that can be used for many purposes. It can be configured to count up or down. It can run continuously or only when the main time is running. It can be displayed on the control by pressing the time key twice in succession. It can also be configured to display on an auxiliary time display if one is part of your system. Some uses for the auxiliary timer include timing field/facility usage or it can be used to determining how far into a game a certain event happened.

Aux Time Options are:

1. *Setting Aux Time* – Aux time can be set to count down or up from a certain settable time. To set the time use this option
2. *Direction* – Aux time can count up or down according to the need or desire of the user. Use this option to adjust Aux time to run up or down.
3. *Time switch Operation* – Aux time can be operated with the same time switch used to operate main time.
4. *Setting Aux Stop Time* – Aux stop time is functionally the same as stop time for main time. It is the set time where Aux time will cease counting. **Note:** Aux stop time will not stop time if set to 00:00 and Aux Time is cycling from 99:59.9 to 00:00.0 . It is treated as 100 hours
5. *Style* – Aux time can be entered in hour/minute format or minute/second format.

To get to Aux Time options:



Press OPTIONS until the MPCW-7 display reads

Aux Time >>




Press to enter aux time menu

Setting Aux Time


Within Aux Time menu:



1. Press  until the MPCW-7 display reads Aux time.
 - a. If Aux time has never been set up before or Aux time has counted down to zero the MPCW-7 display will read

Aux: 00:00.0▲


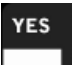


2. Press  to begin editing Aux time
3. Enter the minutes, seconds, and 10th of seconds.
 - a. After all five digits are filled it automatically accepts the time.
 - b. If less than 5 digits are entered and YES is pressed, then zeros will be placed in the unfilled digits and the time will be accepted.
 - c. If NO/CANCEL is pressed before all 5 digits are entered it restores the previous value and completes the editing process

Aux: MM:SS.S◀

Changing Direction of Aux Time

Within Aux Time menu:

1. Press  until the MPCW-7 display reads
2. Press  to change the direction of time
 - a. For time counting up display will read
 - b. For time counting down display will read



Direction: ▲

Direction: ▲

Direction: ▼

Setting Time Switch Operation

Within Aux Time menu:


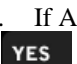
1. Press  until the MPCW-7 display reads
2. Press  to enable or disable time switch operation of Aux Time
 - a. The * represents enabled

Time Switch:

Time Switch: *

Setting Aux Stop Time

Within Aux Time menu:




 
1. Press  until the MPCW-7 display reads Stop Time.
 - a. If Aux Stop Time has never been set before display will read
2. Press  to begin editing Aux Stop time
3. Enter the Minutes and Seconds.
 - a. After all four digits are filled it automatically accepts the stop time.
 - b. If less than 4 digits are entered and YES is pressed then zeros will be placed in the unfilled digits and the time will be accepted.
 - c. If NO/CANCEL is pressed before all 4 digits are entered it restores the previous value and completes the editing process

Stop Time:00:00

Stop Time:MM:SS◀

Changing Aux Time Style

Within Aux Time menu:

1. Press  until the MPCW-7 display reads
2. Press  to begin editing Aux Stop time
3. Press  to scroll through the styles
4. Press  to enable the time style you want to use
 - a. An asterisk indicates which style is enabled

Style >>

MM:SS

HH:MM

SEGMENT TIMER

A **segment timer** is used for pacing organized practices, as an interval horn, and can be used for other practical uses as well. As an example: a segment consists of a practice event (playbook time, running drills, breaks, etc) that is run for a set period of time. Once the time has expired, a new segment is entered and the drill changes. The segment timer will count down from the programmed segment time to zero. The MPCW-7 segment timer function has a maximum of 20 segments.

There are three settings to be set in each segment: time, auto horn, and auto advance. **Auto horn** sounds the horn at the end of a time segment. If **Auto Advance** is enabled, when the current segment completes the next segment time begins counting automatically.

Segment Timer Projects

As stated earlier a segment timer project has a maximum of 20 segments.

Saving a Segment Timer Project

To save segment timer project create one, then save it using the Profiles option in the OPTIONS menu.

Segment timer projects can take some time to set up. If a standard segment timer project is desired for regular use it is highly recommended to save it.

Interval Horn

The simplest segment timer project is the **interval horn**. An interval horn is used to sound the horn every time the set time completes. The interval horn is a one segment, segment timer project with auto horn and auto advance enabled. The project cycles through the allotted segment time, sounds the horn, and goes back to the beginning to start the process over again. A good example for interval horn use is little league hockey. In many little league hockey leagues they use an interval horn to signal on ice shift changes. Here are the settings to set to operate an interval horn project

Example: Interval Horn			
Segment 1	Segment Settings		Result
Signal player shift change	Segment Time	1:00	1 minute counts to 0. Horn Sounds at the end of time. Segment 1 restarts
	Auto Horn	ON	
	Auto Advance	ON	

Practice Timer

A typical segment timer project is a practice timer. The practice timer is used to organize practice into segments for different practice functions. Each segment is set to a certain time representing a required time for a practice event. When the next segment begins the team moves to the next event in the schedule.

Segments can be set to automatically begin if required or to begin upon pressing the TIME ON key on the MPCW-7 by toggling the auto advance function in the edit segment menu. Segment end can be signaled by the sounding of the horn or not by setting the Auto Horn function in the edit segment menu. Here is an example of a practice timer project:

Example: Organized Practice			
<u>Segment 1</u>	<u>Segment Settings</u>		<u>Result</u>
Stretching and Calisthenics	Segment Time	10:00	10 minutes counts to 0. Horn Sounds at the end of time. Segment 2 is prompted but not counting
	Auto Horn	ON	
	Auto Advance	OFF	
<u>Segment 2</u>	<u>Segment Settings</u>		<u>Result</u>
Agility Training	Segment Time	10:00	10 minutes counts to 0. Horn Sounds at the end of time. Segment 3 begins counting
	Auto Horn	ON	
	Auto Advance	ON	
<u>Segment 3</u>	<u>Segment Settings</u>		<u>Result</u>
Linemen to sleds. Backs, Receivers, TE, and QBs to drill routes Etc.	Segment Time	2:00	2 minutes counts to 0. Segment 4 begins counting
	Auto Horn	OFF	
	Auto Advance	ON	
<u>Segment 4</u>	<u>Segment Settings</u>		<u>Result</u>
Players and coaches begin position specific drills	Segment Time	10:00	10 minutes counts to 0. Horn Sounds at the end of time. Segment 5 begins counting
	Auto Horn	ON	
	Auto Advance	ON	
<u>Segment 5</u>	<u>Segment Settings</u>		<u>Result</u>
Offence and Defense join to run plays	Segment Time	20:00	20 minutes counts to 0. Horn Sounds at the end of time. Segment 6 begins counting
	Auto Horn	ON	
	Auto Advance	ON	
<u>Segment 6</u>	<u>Segment Settings</u>		<u>Result</u>
Team Strategy meeting	Segment Time	20:00	20 minutes counts to 0. Horn Sounds at the end of time.
	Auto Horn	ON	
	Auto Advance	OFF	

Main Menu

There are three options in the main segment timer menu.

1. Enable – Enables or disables the segment timer function in the control. Disable will remove a displayed segment timer from the scoreboard.
2. Display on Scoreboard – Option to display or not display segment timer in place of standard Main Time on the scoreboard. This option is unusable if the segment timer is disabled
3. Edit Segment – Use this option to edit segments, and create a segment timer project.




Press OPTIONS until the MPCW-7 display reads


Segment Timer >>



Press YES to enter Segment Timer Menu


Enable or Disable


1. Press  after entry in the segment timer menu until display shows

Enable
2. Press  to enable or disable segment timer function
Note: The “*” means that it is Enabled

Enable *

Display on Scoreboard

1. Press  after entry in the segment timer menu until display shows

Disp On Board
2. Press  to display segment timer on the scoreboard
Note: The “*” means that it is Enabled


Disp On Board *


Edit Segment

The Edit Segment menu is used to edit segments and edit the segment timer project. There are 6 options in the Edit Segment menu.

1. Segment Main Time – Option to edit segment main time
2. Auto Horn – Enables or disables Auto Horn function
3. Auto Advance – Enables or disables Auto Advance function
4. Next Segment – To edit the next segment in the project. If the project is less than 20 (the others are set to 0.0 time) then it adds a segment to the project
5. Insert Segment – Moves the current segment forward and edits another segment in place of it
6. Delete segment – Deletes current segment


Entering Editing Segment menu


1. Press  after entry in the segment timer menu until display shows

Edit Segment
2. Press  to enter Edit Segment menu

Seg: 1 ##:##



Editing Segment Main Time

1. Press  after entry in the segment timer menu until display shows

Seg: 1 ##:##
2. Press  to edit the current segment
3. Enter the Minutes and Seconds.
 - a. After all four digits are filled it automatically accepts the time.
 - b. If less than 4 digits are entered and YES is pressed then zeros will be placed in the unfilled digits and the time will be accepted.
 - c. If NO/CANCEL is pressed before all 4 digits are entered it restores the previous value and completes the editing process

Seg: 1 ##:##◀


 
Toggle Auto Horn

1. Press  after entry in the edit segment timer menu until display shows
2. Press  to toggle the auto horn function in the selected segment
 - a. The “*” represents Auto Horn is enabled

Seg: # Auto Hrn

Seg: # Auto Hrn*



Toggle Auto Advance

1. Press  after entry in the edit segment timer menu until display shows
2. Press  to toggle the auto advance function in the selected segment
 - a. The “*” represents Auto Advance is enabled

Seg: # Auto Adv



Seg: # Auto Adv*

Next Segment

1. Press  after entry in the edit segment timer menu until display shows
2. Press  to advance the segment number
 - a. Segment number only goes up to twenty and rolls back to 1

Seg: # Next Seg



Insert Segment

1. Press  after entry in the edit segment timer menu until display shows
2. Press  to insert a segment into the current segment position
3. Enter the Minutes and Seconds.
 - a. After all four digits are filled it automatically accepts the time.
 - b. If less than 4 digits are entered and YES is pressed then zeros will be placed in the unfilled digits and the time will be accepted.

Insert Segment

Seg: 1 ##:##◀

Delete Segment

1. Press  after entry in the segment timer menu until display shows
2. Press  to delete the current segment
 - a. All subsequent segments will move up in position to fill the spot of the deleted segment

Delete Segment

Seg: 1 ##:##◀

TIME OUT TIMER

Time out timer options are:

Display On Scoreboard – If enabled a running time out timer will display on the scoreboard

Edit Time Outs – To change time out times or time out warning times select this option



Press OPTIONS until the MPCW-7 display reads

TimeOut Timer >>



Press YES to enter main time menu

Display Time Out Timer on Scoreboard

The first selection in the Time Out Timer menu should be the display on scoreboard option.



If required to cycle back to the display on scoreboard screen

Disp On Board



To display or not display the time out timer on the scoreboard

Disp On Board*

Note: the asterisk means that it is enabled

Edit Time Outs Menu

There are 3 options within the “Edit Time Outs” menu

1. Edit Current Time out – There are 5 individual time out timers that can be set individually. The first time out entered is either the last time out used or defaults to time out timer 1.
2. Edit current warning time – Each time out timer has a settable warning time
3. Next time out – To edit another of the five time out timers.



Press until MPCW-7 display reads

Edit Time Outs




To enter the Edit Time Outs menu

Time#: ##:##.##

Next Time Out


If the current time out isn't the time out that is desired to be edited:

1. Press  until the MPCW-7 display shows
 - a. The number next to it is the current time out to be edited

Next Time Out



2. Press  until the MPCW-7 display shows the desired time out to be edited

Time#: ##:##.##

3. Press  to go back to editing that time out

Edit Current Time Out

If the current time out is the time out desired to be edited:



1. If not currently on the edit time out screen press  until MPCW-7 displays
2. Press  The MPCW-7 will display
3. Enter the minutes, seconds, and 10th of seconds.
 - a. After all five digits are filled it automatically accepts the time.
 - b. If less than 5 digits are entered and YES is pressed, then zeros will be placed in the unfilled digits and the time will be accepted.
 - c. If NO/CANCEL is pressed before all 5 digits are entered, it restores the previous value and completes the editing process

Time#: ##:##.##

Time#: MM:SS.s ◀

Edit Current Time Out's Warning Time

If the current time out is the time out desired to be edited:

1. If not currently on the edit warning screen press  until the MPCW-7 displays
2. Press : The MPCW-7 will display
3. Enter the minutes, seconds, and 10th of seconds.
 - a. After all five digits are filled it automatically accepts the time.
 - b. If less than 5 digits are entered and YES is pressed, then zeros will be placed in the unfilled digits and the time will be accepted.
 - c. If NO/CANCEL is pressed before all 5 digits are entered, it restores the previous value and completes the editing process

Warn#: ##:##.##

Warn#: MM:SS.s ◀

SWAP HOME AND GUEST

This function does just as it says. All Home and Guests values switch places on the display and in the control's display. Home and Guests team names switch if the scoreboard has electronic team names.

Note: Home and Guest keys do not swap on the MPCW-7



Press after entry in the segment timer menu until display shows

Swap Home&Guest



Press to switch all values of home and guests

Swap Home&Guest*

AUXILIARY DISPLAY

This function allows you to choose one of the following to display on the auxiliary timer: main time, auxiliary time, or time of day.



Press OPTIONS until the MPCW-7 display reads

Aux Display >>



Press YES to enter the Auxiliary Display menu

Display Main



Press OPTIONS to scroll through the list



Press YES to enable the time you want to display on the auxiliary timer

Display Main*

enabled

Note: An asterisk indicates which option is

HORN SETTINGS

Each horn type can be changed from a selection of 9 different tones. The horn output volume can be changed as well. This is done within the horn settings option. (Only available on select models)

NOTE: Horn settings may not affect scoreboards that are not in the outdoor x6xx series.

Tones can be described as:

Tone Setting	Description
Tone = 0, or blank	Mute
Tone = 1	Yelp
Tone = 2	Buzzer
Tone = 3	Car Horn
Tone = 4	Fog Horn
Tone = 5	156 Hz
Tone = 6	270 Hz
Tone = 7	285 Hz
Tone = 8	303 Hz
Tone = 9	385 Hz



Press OPTIONS until the MPCW-7 display reads

Horn Settings >>






To enter the Horn Settings menu

Volume: #

Horn Volume

Adjusting the horn volume affects all 5 different horns. To adjust the horn volume:




1. Press  if not already on the horn volume screen until the display shows
2. Press  the MPCW-7 will display
3. Press the desired volume number key from 0 (muted) to 9 (max), or to disable the horn press 
 - a. Volume is then set.

Volume: #

Volume: #◀

EOP Horn Tone

This setting will change the EOP (end of period) tone and main stop time tone. To change the tone:




1. Press  until the display shows
2. Press  the MPCW-7 will display
3. Press the desired horn tone key from 0 to 9; or  to disable the EOP horn

EOP Tone: #

EOP Tone: #◀

Horn Key Tone

This setting will change tone of the horn that sounds when the horn key is pressed. To change the tone:



1. Press  until the display shows
2. Press  the MPCW-7 will display
3. Press the desired horn tone key from 0 to 9; or  to disable the horn key

Key Tone: #

Key Tone: #◀

Aux Horn Tone

This setting will change both the Aux stop time and end time horn tone.



1. Press  until the display shows
2. Press  the MPCW-7 will display
3. Press the desired horn tone key from 0 to 9

Aux Tone: #

Aux Tone: #◀

Time out Timer Tone

This setting will change both the end time out tone and warning time tone.



1. Press  until the display shows
2. Press  the MPCW-7 will display
3. Press the desired horn tone key from 0 (no horn tone) to 9

TimeOut Tone: #

TimeOut Tone: #◀

Segment Timer Horn Tone

This setting changes the segment timer auto horn tone.



1. Press  until the display shows
2. Press  the MPCW-7 will display
3. Press the desired horn tone key from 0 (no horn tone) to 9

Segment Tone: #

Segment Tone: #◀

WIRELESS

The Wireless options are to link receivers, add receivers, and delete receivers from the control. To set the wireless options:

1. Press  until the MPCW-7 display reads
2. Press  to enter the Wireless Options menu

Wireless >>


Link Receiver

Add Receiver

The MPCW-7 stores any receivers it uses in memory. If a new receiver is required because of a new scoreboard installation, maintenance, or a new component in the existing Nevco, Inc. scoring system begin by adding a receiver.

Be sure to have the receiver serial number ready it will be needed to add a receiver to the MPCW-7.

From the “Link Receiver” screen:

1. From the Link Receiver screen: press  until the display shows

Add Receiver

2. Press  the MPCW-7 will display

Receiver# ◀

3. Enter the six digit receiver serial number

- a. The control will then navigate to name the receiver

4. Enter a receiver name using the team name number and letter keys.

- a. The receiver name is entered just as a team name is. For more reference refer to the “Team Names” Section

- b. It is recommended to name the receiver according to what it controls

SOC FIELD 1 ▲

Note: Once a new receiver is added it is added to all profiles as linked. If this is not a desirable state then for each profile used save it according to what the receiver needs are.

Link Receiver

 
The MPCW-7 allows the user to choose which wireless receivers to use during operation. The receivers used default to being linked this setting allows one to toggle the use of each receiver added to the MPCW-7. To link or unlink a receiver:

1. If using profiles load the profile desired to change the wireless settings
 - a. Refer to the Profiles section of this manual
2. Enter the wireless options menu by pressing OPTIONS until “Wireless” displays and pressing YES. MPCW-7 will display the Link Receiver screen.

Link Receiver

3. Press  the MPCW-7 will display the first receiver added to the MPCW-7




 

 

SOC FIELD 1 *

4. If that receiver is desired to link or be unlinked press 
 - a. The asterisk designates a Linked state
5. If there are more receivers within the MPCW-7 press OPTIONS to go through each
6. Repeat steps 3 thru 5 until all receivers are at their desired state
7. If using profiles save the current profile
8. If using profiles repeat steps 1 thru 7 for all profiles with different wireless settings.

Delete Receiver

The MPCW-7 stores added receivers it uses in memory. If it is necessary to delete a receiver because it is no longer in use, defective, etc the Delete Receiver menu is used.

Warning: Deleted receivers are deleted from the control as a whole. To make a receiver not operate in certain circumstance refer to the “Link Receiver” process.

 
1. From the Link Receiver screen: press  until the display shows 
2. Press  the MPCW-7 will display the first receiver added to the MPCW-7 
3. If this is not the receiver to be deleted press  until that receiver displays 
4. Press  and that receiver is deleted from the MPCW-7

Note: Once a receiver is deleted it is deleted from all profiles and is not remembered by the control. To correct a mistakenly deleted receiver refer to “Add receiver” and “Link Receiver” as needed.


TIME OF DAY

Use this option to:

 

- Stick time of day on the scoreboard when the MPCW-7 is turned off
- Toggle the clock between 12 and 24 hours



Press OPTIONS until the MPCW-7 display reads







Press YES to enter the Time of Day Options menu



Stick TOD


 

 
When this function is enabled the scoreboard will display the time of day after the MPCW-7 is shut off. This feature does not support 24 hour format.

To enable or disable this function from the Time of Day Options menu:

1. If the MPCW-7 is not currently on the Stick TOD screen press  until the MPCW-7 displays 
2. Press  to enable or disable this function.
 - a. The * on the screen means that this function is enabled
 - b. If this function is enabled then the MPCW-7 is shut off the time of day will display in the scoreboard’s main time spot

24 Hour Time

This function will change the time from the 12 hour structure to the 24 hour structure

1. Press  until the MPCW-7 displays 
2. Press  to enable or disable this functionality
 - a. The * on the screen means that this function is enabled

PROFILES



Press OPTIONS until the MPCW-7 displays

Profiles >>



Press YES to enter the Profiles menu

Load Profile

A Profile retains all settings within the control for future use. A large amount of our customers may only need the default profile for each sport in the MPCW-7 for the entirety of its use. The New Game key will access the last profile saved or loaded within each sport and there is no need to create multiple unique profiles. However, there are some instances where profiles are strongly encouraged for ease of use.

If:

- There are multiple settings that are to be set for different times the scoreboard is in use
- The MPCW-7 is being used on different scoreboard types
- Segment Timer projects are being used
- There are different wireless configurations for different games

Then: A unique profile may make the MPCW-7 control much more convenient to use.

The MPCW-7 can save up to 100 profiles.
Each sport’s profiles save the following:

Half/Period/Quarter	Main Time Options	Caption Settings
All Game Time Stats	Aux Time Options	Team Names
Main Time	Time Out Options	Horn Settings
Stop Time	Swap Home and Guest	Wireless Settings
Scoreboard Brightness	Segment Timer Options	Scoreboard Model


 
To keep track profile settings and numbers it is recommended to keep good notes on profiles.
A Profile worksheet is provided in the Appendix for these notes

There are three options in the Profiles menu “Load Profile”, “Default Lock” and “Save Profile”. The procedures for these options are covered in START UP and SET UP. To recap:

Load Profile

Load profile is the first option within the Profile Options

Load Profile

1. From the Load Profile Screen: Press  the MPCW-7 will display
 - a. The profile number here will be the last profile loaded or saved
2. If the displayed profile is the profile required then press 
3. If the profile displaying is not the required profile then enter the two digit number of the profile required.
 - a. If it is a single digit enter the number and press YES to load

Profile (##) : ## ◀

The MPCW-7 will then begin the process of loading a profile.


 


- The MPCW-7 beeper will sound
- The MPCW-7 will display the MPCW-7 revision screen
- The scoreboard will blank
- The MPCW-7 will display the sport
- The scoreboard will load

Save Profile

Save profile is the second option from within the Profile Options

Set all applicable settings before saving a profile.

It is useful to press the new game key to clear the board before making all of the options changes desired prior to saving a profile. If you don't blank the board, your profile will be saved with time and score that will be recalled every time the new game key is pressed. This can be useful if you want the time to be set to 8:00 in basketball for example, or if you prefer the fouls to be '0' by default instead of <blank>.

1. Upon entry into the Profile Options; Press  until the MPCW-7 displays 
2. Press  the MPCW-7 will display
 - a. The profile number here will be the last profile loaded or saved
3. If the displayed profile is the profile required then press 
4. If the profile displaying is not the required profile then enter the two digit number of the profile required.
 - a. If it is a single digit enter the number and press YES to load

Save Profile

Profile(##) : ## ◀

The MPCW-7 will then begin the process of loading a profile.

- The MPCW-7 beeper will sound while saving.

Mistakes in a saved profile

If a mistake was made in the saved profile's settings simply:


 

1. Load the profile in question
2. Change the setting
3. Save the profile again

Default Lock

Default Lock is the third option within the Profile Options. When enabled, the control will prevent the user from overwriting the default profile created at the factory. The following are the default profile numbers for each sport:

Sport	Default Profile ##
Soccer	88
Football	89
Track	90
Baseball / Softball	91
Lacrosse	92
Basketball	93
Volleyball	94
Wrestling	95
Hockey / Field Hockey	96

To preserve the factory defaults and retain the ability to return the control back to a known state avoid overwriting the factory default profile numbers.

1. Upon entry into the Profile Options; Press  until the MPCW-7 displays 
2. Press  to turn the Default Lock off
 - a. Default Lock automatically turns on each time the control is powered on
 - b. An asterisk indicates that default lock is turned on

Default Lock*

Backup / Restore

Used at the factory to output the contents of the profile / wireless data

TROUBLESHOOTING CHART

Problem	Cause	Solution
Cannot access the OPTIONS menu	Time is running	Turn time off before attempting to change settings
Horn does not sound when time has expired	Auto horn is turned off	Enable the auto horn in the Main Time OPTIONS menu
	Volume is set to zero	Change the volume to something other than zero in the Horn OPTIONS menu
	EOP horn is set to zero	Change the EOP horn in the Horn OPTIONS menu to the desired horn sound
Timer counts in wrong direction	Timer direction is set wrong	Change the direction of time in the Main Time OPTIONS menu
Cannot subtract from score	Score keys will add only	Use SET then HOME or GUESTS SCORE key and enter the correct score directly
Cannot clear Time Out Timer from scoreboard without sounding warning horn (teams are ready to play)	Clearing the Time Out Timer forces it to drop to the warning time which sounds the warning horn	Press TIME OUT TIMER twice. The warning horn will be skipped and the time out timer end horn will sound
Tenth second does not show on scoreboard	Main clock is counting up.	Tenth second will not show when main time is counting up
	Time is above one minute	None this is standard operation
Time of day will not display on scoreboard when I press Time of day	Time of day key is not enabled	Use SET TIME OF DAY to enable it
Aux time is displayed on the auxiliary time display, but it is not counting	Hours and minutes are being displayed. The display will change only once each minute	Minutes and seconds will be displayed during the last hour of remaining time
	Time switch is off	Aux time is set to run with the time switch. Either turn the time switch to on/press TIME ON or go to options and disable the option to run with the time switch
The horn randomly goes off during game time while main time is running	Aux timer is running	Start a new game. Go to Aux timer OPTIONS menu and set the aux timer to 00:00. Save the profile
	Segment Timer is running	Start a new game when possible. Go to Segment Timer options menu and disable segment timer. Save the profile.
The Horn randomly goes off while the control is on. Main time is not running.	Aux timer is set to run without the time switch	Start a new game. Go to Aux timer OPTIONS menu and set the aux timer to 00:00 and set the aux timer to run with the time switch. Save the profile
The Horn goes off when turning on the control after transferring it from another scoreboard.	The Model is not set correctly	Go to Options > Model and select the correct Scoreboard Model

If the problem persists please contact the Nevco Service Department.

800-851-4040

GLOSSARY

ALTERNATE TIME CONTROL SWITCHES (keys): Located on the keypad, these 2 keys, TIME ON and TIME OFF, may be used instead of the Hand Held Time Control Switch.

NOTE: These 2 keys are inactive while the Hand Held Time Control Switch is plugged in. To enable them, turn the control off, unplug the Hand Held Switch and restart the control. You may use “Start Where Left off Last” if you wish.

AUTO HORN: Sounds for a minimum of 4 seconds when the main time has expired, stop time is reached, segment timer ends a segment (if set), time out ends, aux time ends, or aux time reaches aux stop time. Main time Auto horn can be disabled through the main time options menu.

NOTE: Auto Horn tones and volumes can be changed via the Horn Options menu

AUX TIMER: An auxiliary timer, separate from the main timer, that can be configured to count up or down and to start and stop with the time control switch or run continuously. It can be viewed on the control by pressing TIME twice, going to Aux Time Options, or on an AUXILIARY TIME DISPLAY. Some uses for the aux timer include timing field or facility usage, or determining how far into a game a certain event happened.

AUXILIARY TIME DISPLAY: Consisting only of a timer, it can display the main time, the AUX TIME or the Time of Day Clock. Auxiliary Time Display models include: 9410, 9510, 9405 and 9505.

BATTERY: Battery powered memory saves the settings and data in the control in case of power failure. It also maintains the accuracy of the time of day when the control is unplugged.

BEEPER: Confirms each key press and alerts operator when time expires.

PROFILE: Saves the current control settings and data so it can be easily recalled later. Up to 100 profiles can be saved for each sport.

BRIGHTNESS LEVEL: The scoreboard can be set to bright or dim for best viewing. Indoor scoreboards default to bright; outdoor scoreboards default to dim.

TIME OF DAY: Time of Day Clock. Once the correct time has been set, the accuracy of the time of day is maintained even while the control power is unplugged. During normal operation, the time of day can be displayed on the control and scoreboard by pressing a single key.

NOTE: Pressing the TIME key or turning the time on will return the main time to the display(s).

DISPLAY: A 16 character display on the control prompts the operator for input and can monitor the scoreboard data.

HAND HELD TIME CONTROL SWITCH: A hand held switch with a coiled cord that plugs into either side of the control. When connected, the alternate time control switches (keys) are disabled. (Makes it easier for another person to control the main time or sound the horn).

INTERVAL HORN: A horn that sounds repeatedly at preset intervals throughout the game. An example of use is to signal when little league hockey teams should change lines. The Interval Horn has been replaced by a more versatile SEGMENT TIMER which can function just the same. (See Segment Timer)

OPTIONS: Consist of game settings and added features useable during a game or practice.

OVERLAY: A flat plastic panel that fits over and around the keys on the control. Tabs at the top and bottom hold it in place. Each overlay provides the proper labeling for each key, Nevco contact information, and the sport name. When you want to change to a different sport, install the correct overlay and enter the sport name on the new sport screen.

SEGMENT TIMER: Sometimes called Practice Timer, it allows a list of time segments to be programmed into the control. As an example the list can then be used for a practice routine or drill. When started, the first segment on the list is loaded into the main timer and starts counting down. When zero is reached, the timer moves to the next segment in the segment timer project. If Auto horn is enabled then the horn will sound for 4 seconds. If Auto advance is enabled the next segment will begin counting if not Time On will need to be pressed.

NOTE: The Segment Timer has replaced the Interval Horn and can mimic it exactly.

STOP TIME: Is a time set for main time or aux time to automatically cease counting. It functionally acts the same as time running out on the clock. The Auto horn will sound if it is set to within the main time options and the horn options.

TENTH SECOND SHIFT TIMER: Automatically shifts from displaying minutes and seconds to seconds and tenths of seconds during the last minute of count down time. (May be disabled if desired)

TIME OUT TIMER: Programmable for different time out lengths and with optional warning horn and an option to display the Time Out time remaining on the scoreboard. (Five different time out timers are available.)

Appendix

(Profile Chart)

Profile _____
Sport _____

Profile _____
Sport _____

Profile _____
Sport _____

Profile _____
Sport _____

Profile _____
Sport _____

Appendix
(Segment Timer)

Troubleshooting Chart

Problem	Cause	Solution
I have to set up the same segment timer project every time I change sports	Not saved in the profile being used. Or using the wrong profile	Go to Profiles in the OPTIONS menu and load the profile that has the segment timer desired saved in it
	Not saved in any profile	Set up the timer as needed, then from the OPTIONS Profiles menu, save a profile. When you start the control, go to the options menu and load the desired profile to use.
I cannot restart a segment	No you cannot restart a segment.	You can change the segment's currently displayed time. As soon as it expires, the next segment in the list is loaded. (The original time remains unchanged.)
The drills are fine, but we need time to get ready for the next drill.	Auto Advance is on	Go to Edit Segment in the Segment Timer Options and turn Auto Advance off for the desired segment.
	No extra segments have been set up for time between drills.	Set up an extra segment, for time to get ready, for each drill.
I cannot tell when all the segments have expired.	If one cannot display segment timer on the Scoreboard or the display is just a timer.	Set up an extra segment or two at the end of the segment list. Set these segments to a short amount of time. Each should have auto horn and auto advance Enabled. The horn sound will alert to the end of the segment timer project
	IF one can display segment timer project on the scoreboard	The segment number is displayed in the Guests place on a standard scoreboard
The horn keeps randomly sounding. (Hockey)	Interval horn is enabled	Go to Interval horn in the options menu, and turn off the Interval Enable option.

If the problem persists please contact the Nevco Service Department.
800-851-4040

(Segment Timer)

Segment Timer Project _____

Profile _____

[illegible]