

LACROSSE SHOOTING TRAINER

GETTING STARTED



Thank you for choosing the SKLZ Lacrosse Shooting Trainer. We are dedicated to providing you with the best tools and instruction possible to help you prepare for your sport. If there is anything else we can do to help, don't hesitate to send us an email at **help@4implus.com** or give us a call toll-free at **800-729-5954**.

BEFORE YOU BEGIN:

- Read all instructions carefully before using. Failure to do so may result in injury or damage to the product.
- Always check for wear and tear before use. If any is found, do not use the product.
- If you are missing any Lacrosse Shooting Trainer components, please contact Implus customer service toll-free at 800-729-5954.

AWARNING:

CHOKING HAZARD: Contains small parts. Not for children under 3 years of age.

- To avoid pinching, use caution when assembling bungees.
- Regularly check for wear and tear. Stop using Lacrosse Shooting Trainer if any part of it breaks. Failure to do so could result in injury.
- Athletes under 18 years of age should use only under adult supervision.
- Not suitable for children under 3 years of age.
- Any alteration of this product or its components will result in a disclaimer of liability.

ACAUTION:

- Do not leave Lacrosse Shooting Trainer outdoors for extended periods of time.
- Avoid storing the Lacrosse Shooting Trainer in extremely hot or cold environments, as this could reduce the life span of the product.
- · When done, disassemble Lacrosse Shooting Trainer and store after use. Do not leave Lacrosse Shooting Trainer outdoors.



SHOOTING TRAINER

GETTING STARTED



 Connect the Shooting Trainer to the goal by carefully wrapping the strap around the frame and back through the buckle. Fully close the buckle to secure in place. Repeat on all straps.



2. When assembled properly, SKLZ logo will be in the center of the net.