

# versa-brella™

INSTRUCTION MANUAL



Thank you for choosing Versa-Brella by Sport-Brella. If there is anything else we can do to help you, don't hesitate to send us an email ([customerservice@sport-brella.com](mailto:customerservice@sport-brella.com)) or give us a call (1-877-225-7275).

## BEFORE YOU BEGIN:

- › Read all setup and usage instructions carefully before using. If the instructions are not followed correctly, injury or damage to the product could result.
- › Always check equipment for worn or damaged parts before use. If defects are found, do not use product.
- › Make sure you have all of the Versa-Brella components. Please contact customer service toll free at 1-877-225-7275 if you are missing anything.
- › Adult assembly required.
- › Make sure the Versa-Brella is attached to a stable surface. For a secure fit, the area under the clamp should be clear of excess debris and moisture.

## ⚠WARNING:

- › To avoid injury, keep fingers away from the interior of the clamp and adjustment points.
- › The area around the umbrella should be clear when opening.

## CARE:

- › Make sure the Versa-Brella is completely dry before packing in bag.
- › Use mild detergent to spot clean the canopy.

## VERSA-BRELLA COMPONENTS:



## VERSA-BRELLA



ROUND SURFACE



SQUARE SURFACE



facebook.com/sportbrella

SPORTBRELLA.COM

## VERSA-BRELLA SETUP



### ATTACHING THE CLAMP


- 1- Remove Versa-Brella from the carry bag. The umbrella should remain closed until securely attached.
- 2- Versa-Brella will attach to either rounded or squared surfaces up to 1.5" diameter. Prior to attaching, fully open the clamp by twisting the adjustment knob counter-clockwise.
- 3- Attach the clamp to the desired location and tighten by twisting the knob clockwise. It is recommended that the area under the clamp be clear of excess debris and moisture to ensure a secure fit.
- 4- Once in place, detach the ties around the umbrella, push the umbrella up and open. Versa-Brella is now ready for use.



### ADJUSTING BASE HINGES

- 1- The umbrella can be adjusted forward and backward and/or left and right by pressing one or both of the Base Hinges (C). To adjust, press the Base Hinge button, move the umbrella into place and then release to lock.

NOTE: Umbrella will snap to the closest setting.

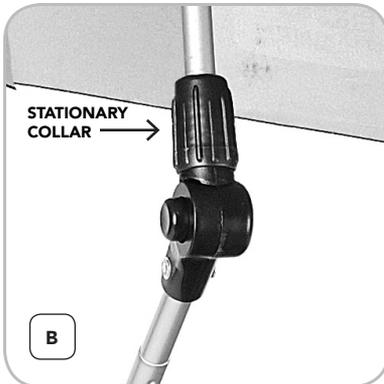

### TOP HINGE & ROTATING THE CANOPY

- 1- To adjust the umbrella forward or backward 180 degrees, press the Top Hinge button (B). Move the umbrella into place and release to lock.
- 2- To rotate the Canopy (A), grab the canopy tip and rotate the canopy to desired position. The canopy shaft will rotate in the stationary collar.

NOTE: Do not attempt to twist the stationary collar.

### STORAGE

- 1- Make sure the umbrella is dry and free of debris before storing.
- 2- Straighten the umbrella pole with the top hinge. Close the umbrella and secure with the ties.
- 3- Slide contents into the carry bag.

## 1-YEAR LIMITED WARRANTY – VERSA-BRELLA

Register your product at [Sport-Brella.com](http://Sport-Brella.com) to ensure warranty coverage, get new product information and special deals from Sport-Brella®.

Questions? Email: [CustomerService@Sport-Brella.com](mailto:CustomerService@Sport-Brella.com)  
or call toll free: 877-225-7275

Made in China. ©2015 Pro Performance Sports, LLC. All rights reserved.  
**U.S. Patent # D627,148 & D646,886.** Other U.S. and foreign patent applications are pending.

Manufactured and distributed by SKLZ/Pro Performance Sports: 2081 Faraday Avenue, Carlsbad, CA 92008 U.S.A. SKLZ, and Sport-Brella® are registered trademark of Pro Performance Sports, LLC., its subsidiaries and affiliates. Product features, appearance, and specifications may be subject to change without notice. Unauthorized duplication is a violation of applicable local and international laws.