




Most Kwik Goal products carry a **Lifetime Guarantee**. For details or claims, visit kwikgoal.com or contact customer service at 1-800-531-4252.

INSTRUCTION FOR 16B2801 TOM® DOLLY


1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify trucking company immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.

Parts


Rail Tube (2)
(Part#UZ1054)

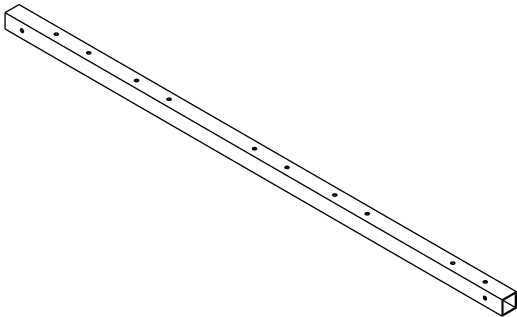


Rear Wheel Tube (1)
(Part#UZ1053)

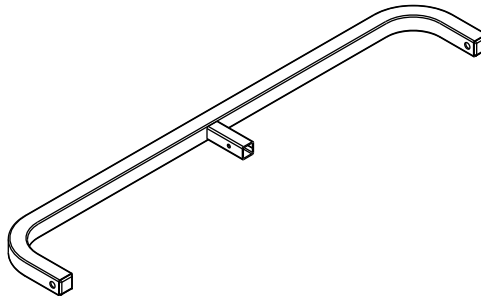


Rail Connector Tube (1)
(Part#UZ993)

 


Tire (2)
(Part#VZ349)

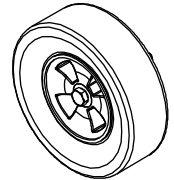


Front Ground Tube (1)
(Part#UZ1055)

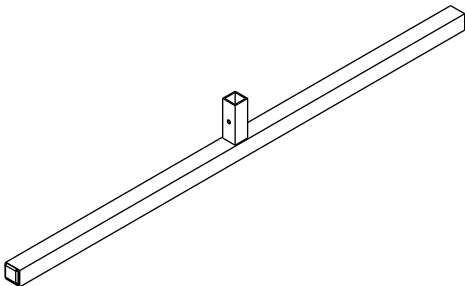

Saddle Anchor Bags (2)
(Part#10B1605)

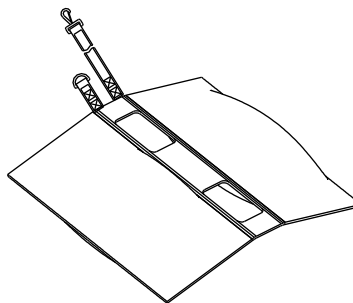

Handle (1)
(Part#UZ1056)

 


CAUTION

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.


Tools Needed

15/16" & 1/2"
Wrench

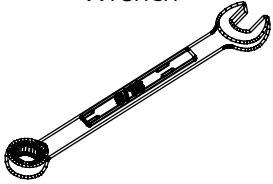

And

Ratchet
with 15/16" & 1/2" Socket


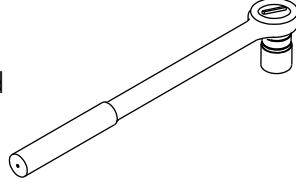


Hardware

5/8" X 5" Hex Bolt (Part# TZ295)	(2)
5/8" Lock Nut (Part# TZ294)	(2)
5/8" Jam Nut (Part# TZ108)	(2)
5/16" X 2-1/4" Hex Bolt (Part# TZ251)	(2)
5/16" Lock Nut (Part# TZ5)	(5)
5/16" Flat Washer (Part# TZ269)	(10)


2. Attach tire to rear wheel tube with hardware as shown in figure.

CAUTION: DO NOT OVER-TIGHTEN. OVER-TIGHTENING WILL CAUSE DAMAGE.

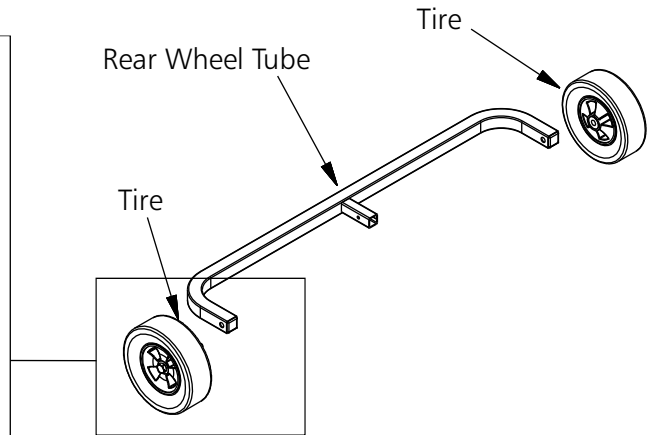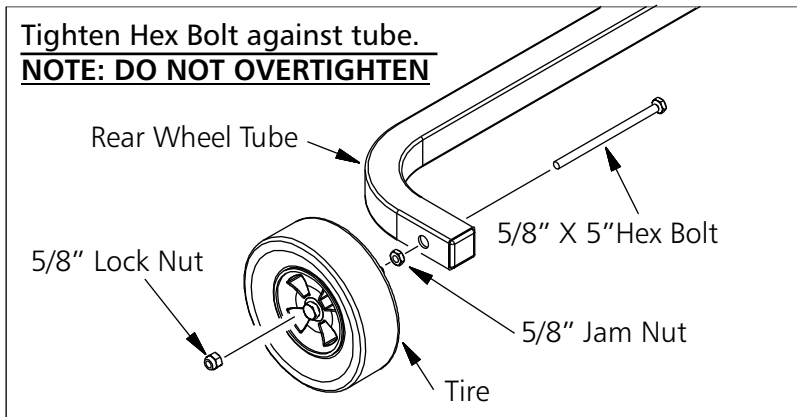

3. Attach front ground tube to handle with hardware as shown in figure.

CAUTION: DO NOT OVER-TIGHTEN. OVER-TIGHTENING WILL CAUSE DAMAGE.

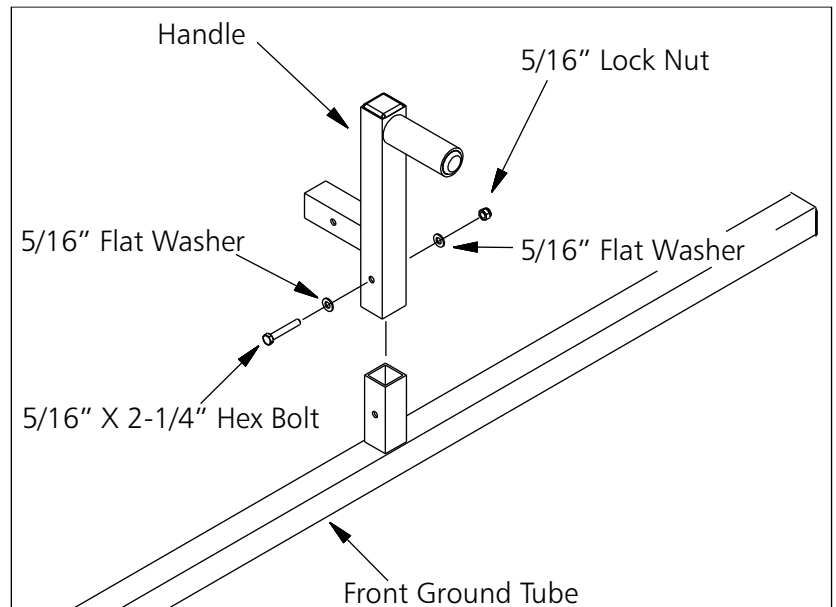


*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

4. Finish assembling frame. ***NOTE: Make sure Kwik Goal logo on each rail tube is toward the center of the frame.***

CAUTION: DO NOT OVER-TIGHTEN. OVER-TIGHTENING WILL CAUSE DAMAGE.

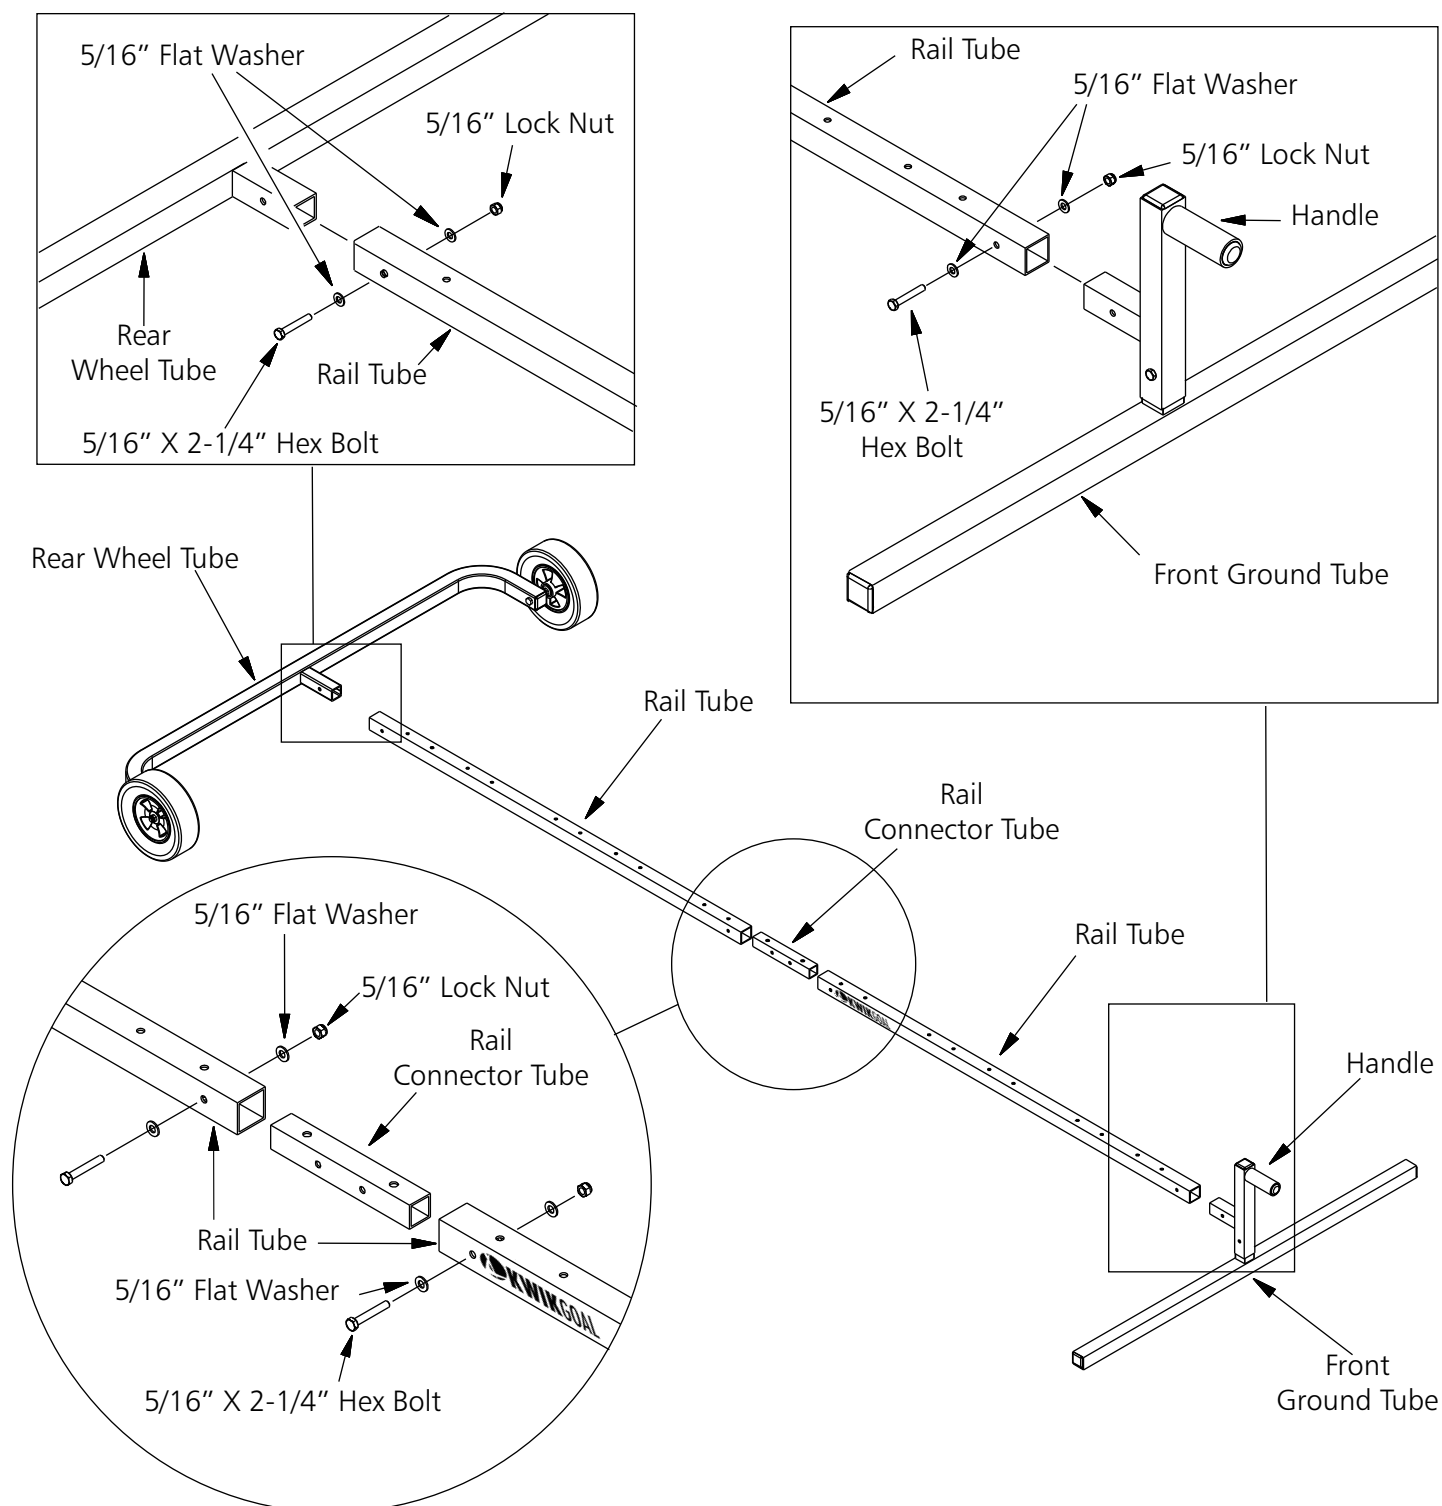


*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

USE WITH TOM® (SOLD SEPARATELY)

5. Set TOM® s (SOLD SEPARATELY) on assembled frame, sliding pegs into holes on rail tube as shown.

NOTE: Place the first TOM® in center of frame and then add the remaining four.

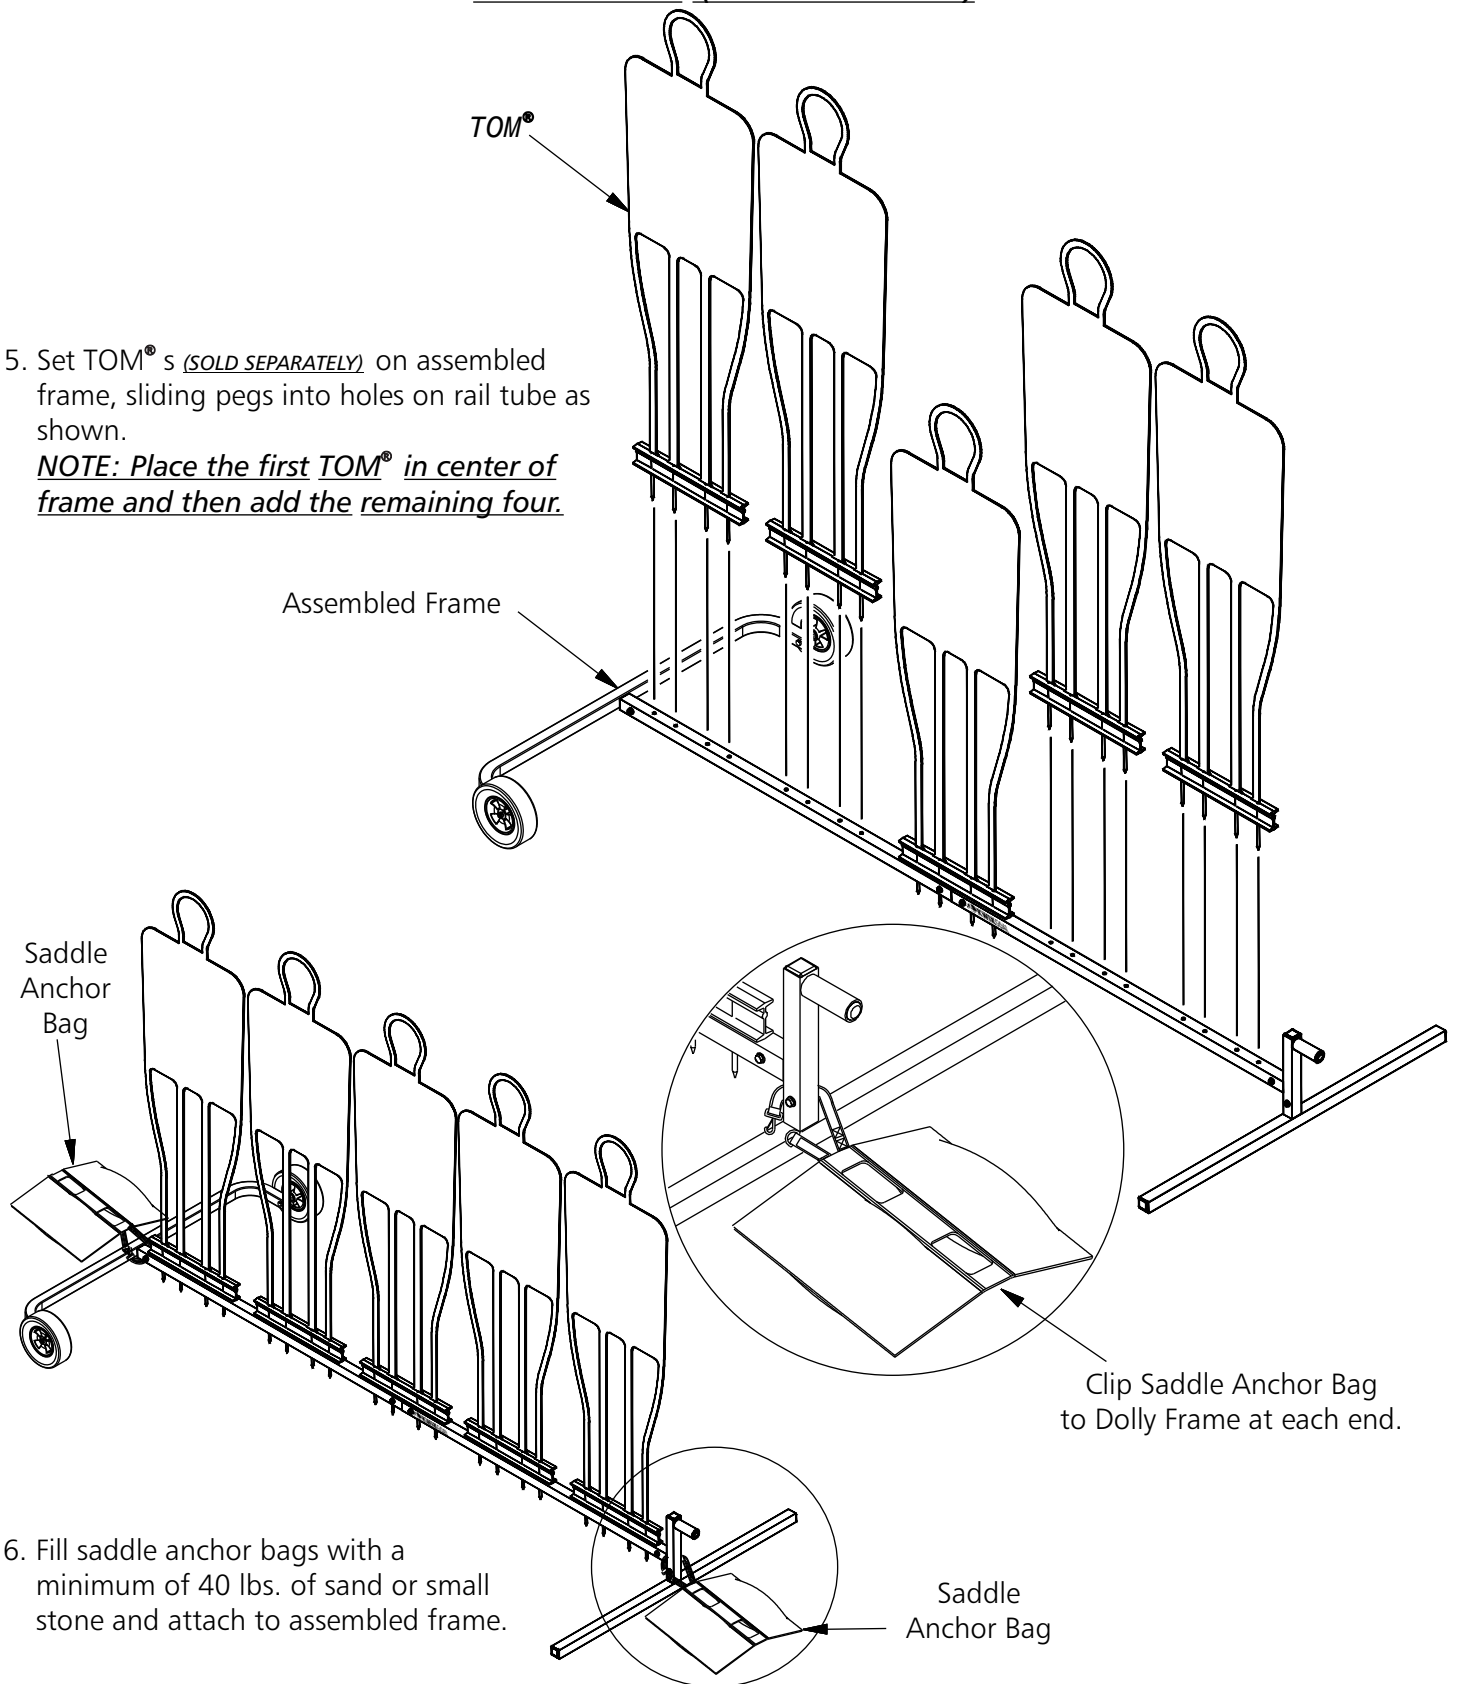

6. Fill saddle anchor bags with a minimum of 40 lbs. of sand or small stone and attach to assembled frame.

*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.