## Lite-Flite® Baseball Diagram

## SERIAL NUMBER LOCATED ON MOTOR SIDE OF MACHINE, DIRECTLY UNDER MOTOR.

