


Proper Floor Sleeve Measurement

Do not measure cover plate

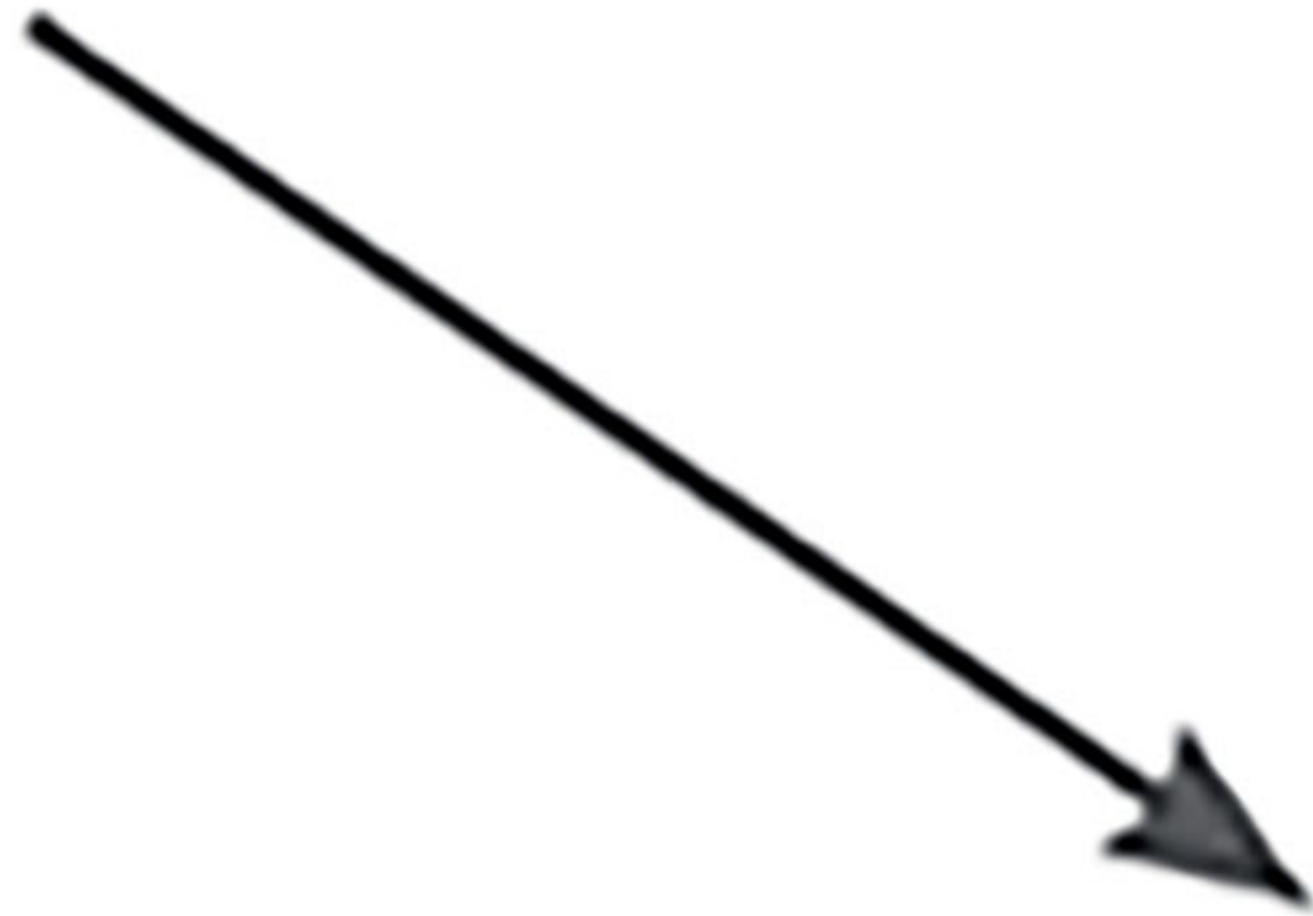

Measure the distance between the red arrows for accurate dimension

