

 


Most Kwik Goal products carry a **Lifetime Guarantee**. For details or claims, visit kwikgoal.com or contact customer service at 1-800-531-4252.


ASSEMBLY INSTRUCTIONS FOR 16A1 KWIK BACK® REBOUNDER US Pat. #5,938,546

1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify trucking company immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
2. Read through entire instruction before beginning assembly and installation.


Bent Tube (2)
(Part# UZ538)

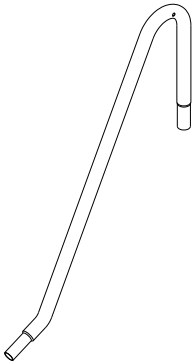


Base (2)
(Part# UZ511)

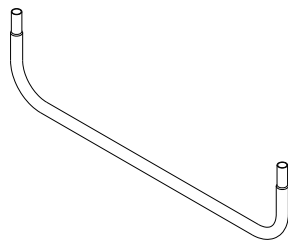 


Long Upright (2)
(Part# UZ514)

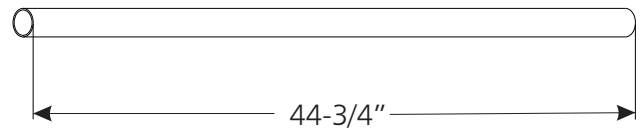 


Short Upright (2)
(Part# UZ533)

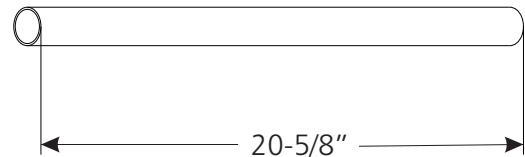 


Net (1)
(Part# 3A2)

 

Ground Anchor Peg (4)
(Part# TZ150)

 

Top Center Bar (1)
(Part# UZ539)

 

Elastic Band (60)
(Part# 10B3501 PK 30)



CAUTION

This goal has been designed to be used for the game of soccer only. Goal posts must be anchored **AT ALL TIMES** and shall be secured against overturning. Do not climb on the net or goal framework at any time! All fastenings must be checked to insure they are fully tightened before and after each use of this product. Goal posts not in use must be disassembled and properly stored in a safe, secure area (See included Guidelines for Moveable Soccer Goal Safety.).

 
Assembled goal posts should not be left unattended. Remove nets when goals are not in use. Do not use this equipment during the threat of high winds. Goal posts should be checked for safety before and after each use. All warning and safety labels included with this product must be visible at all times.
Any modifications to this or any Kwik Goal product will void any and all warranties.

Hardware


Note: Hardware may be packaged separately in one or more boxes. Open all packages before beginning assembly.

- 5/16" x 2-3/4" Hex Bolt (Part# TZ296) (2)
- 5/16" Flat Washer (Part# TZ4) (2)
- 5/16" Lock Washer (Part# TZ174) (2)

Assembly Tools

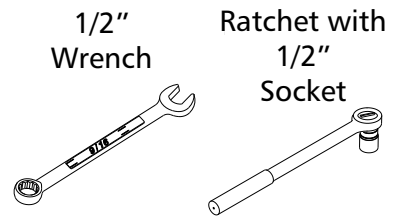


 3. Assemble frame as shown.
DO NOT OVER TIGHTEN BOLTS.

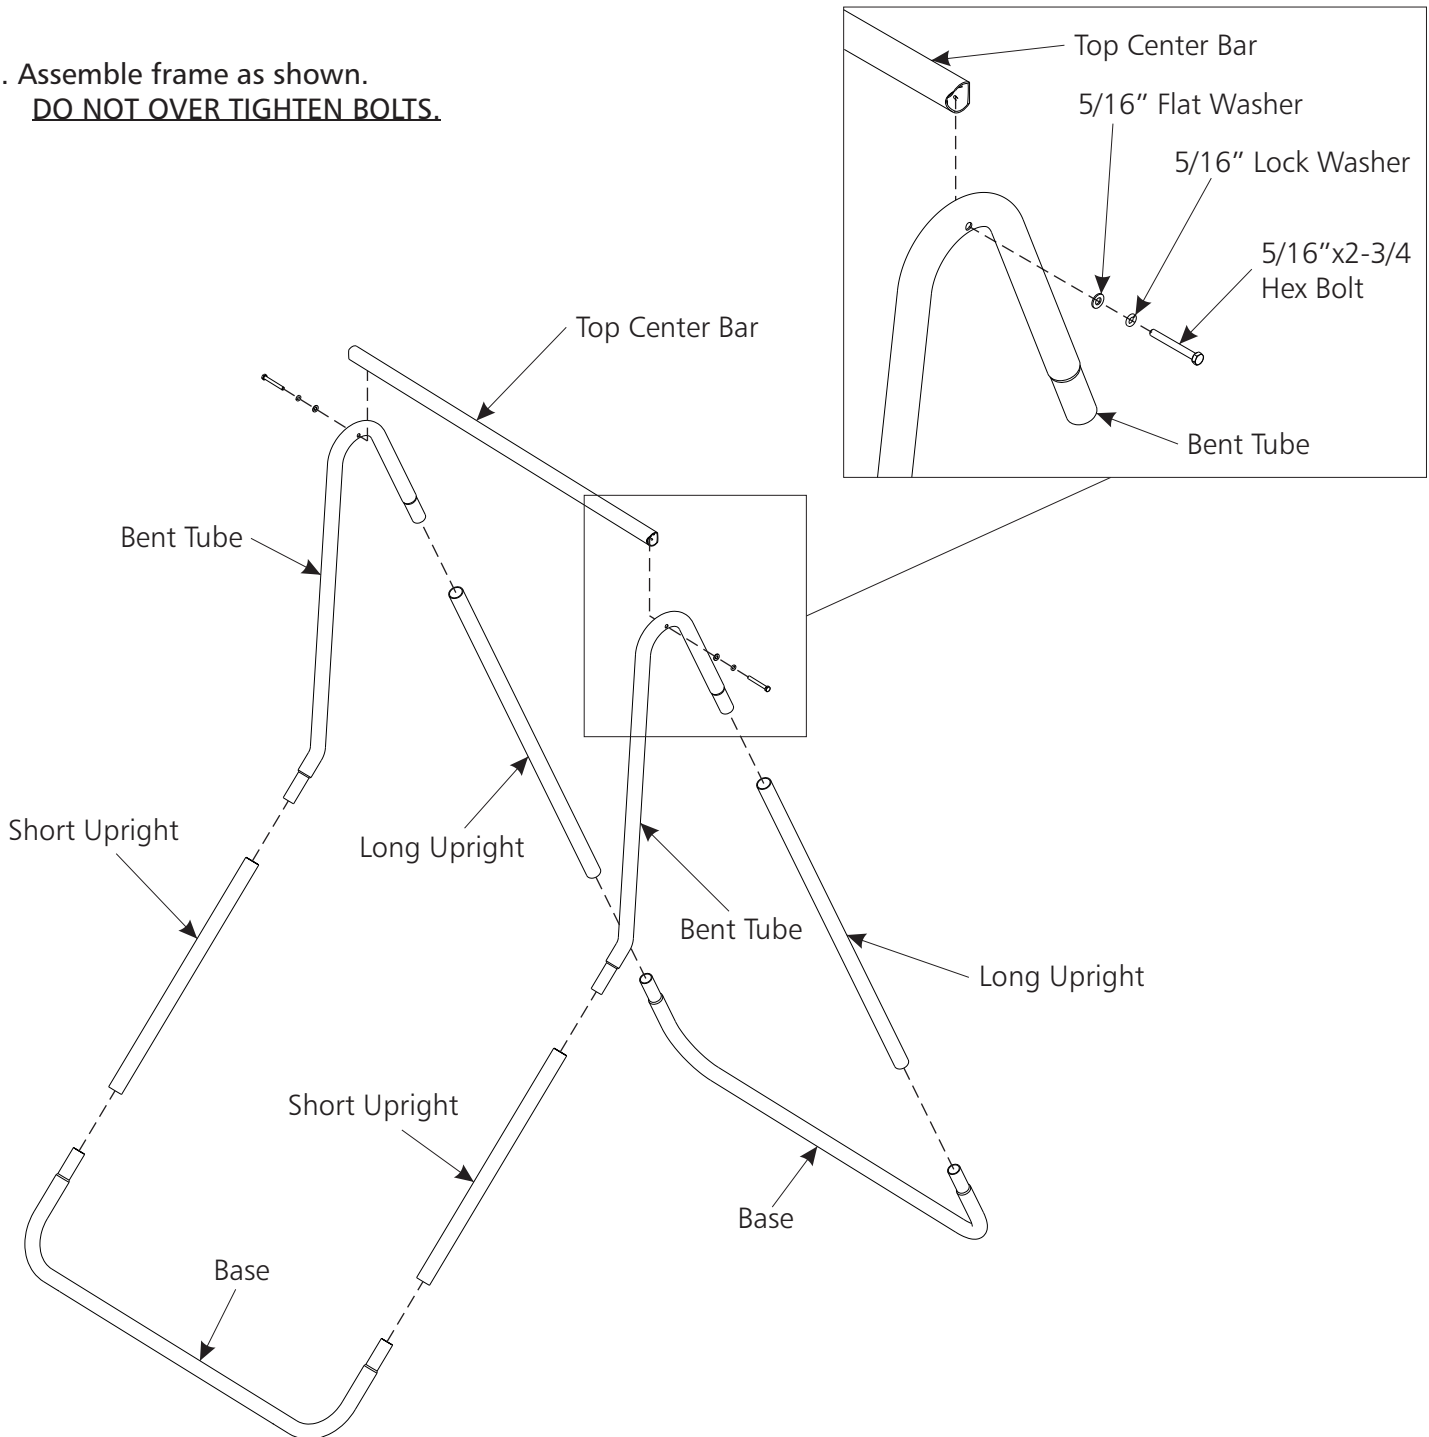


4. Attach black rope located at center of net to top center bar using elastic bands as shown.

 
Note: The addition of elastic bands while attaching the net may make the net appear small but it will stretch during installation. For net attachment hints see steps

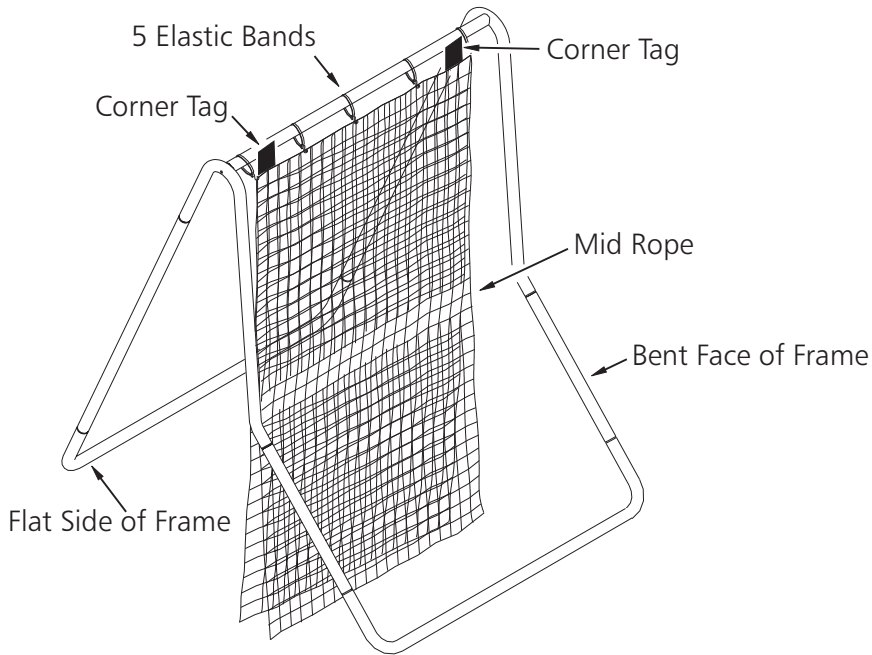


5. Attach each side and bottom of net as shown.

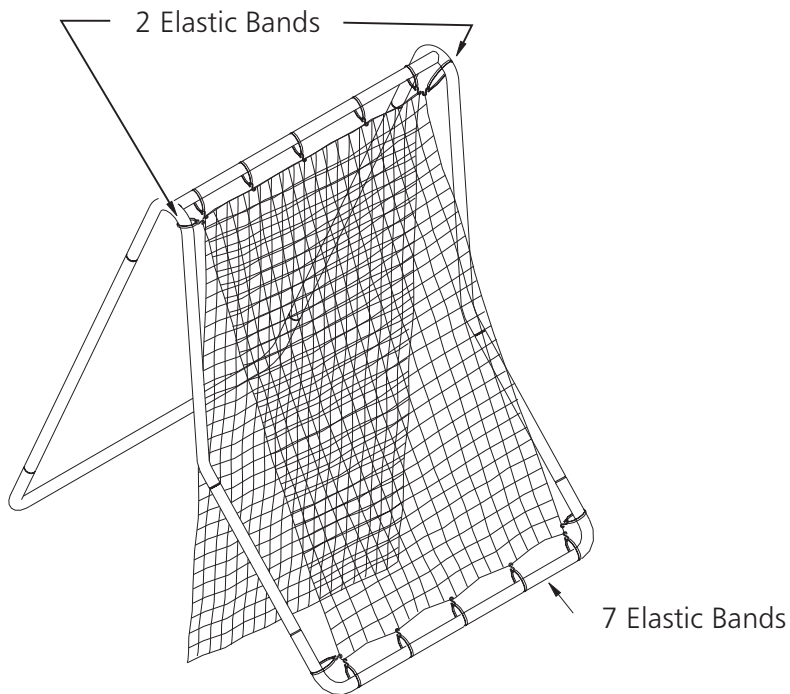 

 
Step 1

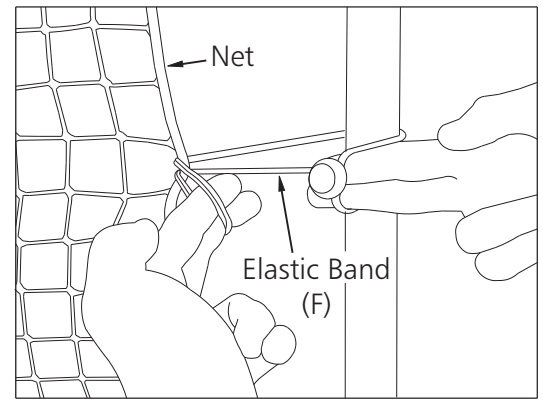

 
Step 2

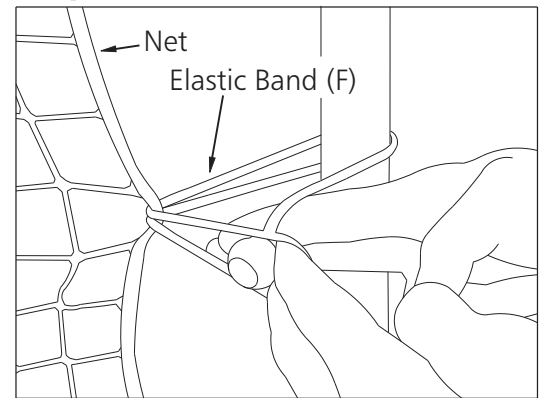

 
Step 3

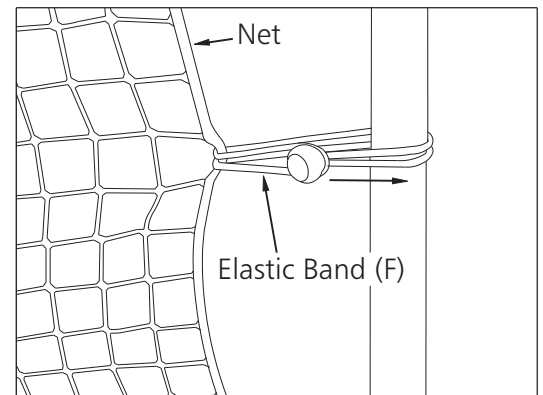

 Step 4

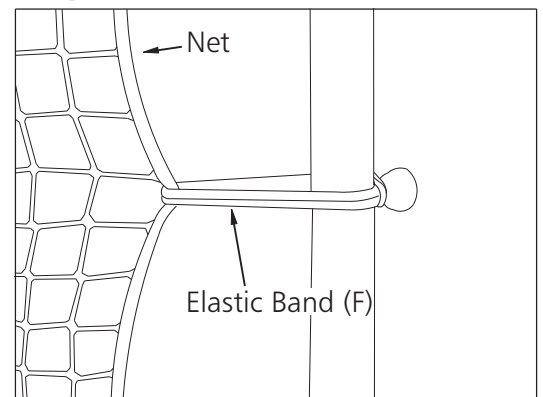


6. Attach elastic bands to the bottom of net as shown.

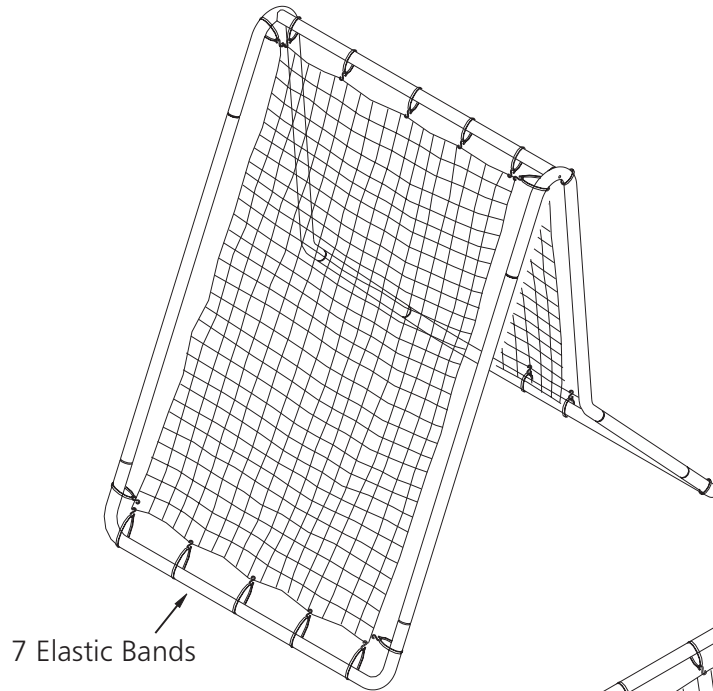 

7. Attach remaining elastic bands to net as shown.

 8. After attaching net to assembled frame, use anchor pegs to secure Kwik Back® rebounder to ground for optimal performance as shown.

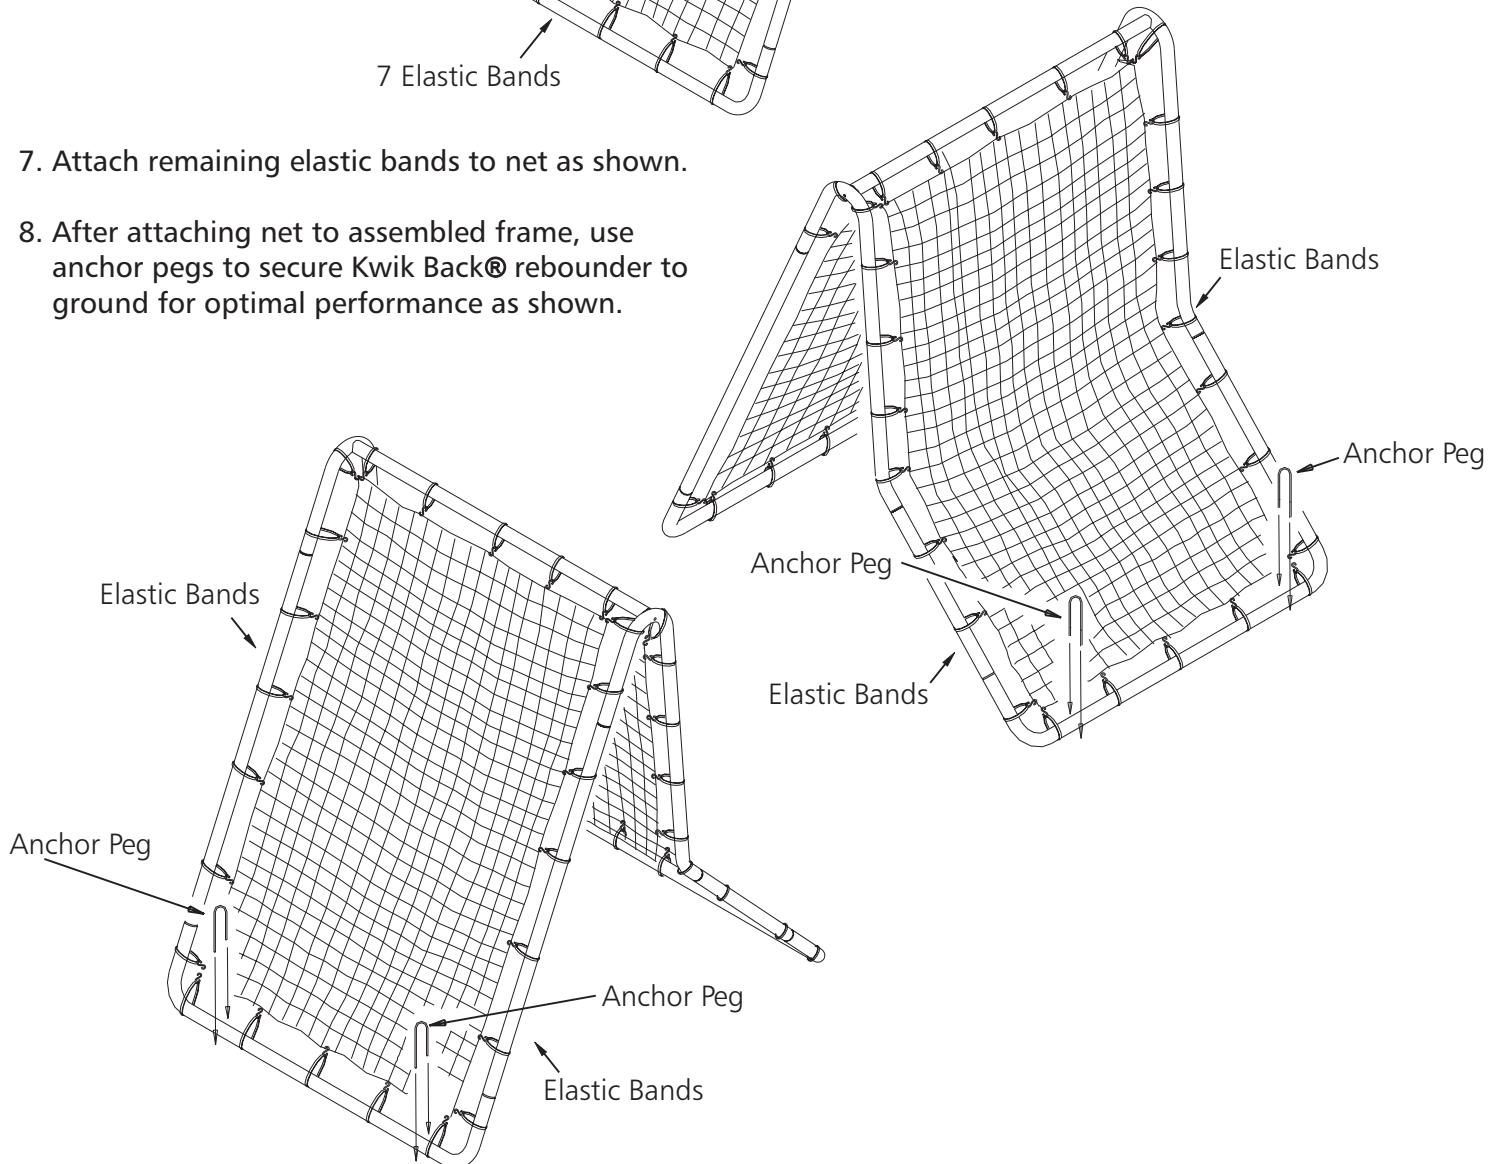

To view videos on Kwik Goal product instructions, drills and demos please visit kwikgoal.com/videos.