

 


Most Kwik Goal products carry a **Lifetime Guarantee**. For details or claims, visit kwikgoal.com or contact customer service at 1-800-531-4252.


ASSEMBLY INSTRUCTIONS FOR 7B101 SOCCER BACKSTOP

1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify trucking company immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
2. Read through entire instruction before beginning assembly and installation.


Upright (4)
(Part# UZ1124)



Ground Sleeve (4)
(Part#UZ803)

 


Ground Sleeve Cap (4)
(Part# UZ211)

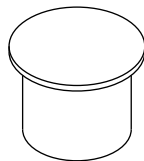


Rope Cleat (4)
(Part# VZ174)



 
Net Pegs (8)
(Part# VZ203)



Pulley Assembly (4)
(Part#'s TZ26, TZ214
and VZ80)

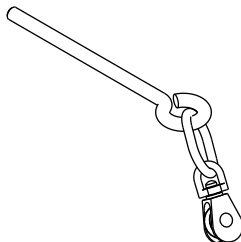

Net (1)
(Part# 3B2866)

 

Snap Link (4)
(Part# VZ189)



*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

140 Pacific Drive Quakertown, PA 18951
(P) 215- 536-2200 / (P) 800-531-4252 / (F) 215-536-4309 / (F) 800-778-8869
Visit our website @ kwikgoal.com
© 2001, Rev 2012 Kwik Goal Ltd.


Hardware

Note: Hardware may be packaged separately in one or more boxes. Open all packages before beginning assembly.


1/4" x 4-3/4" Hex Bolt (Part# TZ299)	(8)
1/4" Lock Nut (Part# TZ19)	(8)
5/16" Flat Washer (Part# TZ4)	(12)
5/16" Lock Nut (Part# TZ5)	(4)
38ft. Rope (Part# VZ641)	(4)

Assembly Tools


7/16" & 1/2"
Wrenches

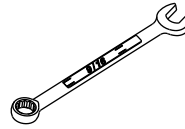

Ratchet with
7/16" & 1/2"
Sockets

 


Scissors

 

3. Assemble uprights as shown.


NOTE: Rope cleat is installed on opposite side of pulley to prevent interference with net.

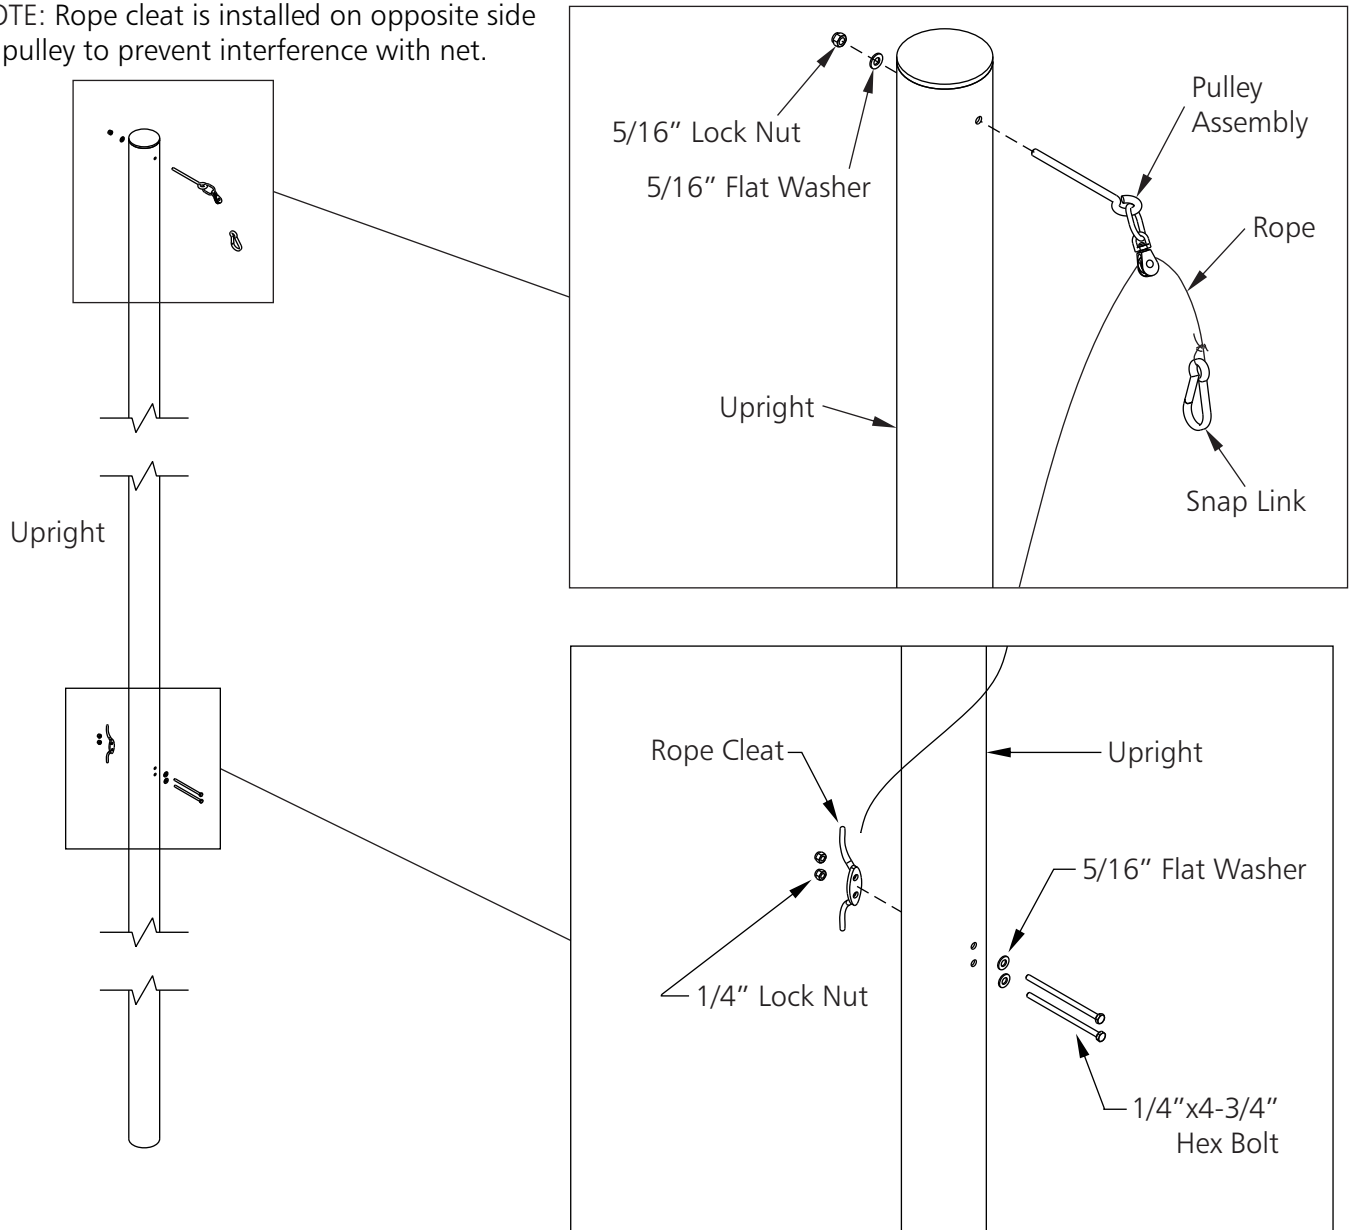

CAUTION

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.



4. Dig 4 holes a minimum of 49 1/4" deep and 24" across in locations shown. Prepare holes, set ground sleeves into holes, place upright into ground sleeve as shown.
5. Plumb and level all uprights and seal joint between ground sleeve and upright using tape (this will stop debris from entering ground sleeve during initial installation.)
6. Pour concrete to top of ground sleeves as shown and allow concrete to cure.

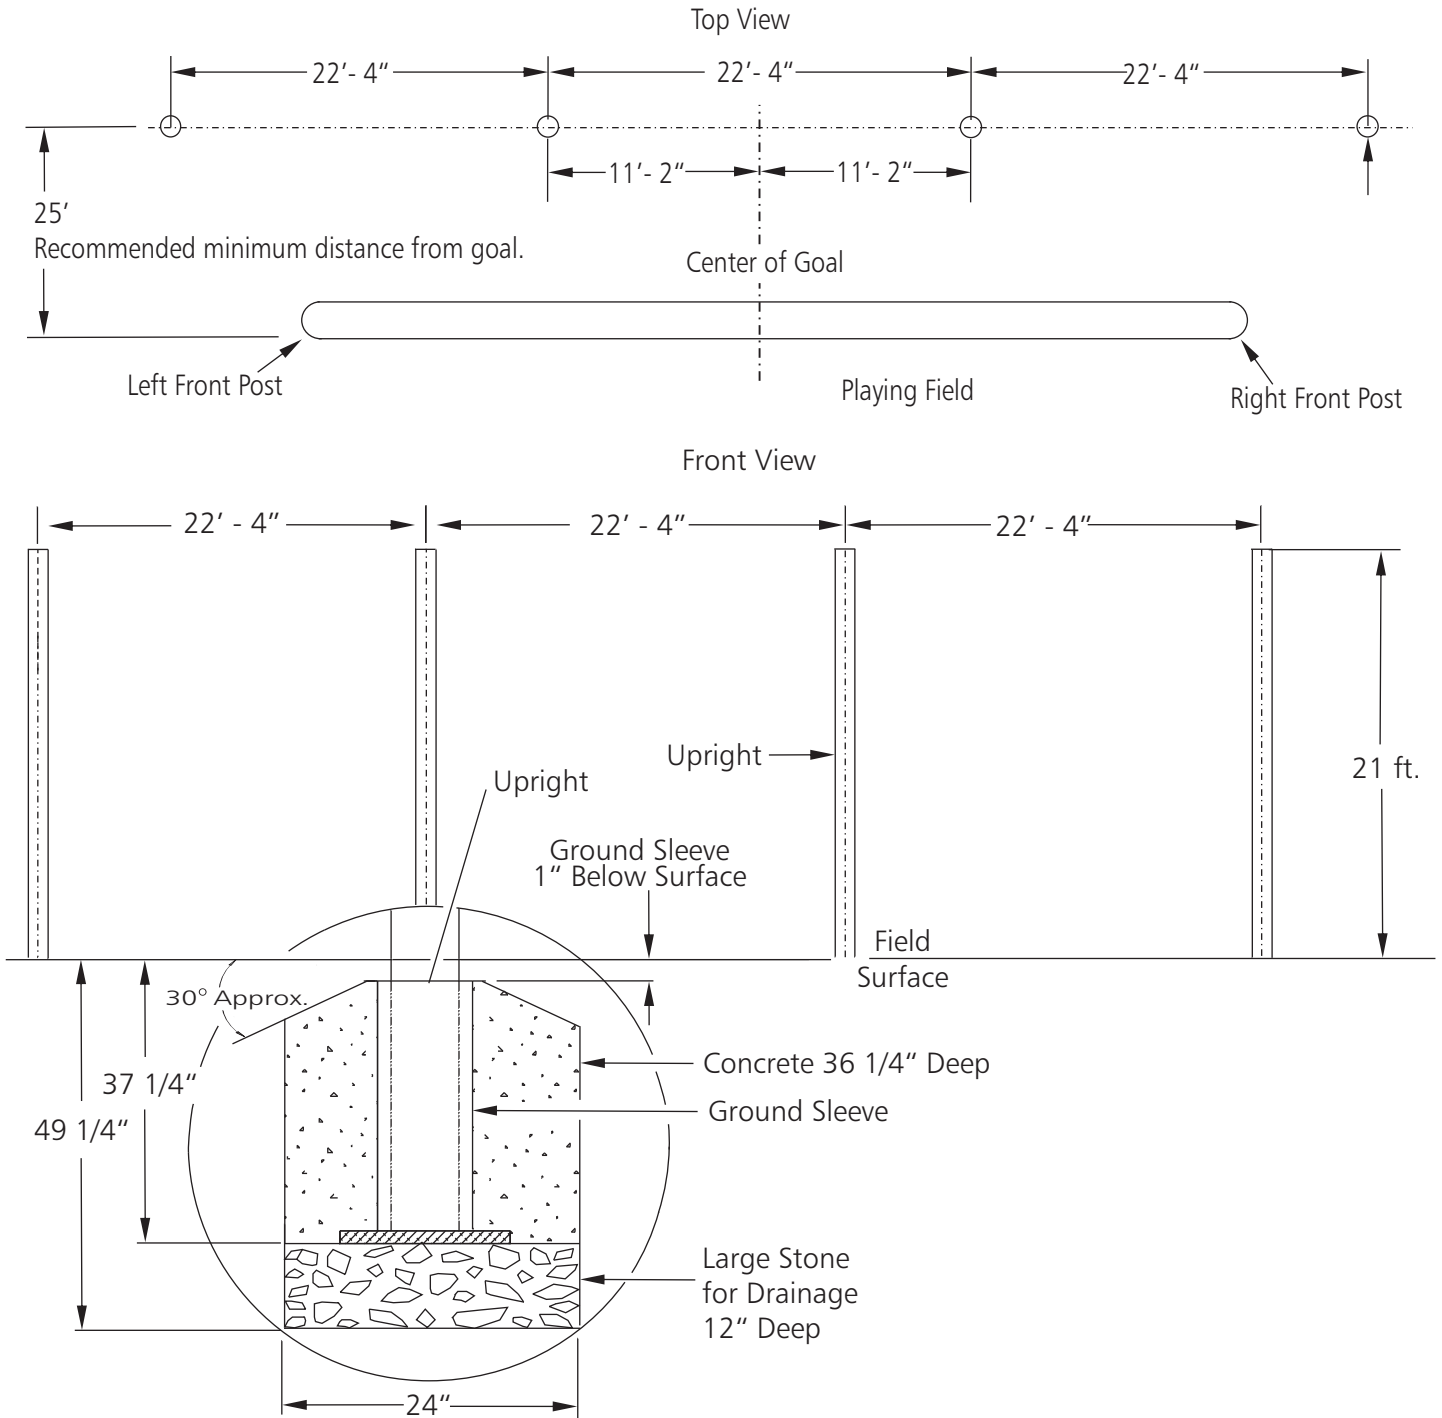

*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.




7. Unroll net in front of uprights and attach snap hooks to net.

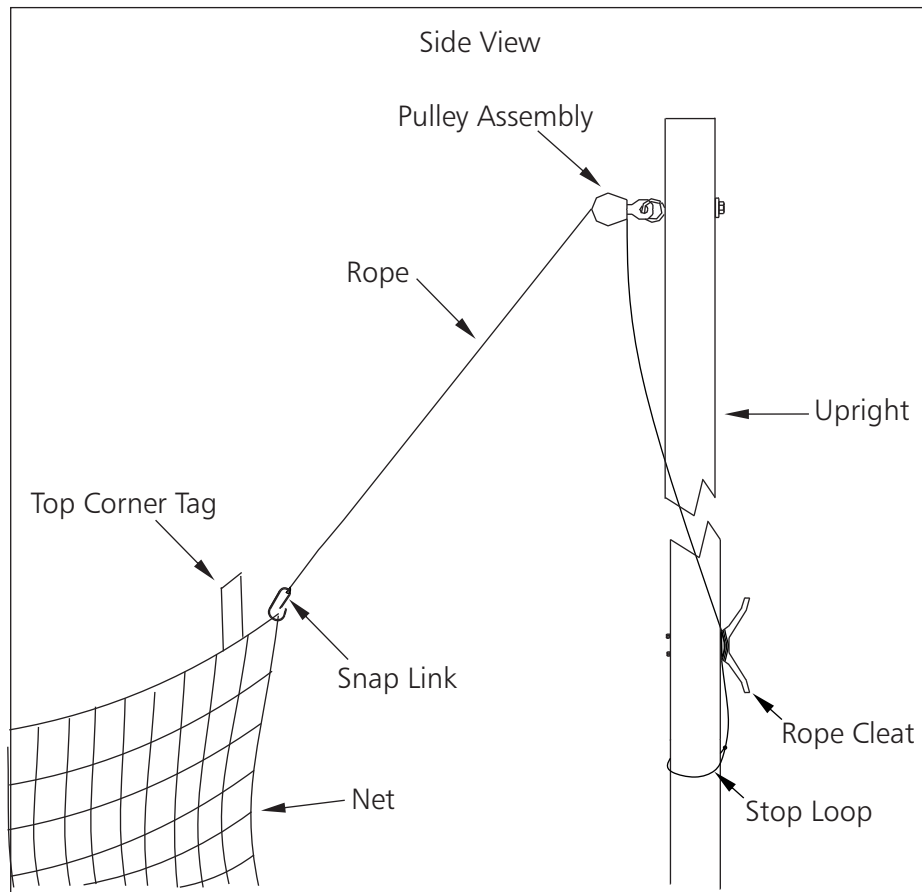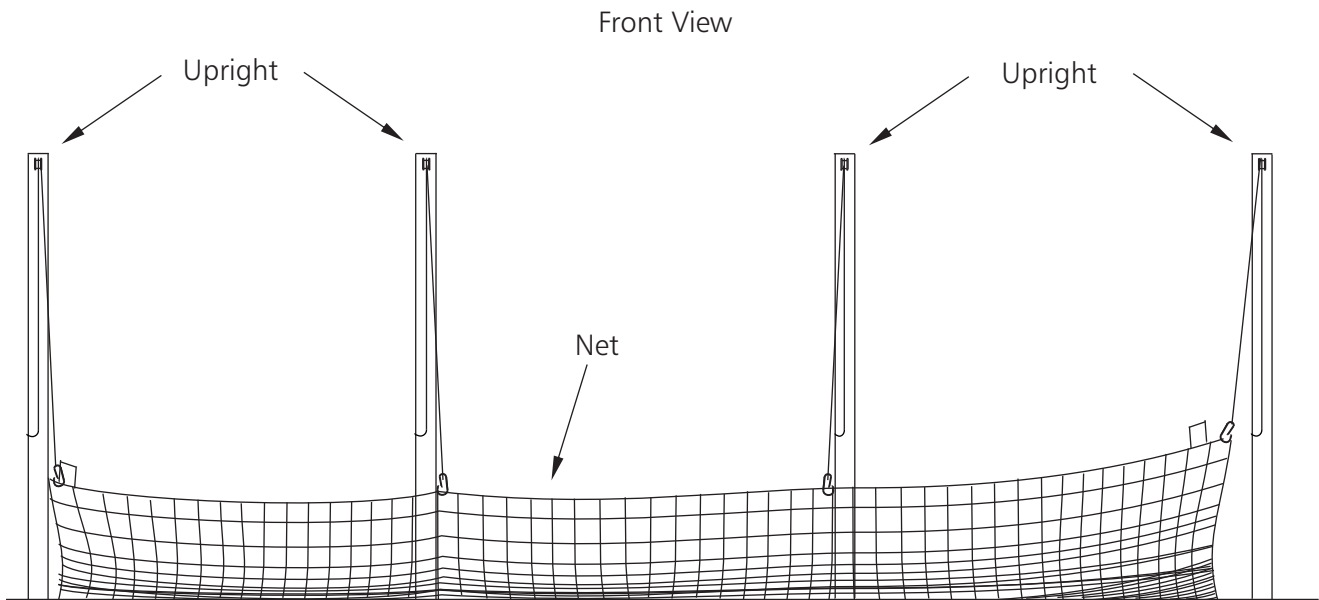

*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.


8. Starting at one end, hoist net. When fully raised secure rope to rope cleat and proceed to next upright. Continue this process until entire net is fully raised. Take free end of rope after rope is secured to rope cleat and tie a loose loop around each upright below rope cleat to form a stop loop (Side View previous page). This will prevent rope from inadvertently pulling through the pulley with the upright installed.

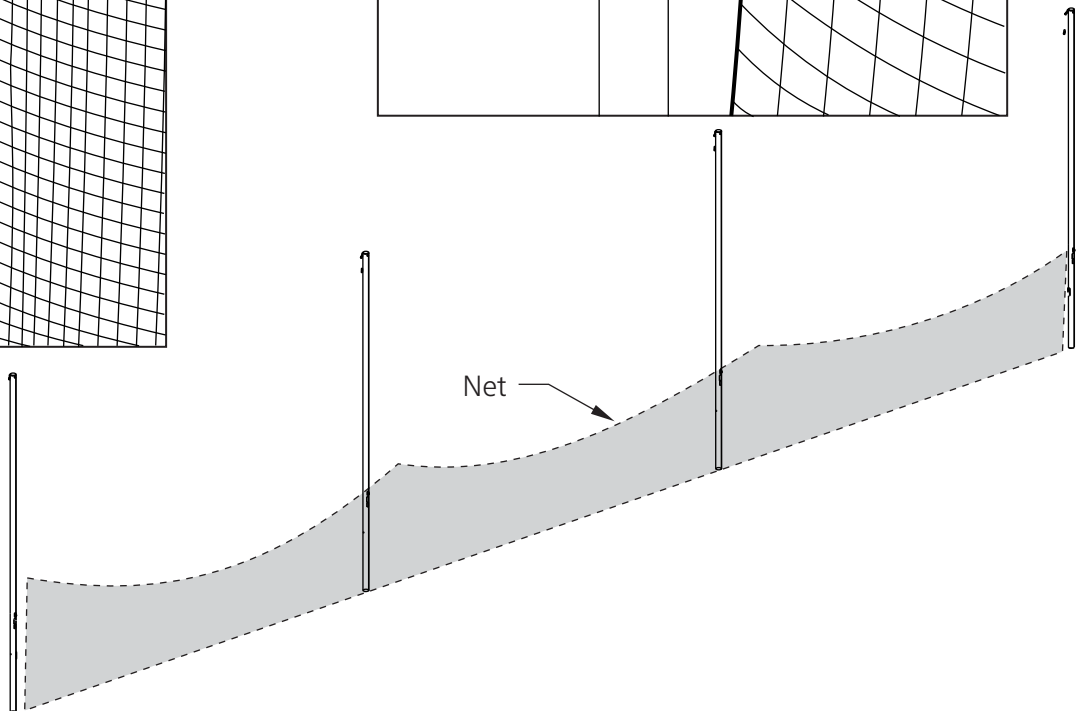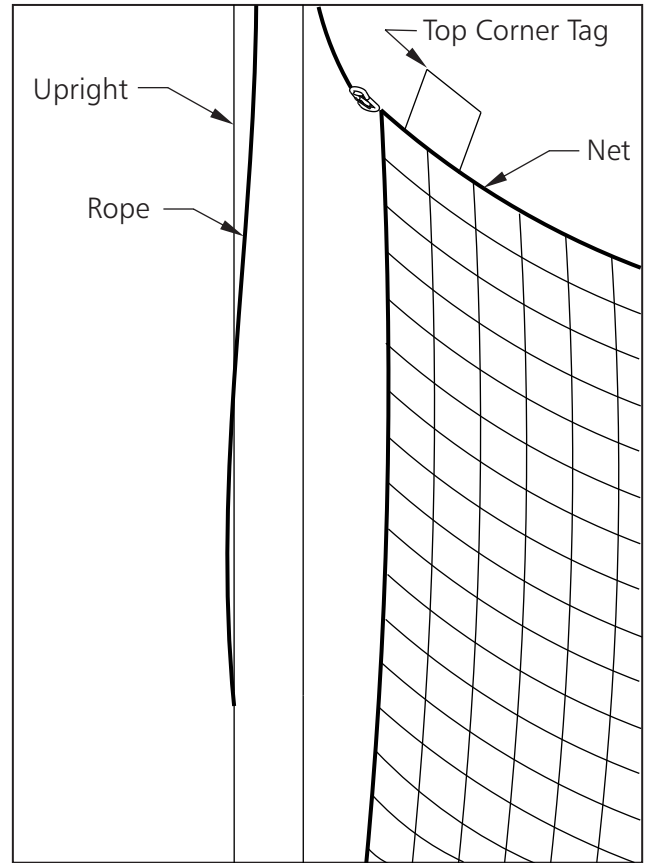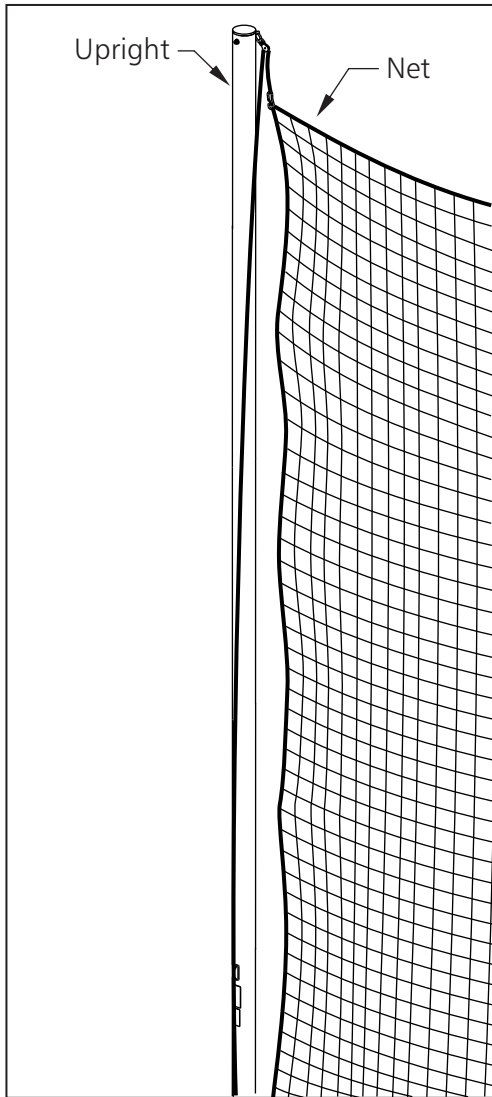

*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

9. Secure bottom of net with net pegs.

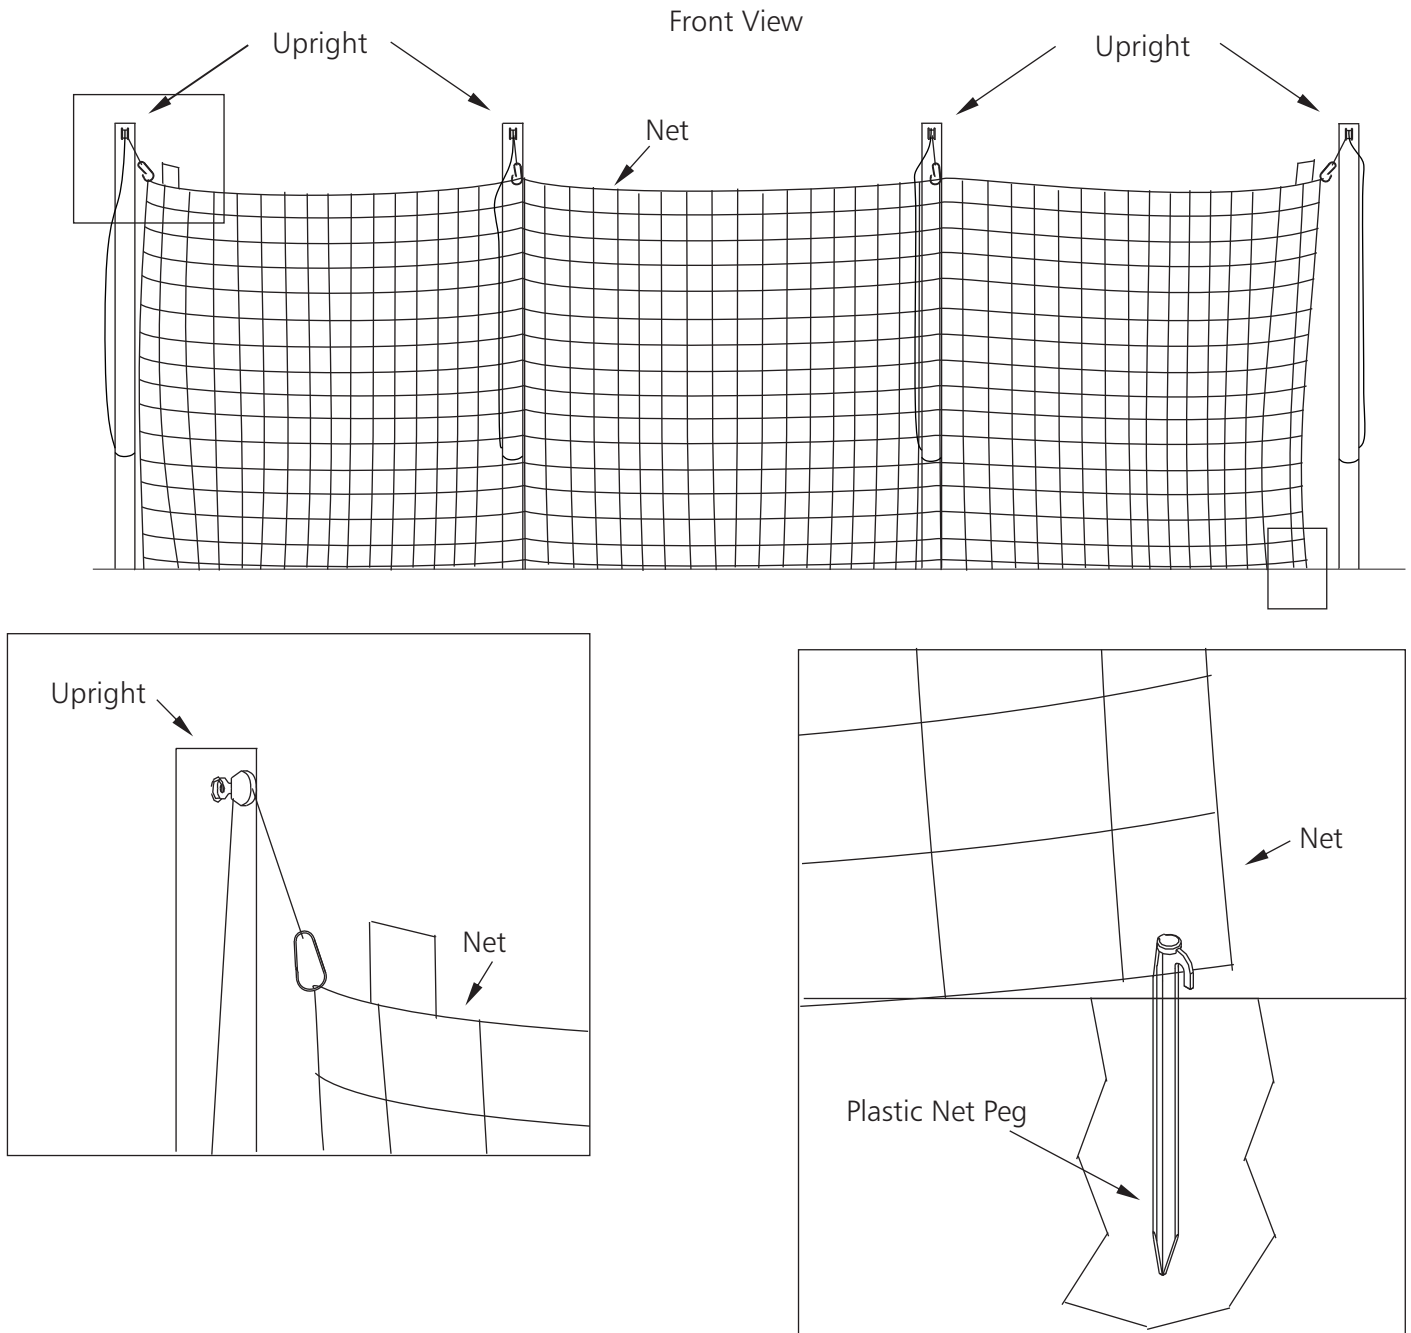

10. When removing uprights from ground sleeves be sure to install ground sleeve caps to prevent debris from entering.
11. After reassembly be sure to reseal the seam between upright and ground sleeve to prevent debris from entering.

*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.