



Warning

- Keep fingers away from hinges and joints
- To be used for restraining Base/Softballs only
- Not a toy, do not climb on net
- Must be used with adult supervision
- Must be either Staked or Weighted down using BowBags (not supplied)
- Don't drag. To move net, use two people.




Play Anywhere. - Play NOW!


Assembly Instructions for Portable Backstop




1. Hold Black hinges and place Orange Pocket on ground with Net spread out away from you. Then open frame laying both sides on ground

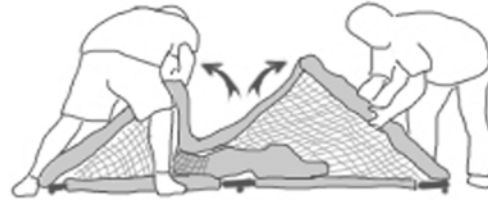

2. Open the two sides to a Vertical Position .

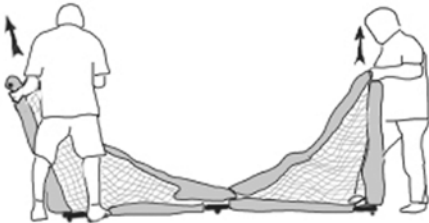


3. Holding the frame on the ground with your toes. Extend the side frames up until they Lock (click)

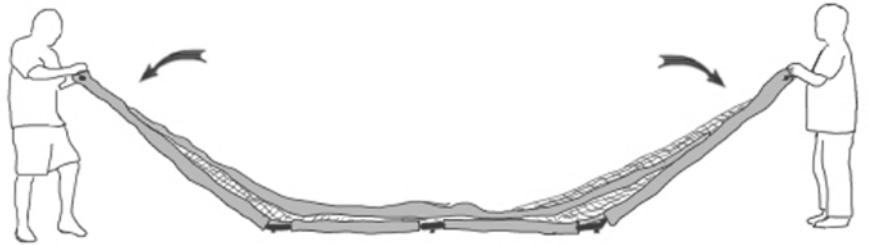

4. Next, continue to open both sides until they click. Then lay frame down on ground resting on rubber feet .




5. Take two of the thinner poles with couplings and join together (see A).

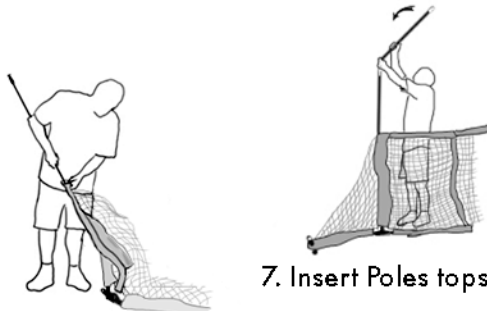

6. At the REAR of the net locate the orange sleeves and slide the poles down them, and into the tubes on the frame


7. Insert Poles tops.

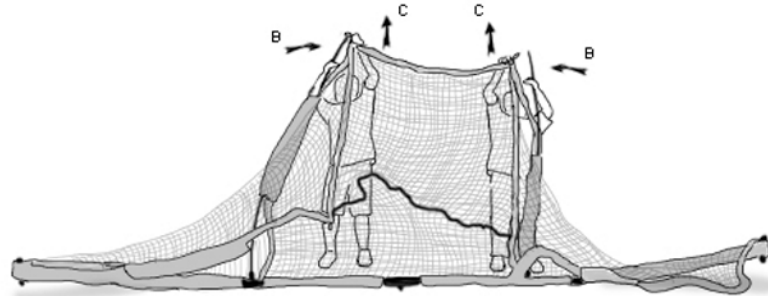

8. Pull rear pole toward you so you can reach tops of poles Push poles in (B) direction, whilst pulling net in (C) direction Place loops over poles tops.



8. Repeat with thicker poles down front Sleeves, Add top poles. Pull net towards you (using net itself) and connect loops over pole tops

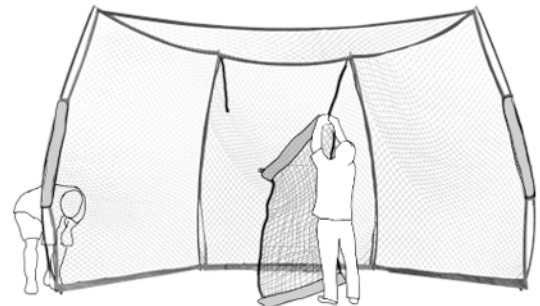

9. Stake the Net to ground via Bungees, Finally attach either baffle to protect backstop.

1 year limited Manufactures Warranty on Manufacturing defects only. 30 day money back guarantee. For a full description of Warranty-Guarantee-Terms & Conditions. See www.thebownet.com

Triad Sports Group LLC. 4690 Calle Quetzal Camarillo, California 93012 866.950.NETS