




INSTRUCTIONS FOR PROPER USE OF 10B1404 GROUND ANCHOR PEGS

1. Ground anchor pegs must be driven completely into the ground (see illustration.)
2. After fully anchoring goal, test in accordance with step 5 of this instruction.
3. If ground anchor pegs become dislodged, longer ground anchor pegs must be used.
4. After installing longer ground anchor pegs, re-test in accordance with step 5. If ground anchor pegs become dislodged, alternative anchoring methods must be used.

NOTE: Soft ground conditions will constitute the use of more permanent anchoring systems. Do not reuse holes made by ground anchor pegs for reinstallation. The goal must be moved so ground anchor pegs are driven into undisturbed soil each time they are used. Do not use ground anchor pegs on unattended goals. Goals with ground anchor pegs must be stored when not in use. Do not use this equipment during the threat of high winds.

CAUTION: GOALS MUST BE PROPERLY ANCHORED OR STORED AT ALL TIMES.

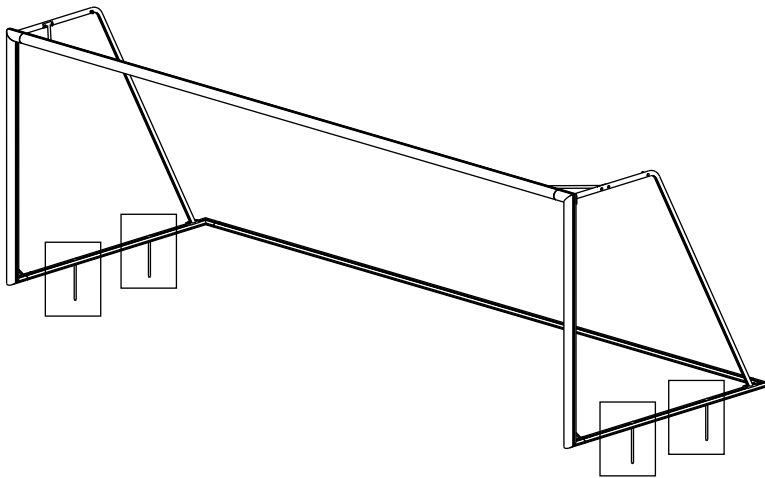

*****CAUTION*****

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.




IMPORTANT GOAL SAFETY INSTRUCTIONS
READ CAREFULLY

1. Check for structural integrity and proper connecting hardware before every use. Replace damaged or missing parts or fasteners immediately.
2. Safety/Warning labels must be clearly visible.
3. Securely anchor moveable goals at ALL times.
4. Always instruct players, managers, coaches, trainers, teachers, maintenance workers and all other personnel who might come in contact with the goal, on the safe handling of and potential dangers associated with moveable goals.
5. Always exercise extreme caution when moving goals and provide adequate manpower to move goals of varied sizes and weights. Moveable goals should only be moved by authorized personnel.
6. NEVER allow anyone to climb on the net or goal framework.
7. Moveable goals should only be used on LEVEL fields, NEVER on a slope or hill area.
8. Remove nets when goals are not in use.
9. Most tip-over injuries occur when goals are unattended. Anchor or chain one goal to another or to nearby fence posts, dugouts, or any other similar sturdy fixture when not in use. If this is not practical, store moveable goals in a place where children cannot have access to them.
10. Fully disassemble goals for seasonal storage.

5. After installing, test as described below to verify effectiveness of anchor system.

ANCHOR TEST

1. Clear all persons from a minimum 50 foot radius surrounding the goal.
2. Verify goal is attached to anchors according to instruction.
3. Apply a horizontal pull force of 247 lbs. to the center of the crossbar for 60 - 70 seconds.
Full safety precautions must be taken while performing test.
4. If goal overturns during application of force or does not return to an upright position after removing force, an alternate anchoring system must be used

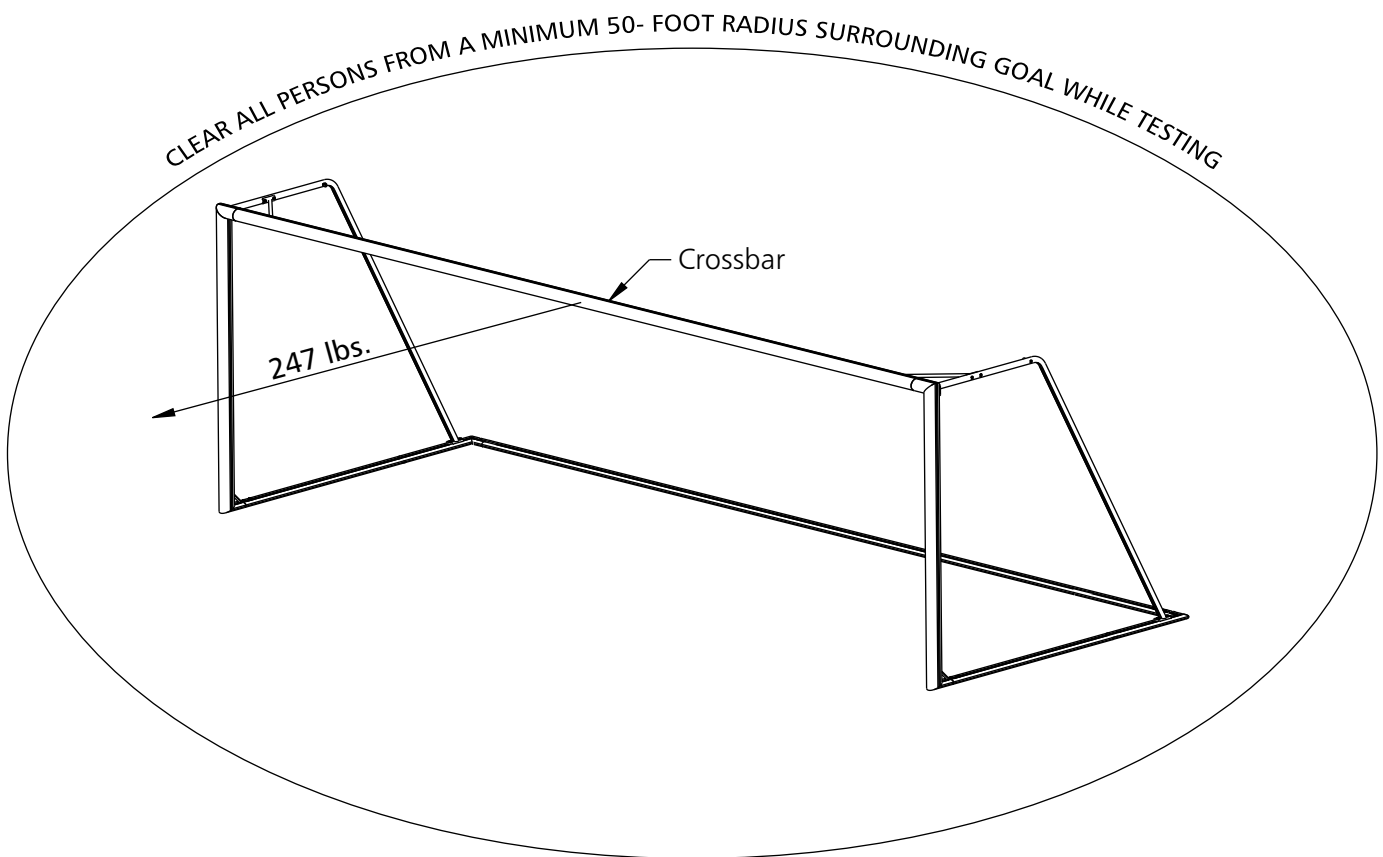

Go to kwikgoal.com for additional product information.

CAUTION

All sports equipment must be anchored at all times. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use this equipment during the threat of high winds. Sports equipment should be checked for safety on a regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.