




ASSEMBLY INSTRUCTIONS FOR 10B4608 GOAL ANCHOR WEIGHTS


1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify Kwik Goal immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
2. Read through entire instruction before beginning assembly and installation.

Parts


Anchor Weight (4)
(Part# UZ1683)

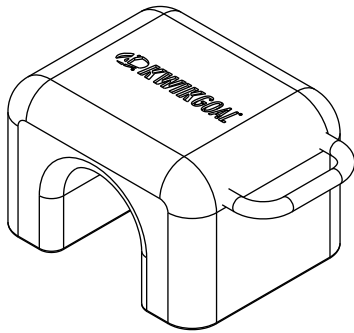

Rubber Pad (12)
(Part# VZ888-01)

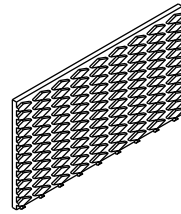

3. Peel backing off rubber pad, place on the inside in the center of both sides and top of anchor weights as shown.

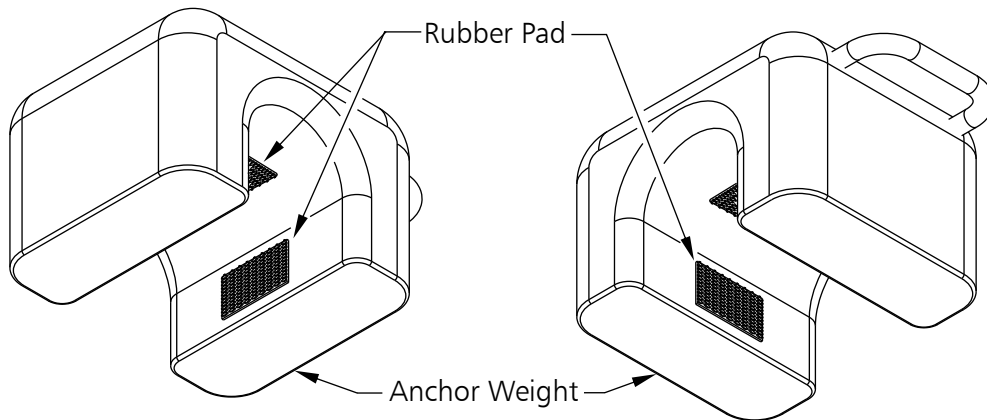

CAUTION

All sports equipment must be anchored at all time. Sports equipment must have the proper amount of counterbalance weight and be attached in locations stated by Kwik Goal instructions. Do not move sport equipment with counterbalance weight attached. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use any sports equipment during the threat of high winds. Sports equipment should be checked for safety on regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.




⚠ WARNING

IMPORTANT GOAL SAFETY INSTRUCTIONS
READ CAREFULLY

1. Check for structural integrity and proper connecting hardware before every use. Replace damaged or missing parts or fasteners immediately.
2. Safety/Warning labels must be clearly visible.
3. Securely anchor movable soccer goals at ALL times.
4. Always instruct players, managers, coaches, trainers, teachers, maintenance workers and all other personnel who might come in contact with the goal, on the safe handling of and potential dangers associated with movable soccer goals.
5. Always exercise extreme caution when moving goals and provide adequate manpower to move goals of varied sizes and weights. Movable soccer goals should only be moved by authorized personnel.
6. NEVER allow anyone to climb on the net or goal framework.
7. Movable soccer goals should only be used on LEVEL fields, NEVER on a slope or hill area.
8. Remove nets when goals are not in use.
9. Most of the tip-over injuries occurred when goals were unattended. Anchor or chain one goal to another or to nearby fence posts, dugouts, or any other similar sturdy fixture when not in use. If this is not practical, store movable soccer goals in a place where children cannot have access to them.
10. Fully disassemble goals for seasonal storage.

4. If net is already attached, unclip net from back bottom bar or crossbar. Set anchor weight over back bottom bar or crossbar at four evenly spaced locations as shown. Clip net to goal as close to the anchor weight as possible.

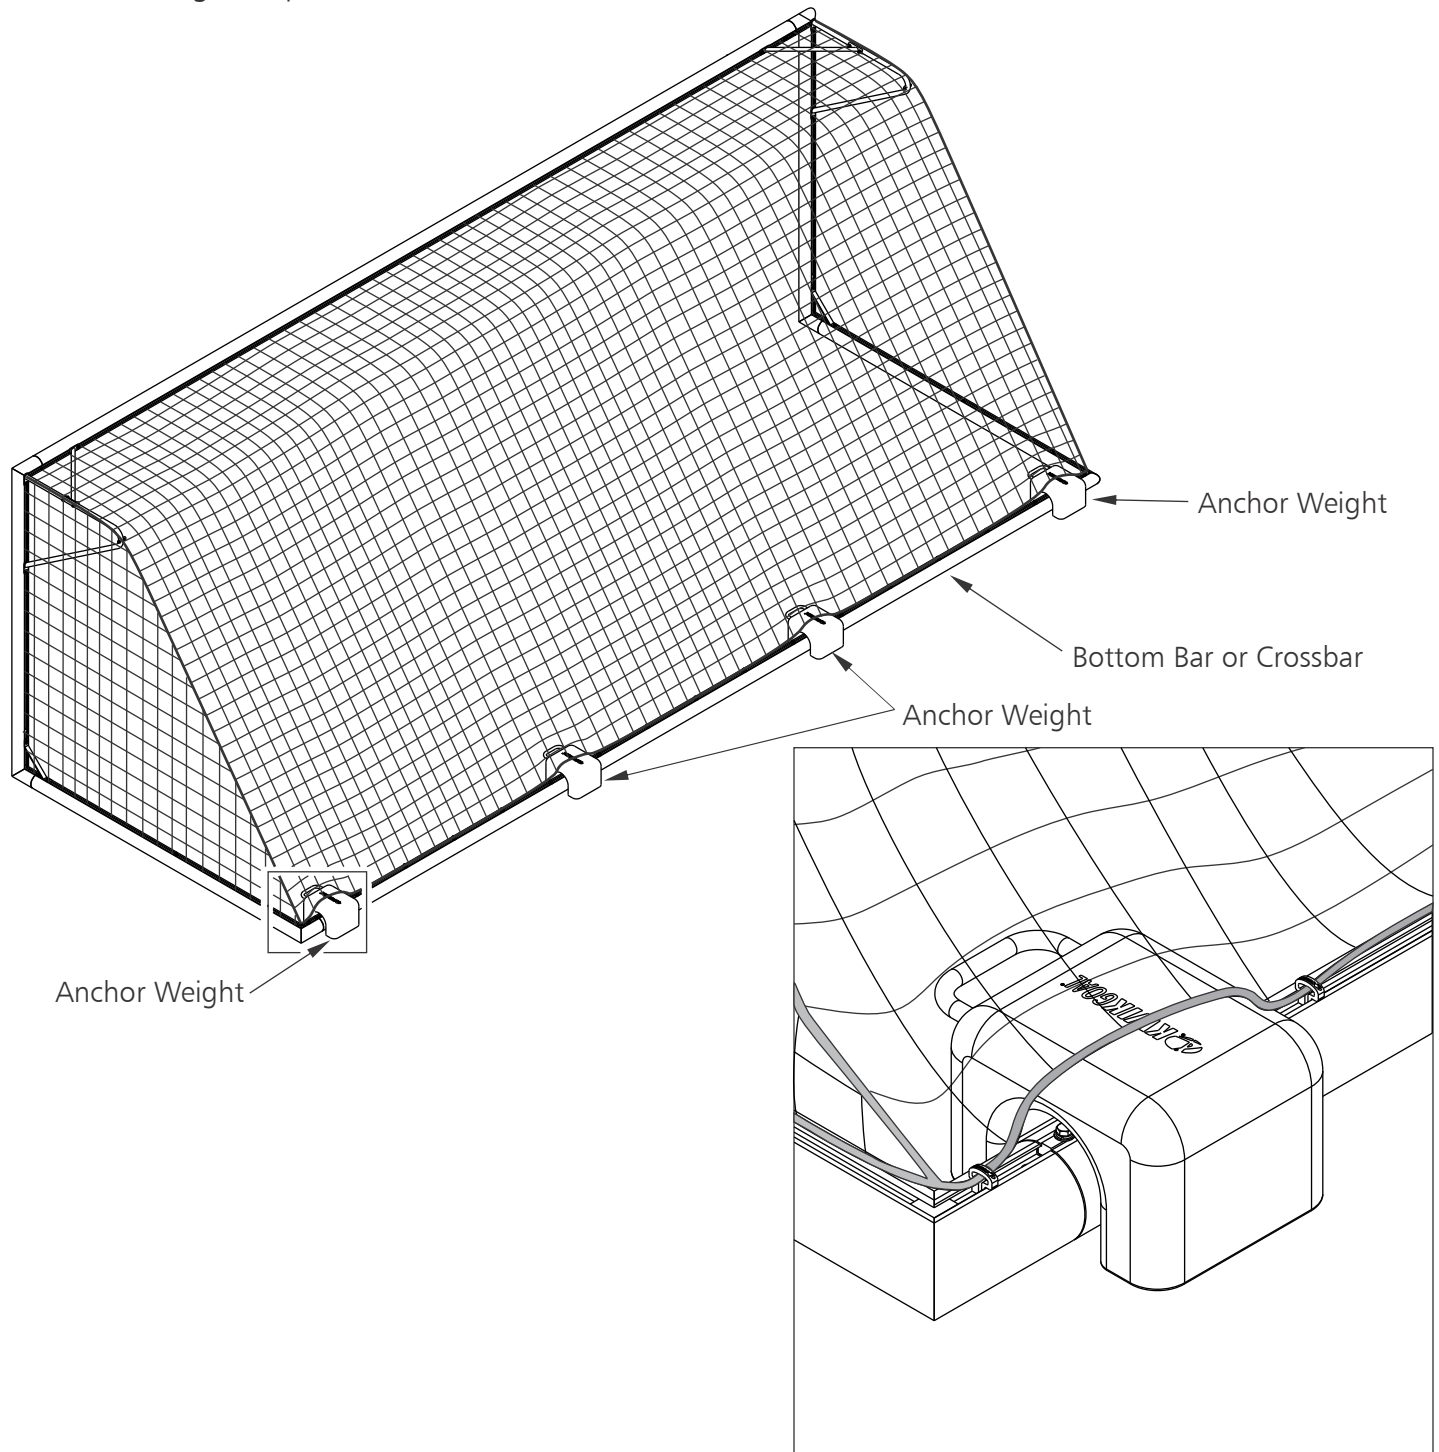


*****CAUTION*****

All sports equipment must be anchored at all time. Sports equipment must have the proper amount of counterbalance weight and be attached in locations stated by Kwik Goal instructions. Do not move sport equipment with counterbalance weight attached. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use any sports equipment during the threat of high winds. Sports equipment should be checked for safety on regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.

5. After installing, test as described below to verify effectiveness of anchor system. If applicable, allow concrete to fully cure before testing.

ANCHOR TEST

1. Clear all persons from a minimum 50 foot radius surrounding the goal.
2. Verify goal is attached to anchors according to instruction.
3. Apply a horizontal pull force of 247 lbs. to the center of the crossbar for 60 - 70 seconds.
Full safety precautions must be taken while performing test.
4. If goal overturns during application of force or does not return to an upright position after removing force, an alternate anchoring system must be used

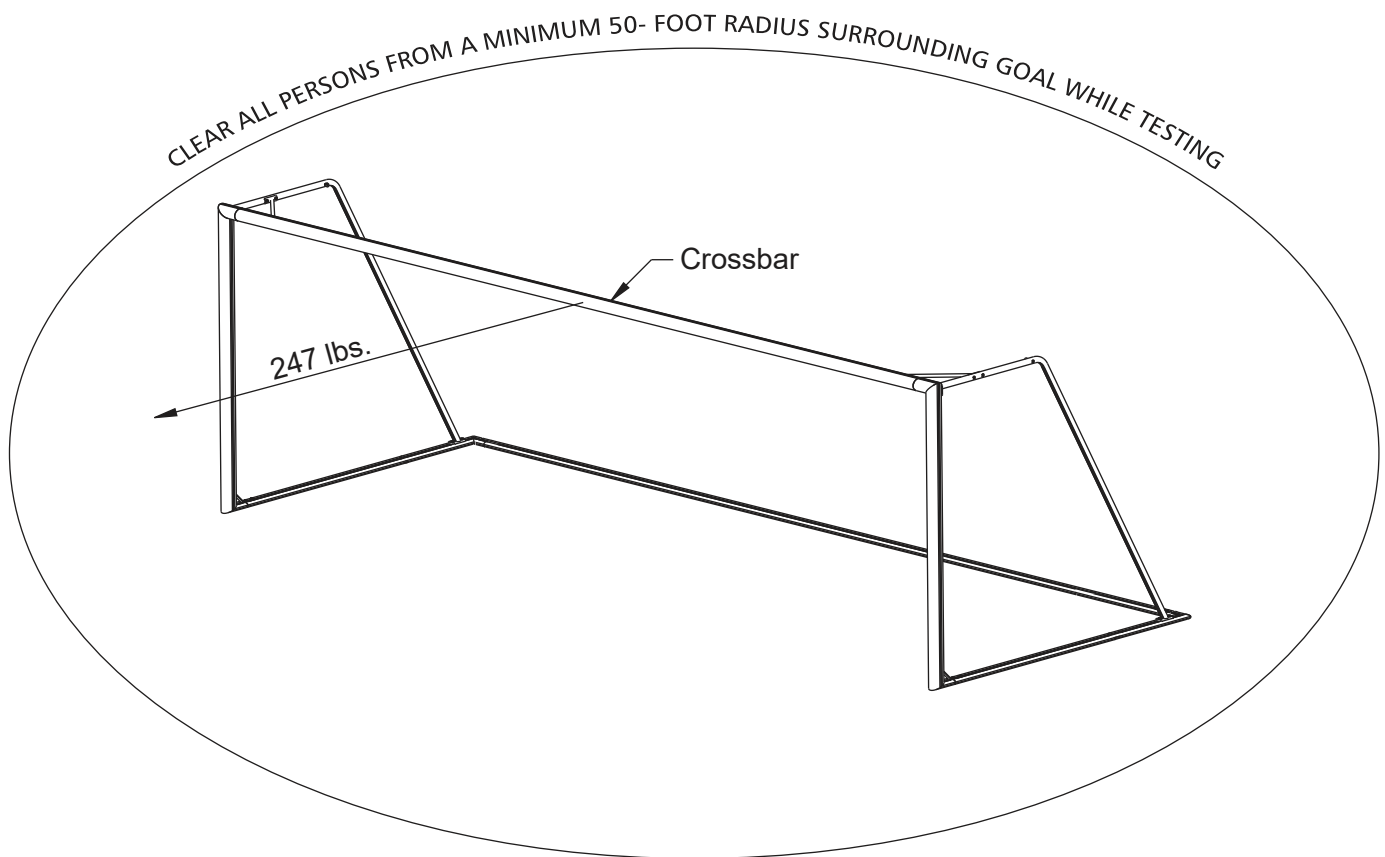

Go to kwikgoal.com for additional product information.

CAUTION

All sports equipment must be anchored at all time. Sports equipment must have the proper amount of counterbalance weight and be attached in locations stated by Kwik Goal instructions. Do not move sport equipment with counterbalance weight attached. Sports equipment not in use must be disassembled and stored in a safe, secure place. Assembled sports equipment should not be left unattended. Do not use any sports equipment during the threat of high winds. Sports equipment should be checked for safety on regular basis. Any modifications to this or any Kwik Goal product will void any and all warranties.