




ROGGEERS

For the Perfection of Football Fundamentals™

PRODUCT INFORMATION PACKET

PRODUCT NAME: ZONE REACTOR

PRODUCT PART NUMBER: 410474

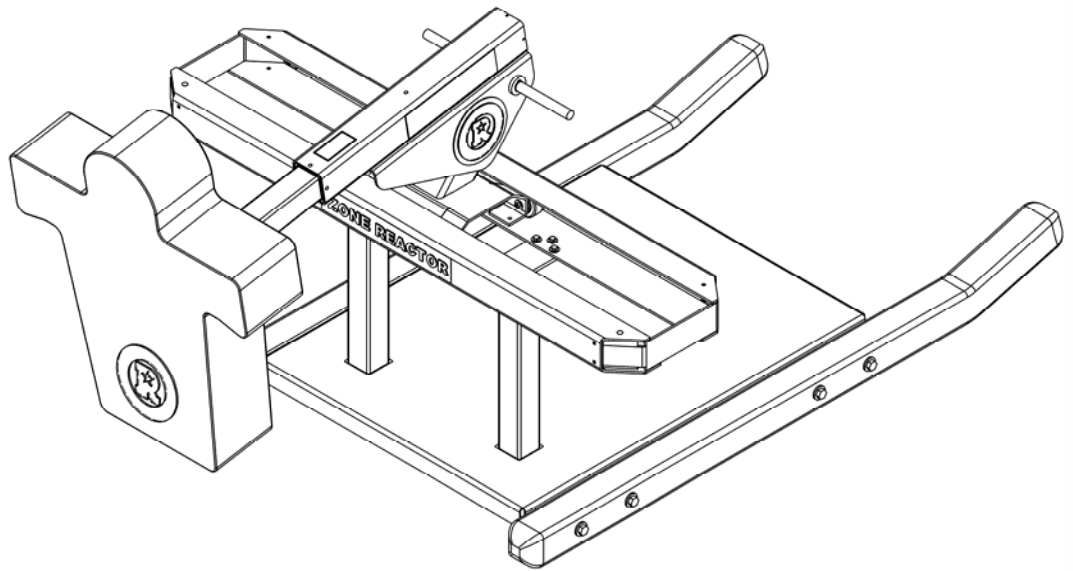

KEEP INFORMATION PACKET FOR FUTURE REFERENCE

TABLE OF CONTENTS

- Introduction..... 1
- General Safety Rules.....2
- Symbols..... 3
- Technical Specifications..... 4
- Assembly Instructions.....5
- Maintenance.....6
- Customer Service Information..... 7

INTRODUCTION

The Rogers Athletic Zone Reactor has been designed and manufactured with safety, performance and dependability as top priorities, making it easy to operate and maintain.

The care you give your Zone Reactor will greatly determine your satisfaction with its performance and service life. Careful study of this manual is encouraged to obtain a thorough understanding of your new Zone Reactor and its functions and maintenance.

If your manual becomes lost or destroyed, Rogers Athletic will gladly provide you with a new copy. Should you require additional information or assistance, please feel free to contact us at 1-800-457-5337.

BECAUSE ROGERS ATHLETIC MAINTAINS AN ONGOING PROGRAM OF
PRODUCT DEVELOPMENT AND IMPROVEMENT, WE RESERVE THE RIGHT
TO MAKE IMPROVEMENTS IN DESIGN OR CHANGES IN SPECIFICATIONS
WITHOUT INCURRING ANY OBLIGATIONS TO INSTALL THEM ON UNITS
PREVIOUSLY SOLD.

GENERAL SAFETY RULES



WARNING!






READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions listed below may result in serious personal injury.

SAVE THESE INSTRUCTIONS


- **Read the Product Information Packet.** Failure to read the information packet is considered a misuse of this equipment.
- **Inspect equipment prior to use. DO NOT use if it appears damaged or inoperable.**
- **Obtain a medical exam prior to beginning any new physical activity.** Use equipment only if properly fit to engage in physical activity.
- **Stop physical activity if you feel faint, dizzy, or experience pain at any time and consult your physician.**
- **Use field equipment in a supervised environment.**
- **Keep body and clothing free from and clear of all moving parts**
- **Stay clear of all pinch points**
- **Become familiar with all caution and warning decals affixed to the field equipment before use.**
- **Never cover or deface caution/warning labels.**
- **Save these instructions.** Refer to them frequently and use them to instruct others who may use the Zone Reactor. If you loan someone your Zone Reactor, loan them these instructions also.
- **Always wear a helmet when using the Zone Reactor.**

SYMBOLS

	<p>Safety Alert: Precautions that involve your safety.</p>
<div data-bbox="196 579 638 785">  <div data-bbox="407 579 638 785"> <p>⚠ WARNING</p> <p>Pinch Point. Keep hands and fingers clear.</p> </div> </div>	<p>Pinch Point Symbol: Failure to keep hands away from pinch points may result in personal injury.</p>
<div data-bbox="196 867 638 1073">  <div data-bbox="407 867 638 1073"> <p>⚠ WARNING</p> <p>Read and understand operator's manual and all other safety instructions before using this equipment.</p> </div> </div>	<p>Read the Operator's Manual: To reduce risk of injury, user must read and understand operator's manual before using this product.</p>
<div data-bbox="196 1152 638 1358">  <div data-bbox="407 1152 638 1358"> <p>⚠ WARNING</p> <p>Avoid Injury. Do not climb.</p> </div> </div>	<p>Do Not Climb Warning Label: To reduce risk of injury, do not climb on equipment.</p>
<div data-bbox="196 1440 638 1646">  <div data-bbox="407 1440 638 1646"> <p>⚠ DANGER</p> <p>Crush Hazard. Keep hands clear while operating.</p> </div> </div>	<p>Crush Hazard Danger Label: Failure to keep hands clear of crush hazards may result in personal injury or dismemberment.</p>

ROGERS ATHLETIC ZONE REACTOR SPECIFICATIONS

ZONE REACTOR

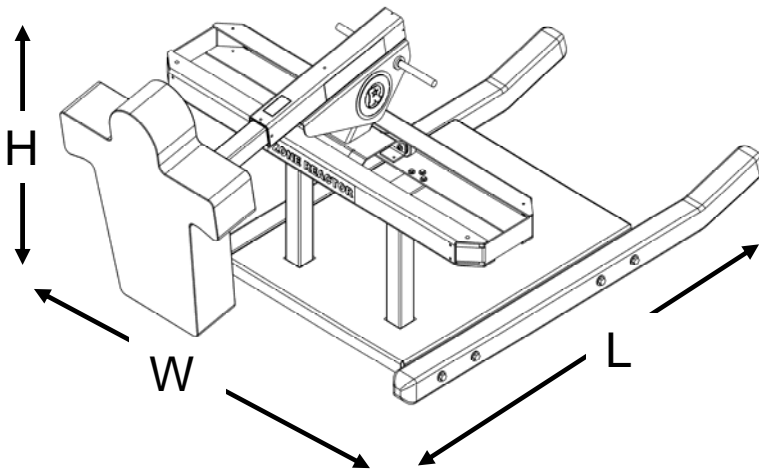


Weight: 475 lbs (215 kg)
Height: 45" (115cm)
Length: 84" (213cm)
Width: 66" (168cm)

- Roll the Pad along a 5 foot track while players master reaction skills.
- Exclusive Lev Sled Head helps develop proper drive technique and adds another dimension to your drills for more realism.
- Height adjusts 15" inches to accommodate players of all sizes.
- Easy rolling urethane wheels with sealed bearings offer maintenance-free durability.
- Large, diamond plate base provides stable platform for coach or instructor to analyze drills and control the action of the pad.

Zone Reactor™ Construction, Finish, and Hardware


- Constructed of ASTM specified steel.
- Baked-on powder coat finish.
- Pads covered with durable weather-resistant vinyl.
- Zinc-plated hardware.
- Pad glides on eight 3" urethane caster wheels rated at 300lbs each.

1

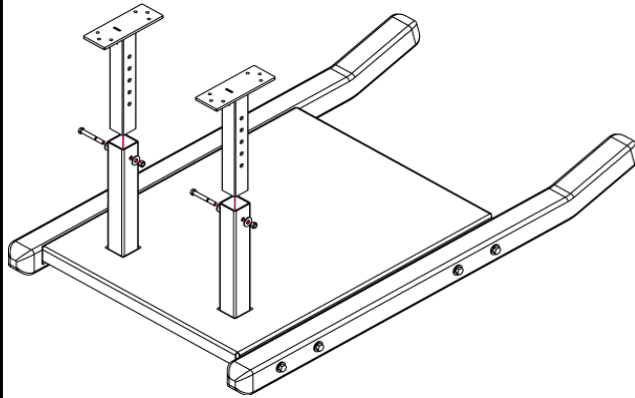


Slide Zone Reactor Insert Posts into the Reactor Base Sub Assembly tubes and fasten with (2) $\frac{1}{2}$ " x 4" bolts, (2) $\frac{1}{2}$ " nuts, and (4) $\frac{1}{2}$ " washers. Be sure insert posts are at the same height.

2

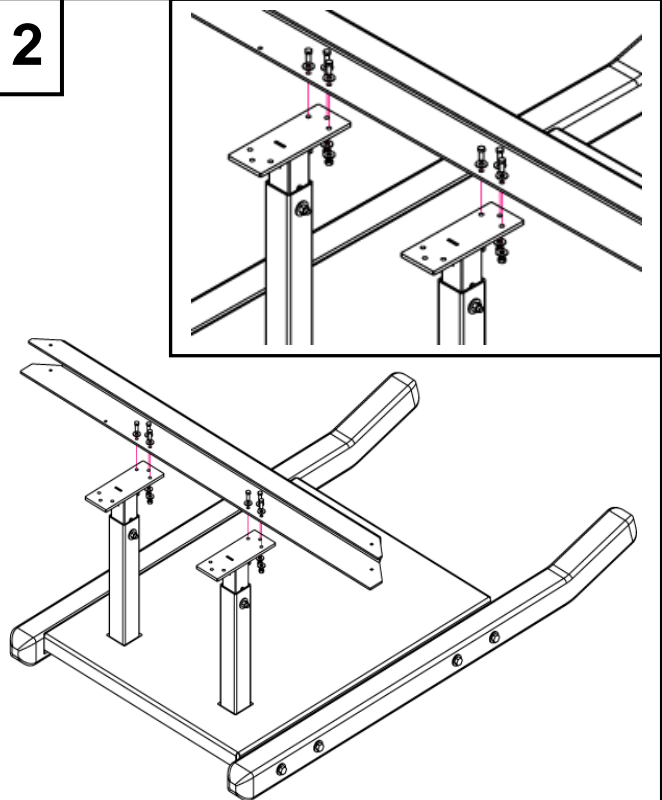


Install Zone Reactor Channels with (12) $\frac{3}{8}$ " x 1" bolts, (12) $\frac{3}{8}$ " lock nuts, and (24) $\frac{3}{8}$ " washers.

3

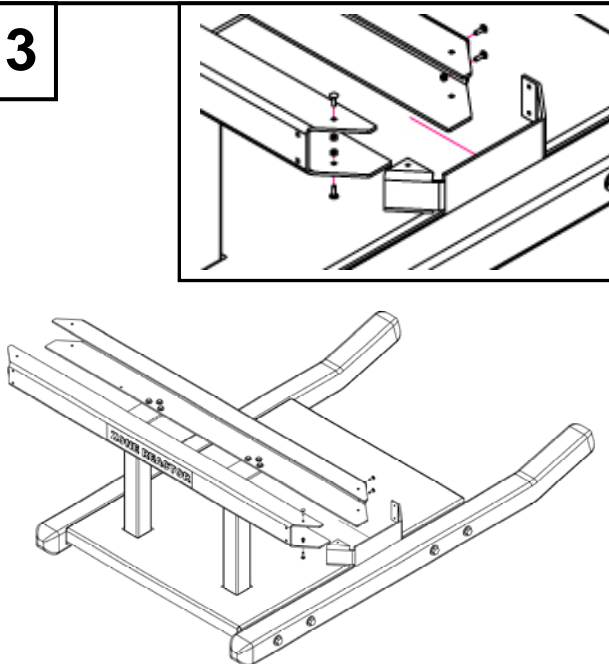


With Channels in place, install (1) Zone Reactor End Cap using (4) $\frac{1}{4}$ " x $\frac{3}{4}$ " carriage bolts and (4) $\frac{1}{4}$ " nuts. Make sure triangle flanges on end cap face forward as shown, to ensure proper function and wear of the wheels.


4

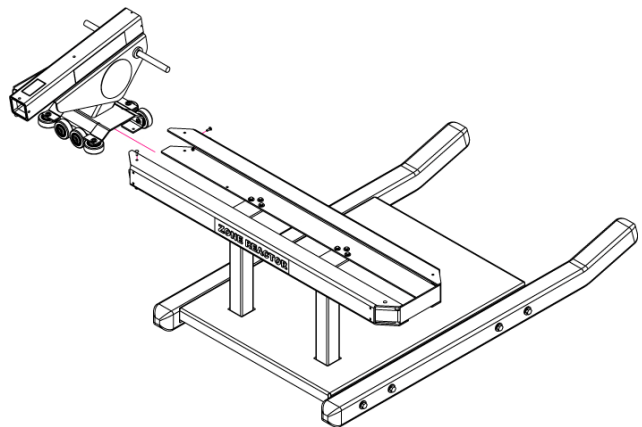

Roll Zone Reactor Head Sub-Assembly into channels and install the other End Cap as in step 3.

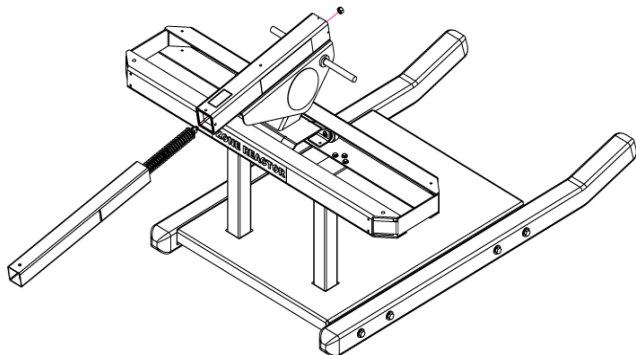5

The Lev Ram Unit comes with (3) nuts on the threaded rod at the end of the spring. Remove (2) nuts to use later. Install the Lev Ram Unit by inserting it spring side first into the Lev Head Unit. The threaded rod on the end of the spring fits through a hole at the back of the Head Unit. Use the nuts you removed earlier to secure the ram in place.

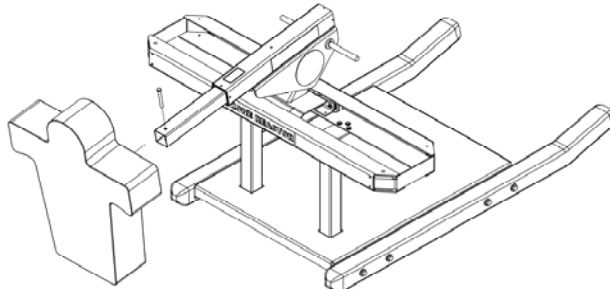6

Attach the chosen pad to the ram unit by sliding pad over ram and inserting fas-pin.

MAINTENANCE



WARNING!

READ AND UNDERSTAND ALL MAINTENANCE PROCEDURES.

Failure to follow all procedures listed below may cause serious injury and/or a decrease in equipment functionality.

- Frequently check to see that all bolts are securely fastened.
- Touch up paint may be used to cover scratches or blemishes sustained through use.
- Field equipment should be washed periodically with soapy water to maintain original surface finish.
- A silicone based lubricant may be used on moving parts to maintain proper function.
- Replace any damaged equipment with genuine Rogers Athletic parts. Failure to do so may result in unsafe equipment and/or personal injury.
- Brush dirt and grit from Zone Reactor tracks to prolong the life of the wheels.
- Take pad inside after use.

CUSTOMER SERVICE

For parts or service contact Rogers Athletic Company. When ordering parts be sure to provide all relevant information available including the name and part number of the equipment purchased. This information is located on the cover of this product information package. Customer service hours are Monday through Friday from 8:00 a.m. to 5:00 p.m. Eastern Standard Time. Customers can phone (989) 386-2950 or toll free at (800) 457-5337. Fax toll free at (888) 549-9659 or mail to:

Rogers Athletic Company
3760 W. Ludington Drive
Farwell, MI 48622

Rogers Athletic Company
3760 N. Ludington Drive
Farwell, MI 48622
www.rogersathletic.com
(989) 386-2950
(800) 457-5337
Fax toll free (888) 549-9659