




ASSEMBLY INSTRUCTIONS FOR 7A601 KWIK FLEX BACKSTOP


1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify trucking company immediately.

Parts

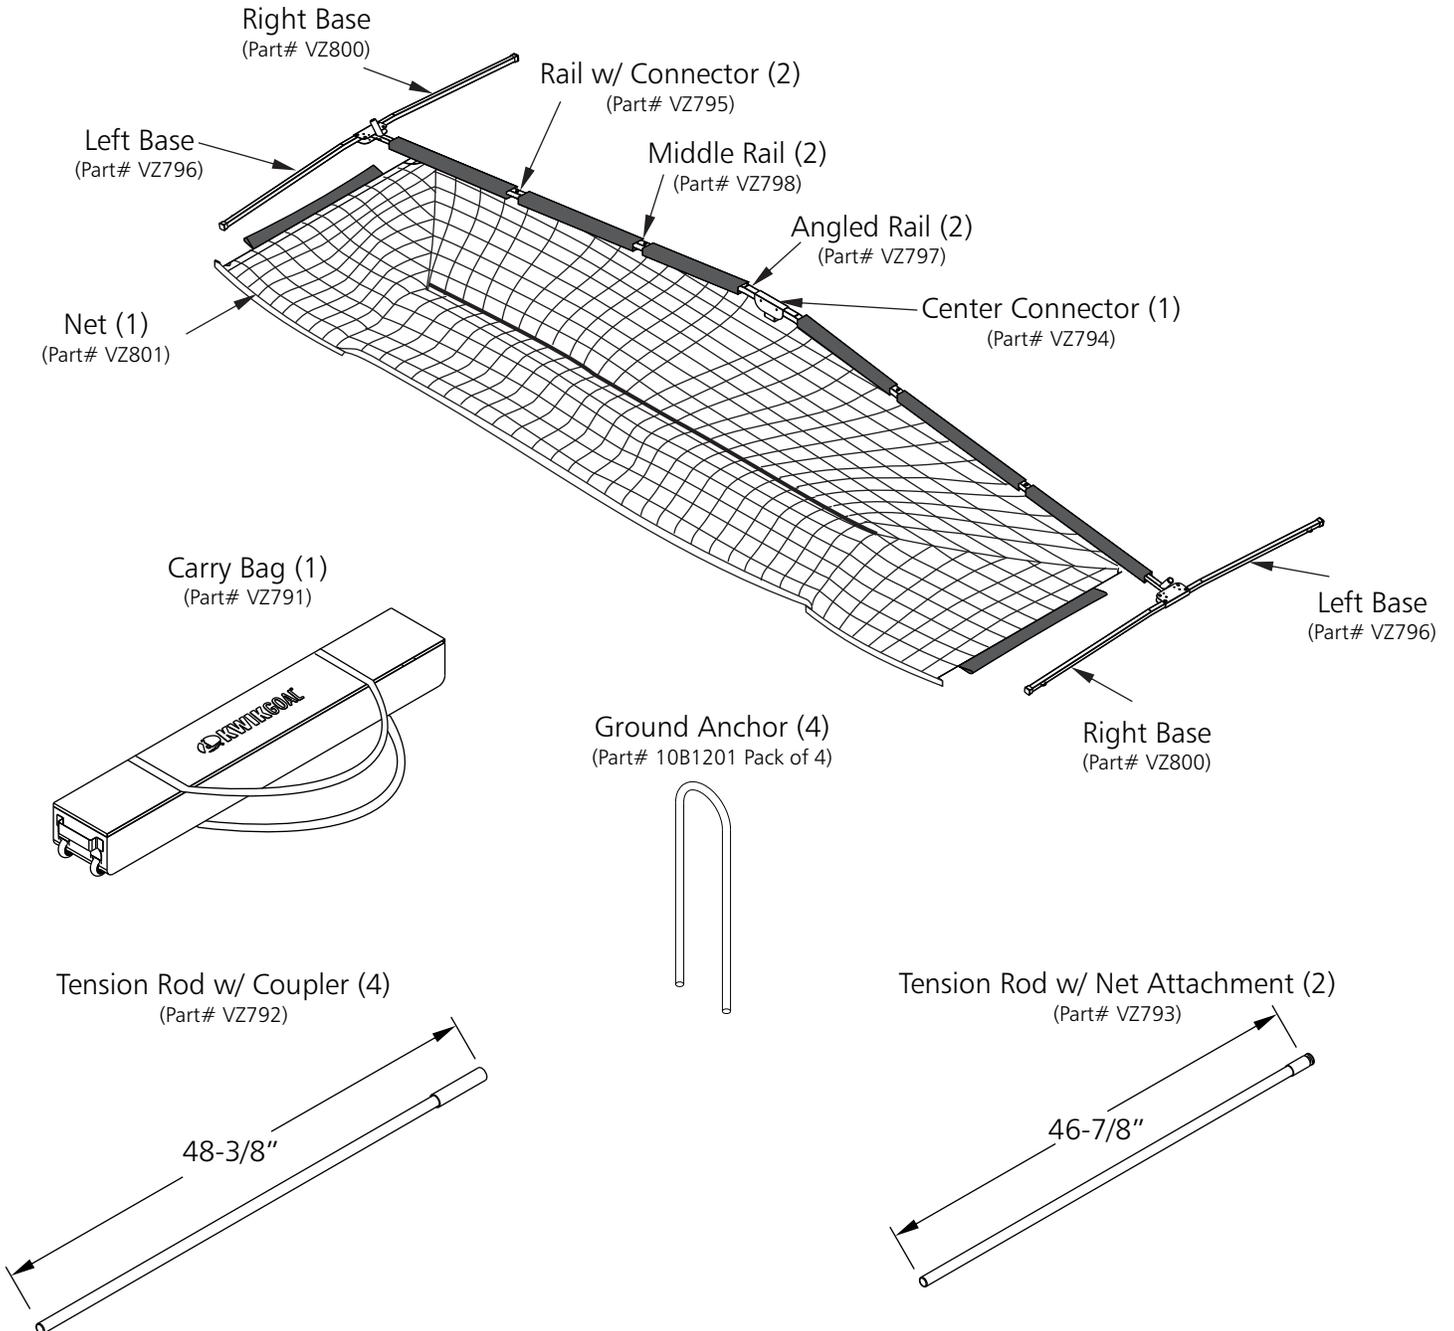


140 Pacific Drive Quakertown, PA 18951
(P) 215-536-2200 / (P) 800-531-4252 / (F) 215-536-4309 / (F) 800-778-8869
Visit our website @ kwikgoal.com
© 2017 Kwik Goal Ltd.


2. Open frame by swinging outward. Use care to keep net from getting pinched in moving parts.

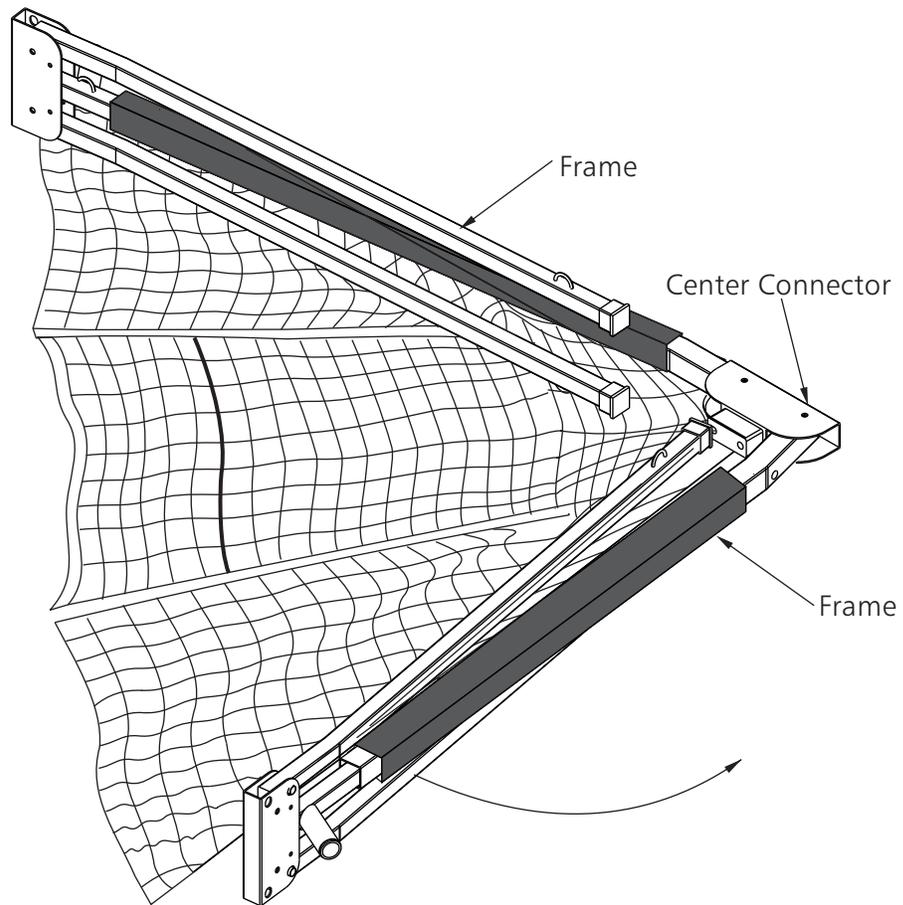


3. Extend rail sections by pulling on each base connector until buttons lock into place. **Do not force parts.** Parts should move freely, if parts do not, look for points where net may be caught on frame.

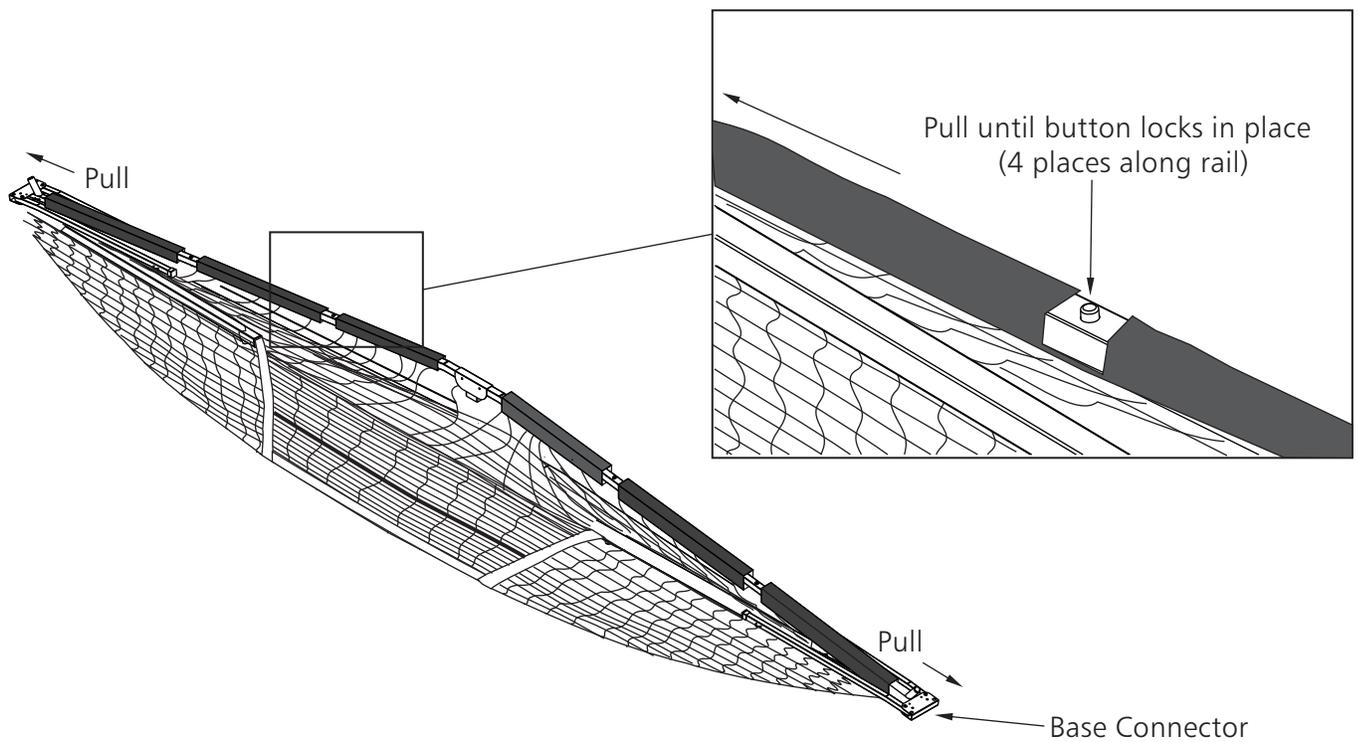




4. Open one side of the bases by swinging outward until buttons lock in place. Pull elastic bands and place loop over metal hook on each side.

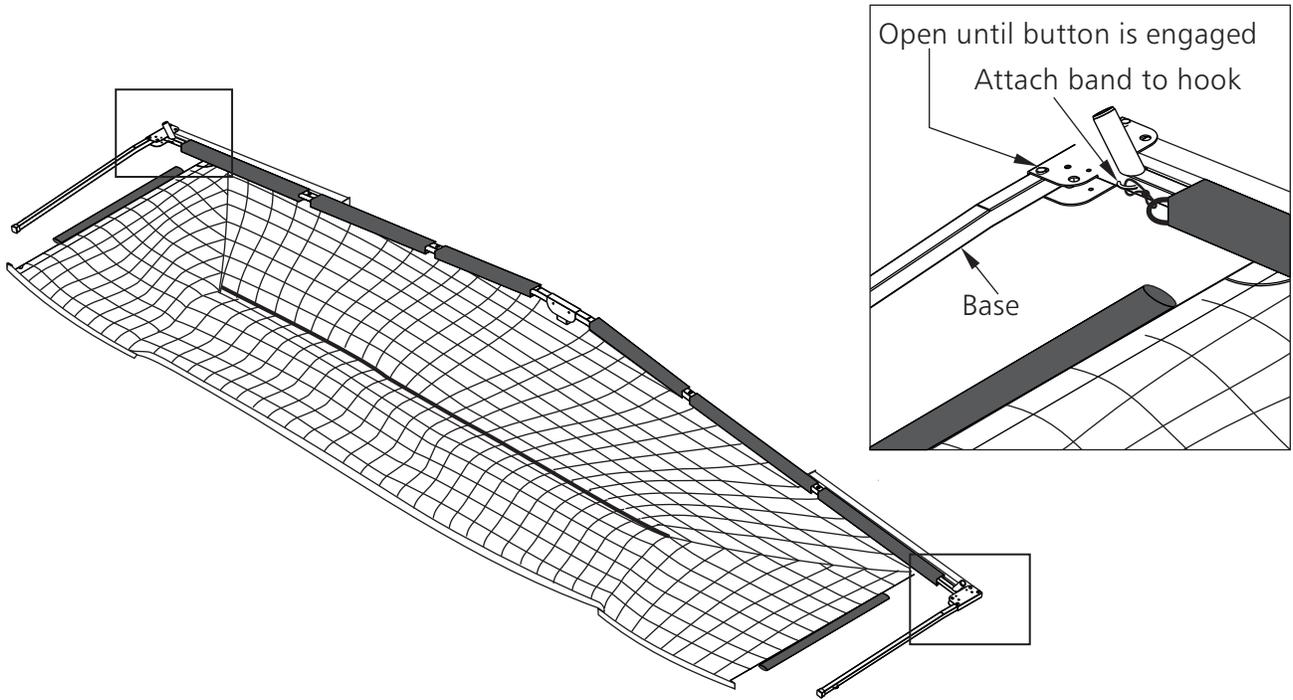


5. Add one tension rod w/coupler to each base through net sleeve on sides of net.

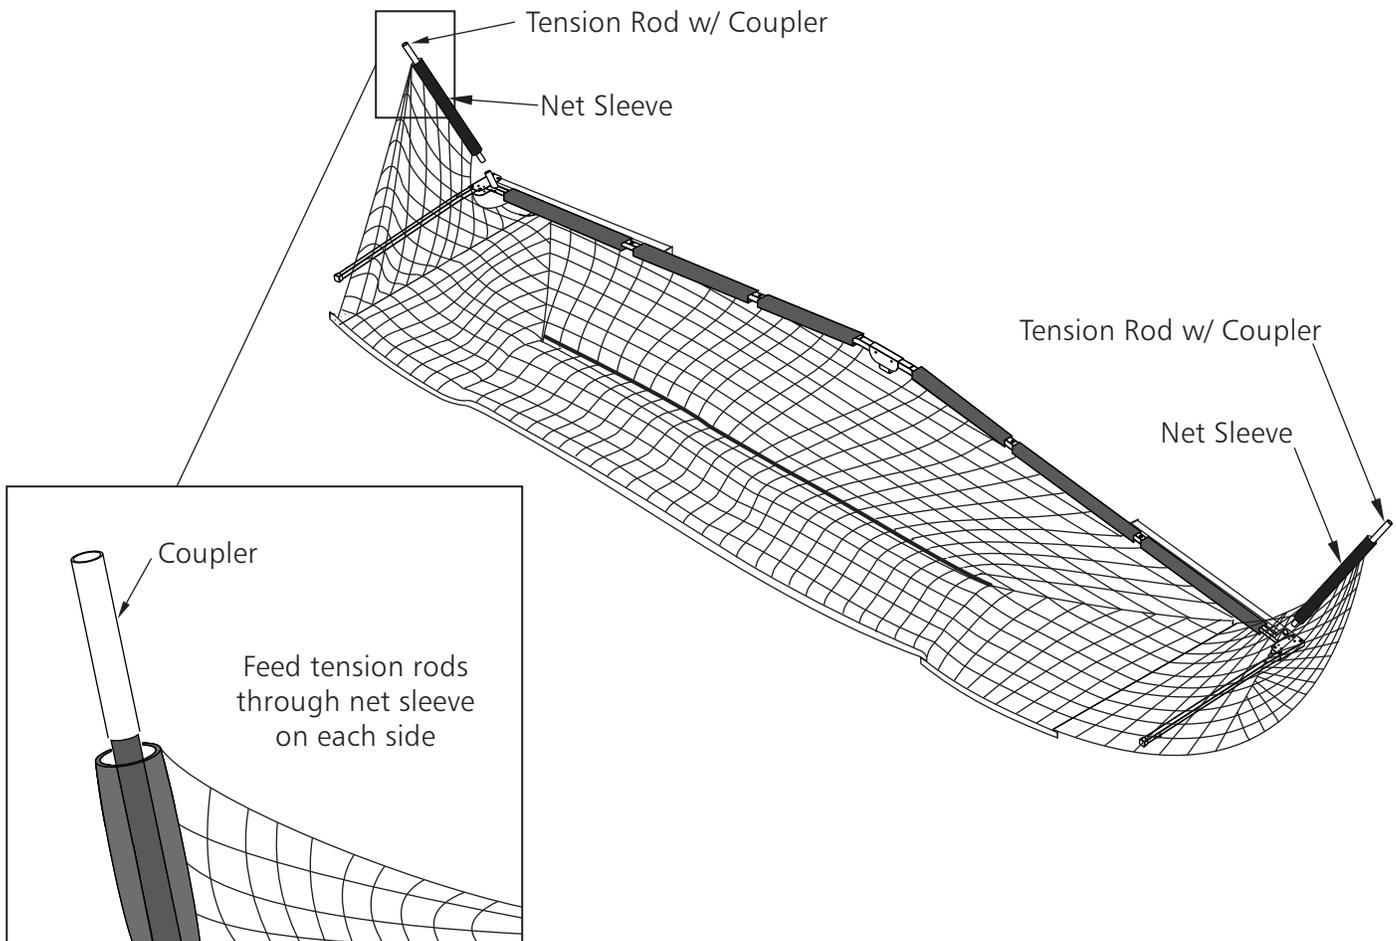


6. Tilt frame towards the unopen bases to add remaining tension rods. Attach net attachment loops to net attachment points on poles.

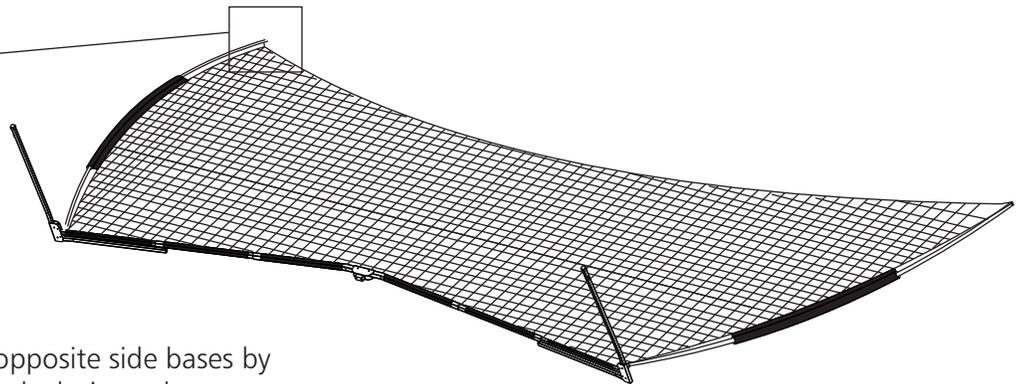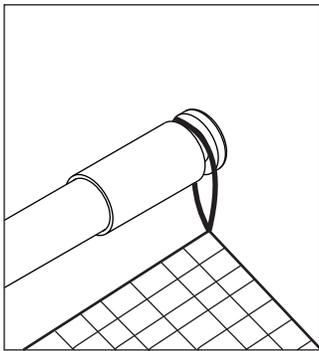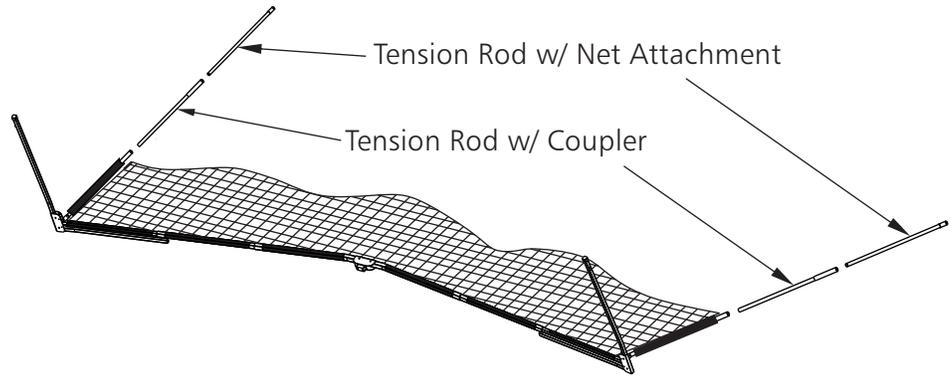

7. Stand unit upright and open opposite side bases by swinging outward until button locks into place.

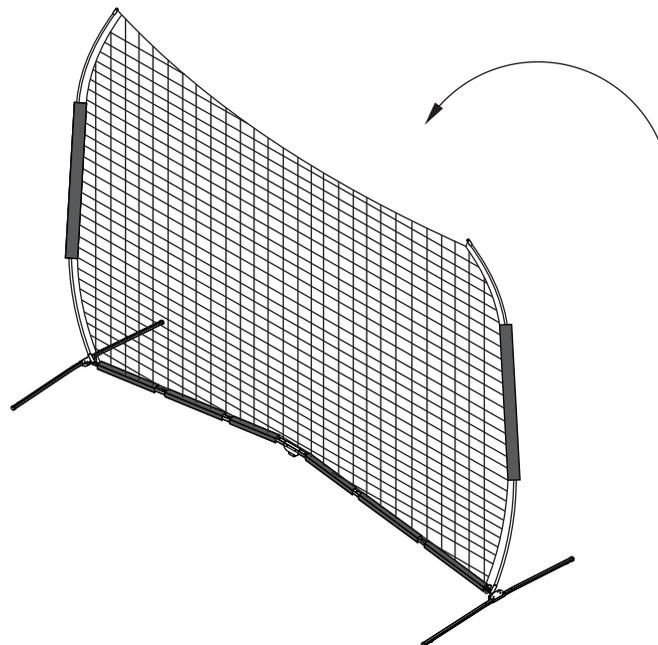

8. Install ground anchor at each corner. Use rubber mallet to hammer anchors into ground.

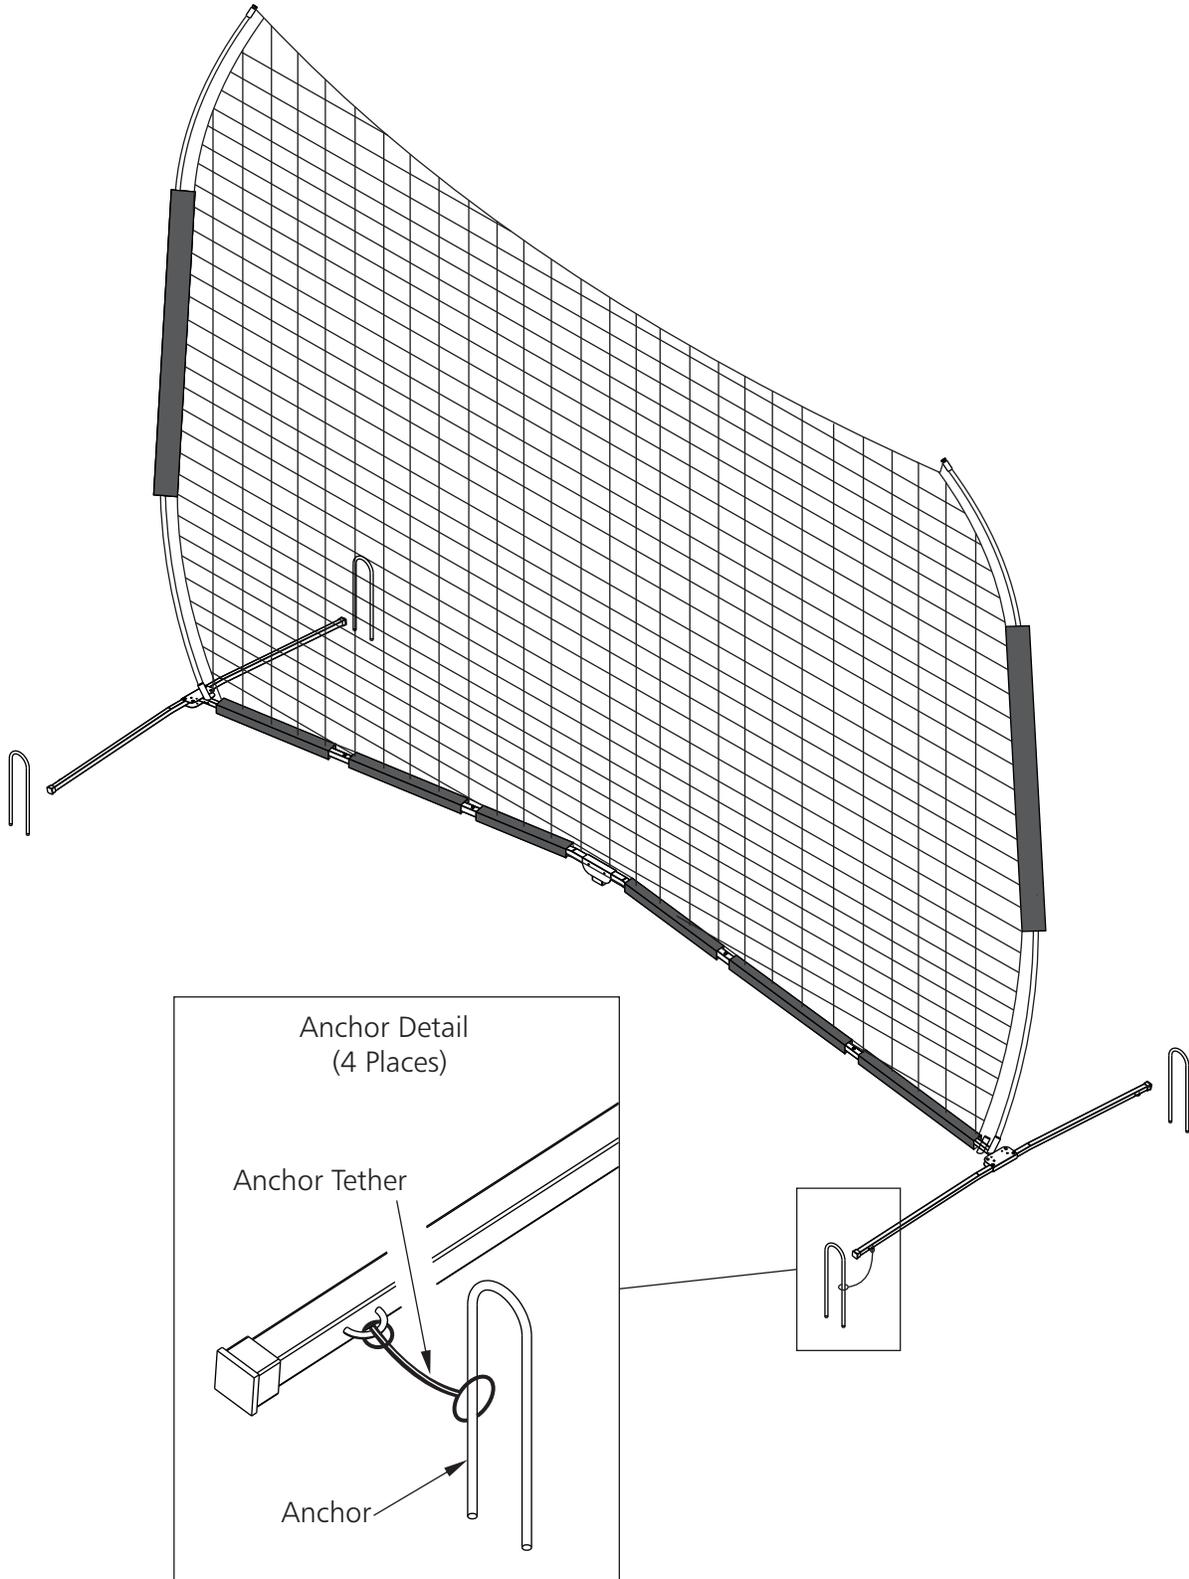

Go to kwikgoal.com for additional product information.