



BA35ARC - Installation Instructions

(View from inside of rim)

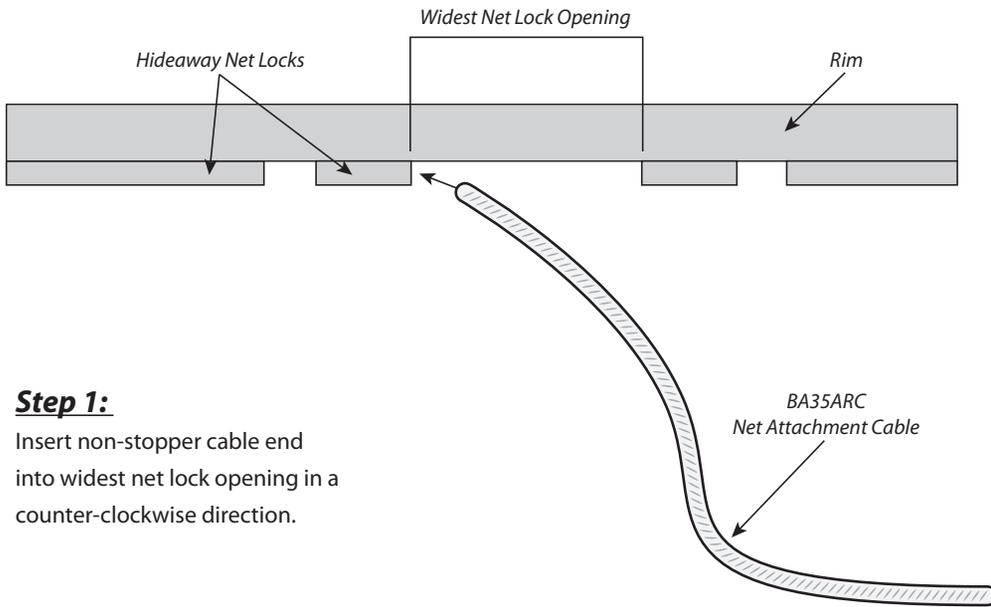


Step 1:

Insert non-stopper cable end into widest net lock opening in a counter-clockwise direction.

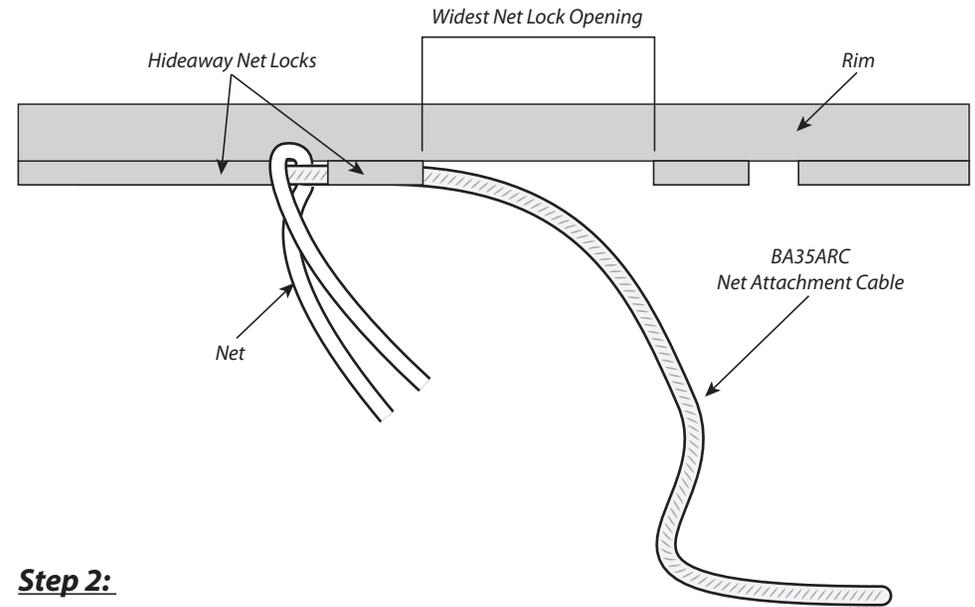

Step 2:

Loop net over cable at net lock openings around rim.

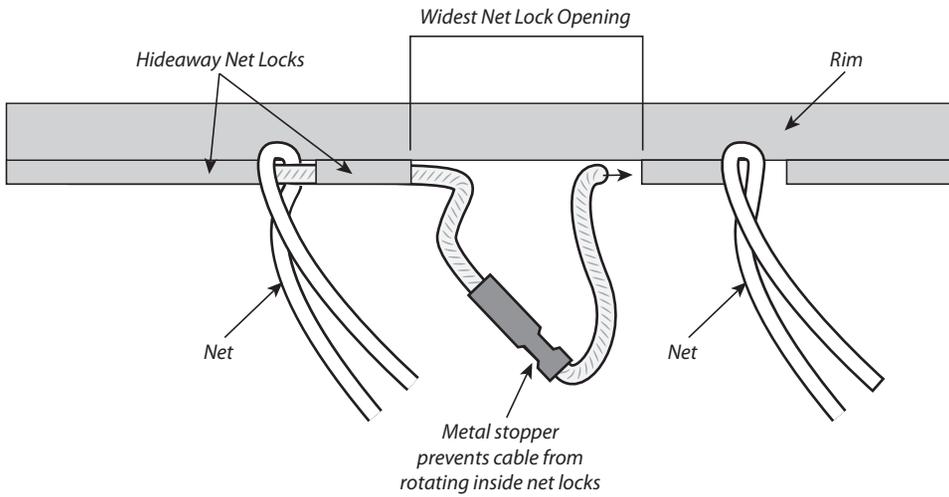


Step 3:

Once net has been looped over cable around rim, bend metal stopper cable end and insert into hideaway net lock to conceal. Loop net over cable at final net lock opening to complete installation.

Rev: 050812

NOTE:

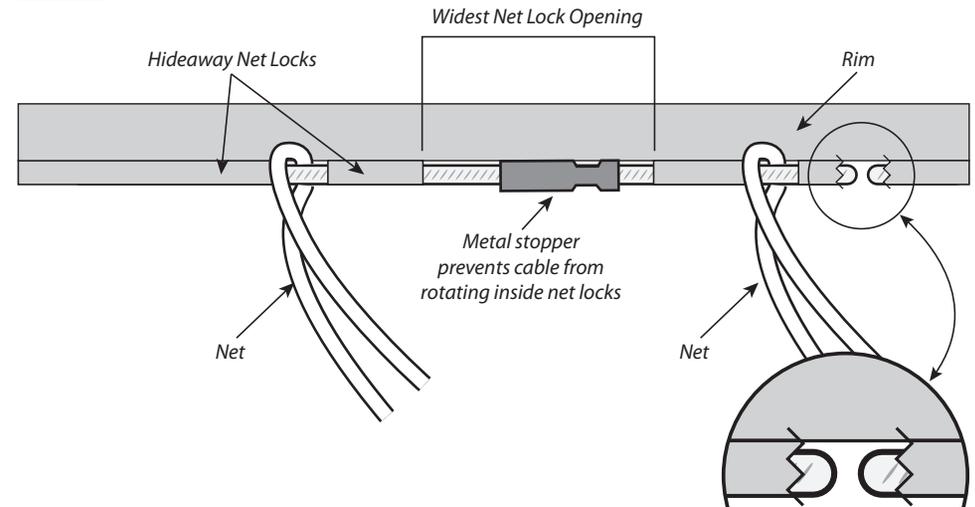

After complete cable installation, cable ends should be concealed inside hideaway net locks.

Note:
Concealed cable ends will not overlap.