




www.gillathletics.com
800-637-3090

441 - HIGH SCHOOL TAKE-OFF BOARD INSTRUCTIONS



INSTALLATION INSTRUCTIONS

For installation of the 441 Take-Off Board in runway
without the use of a 442 Take-Off Board Tray

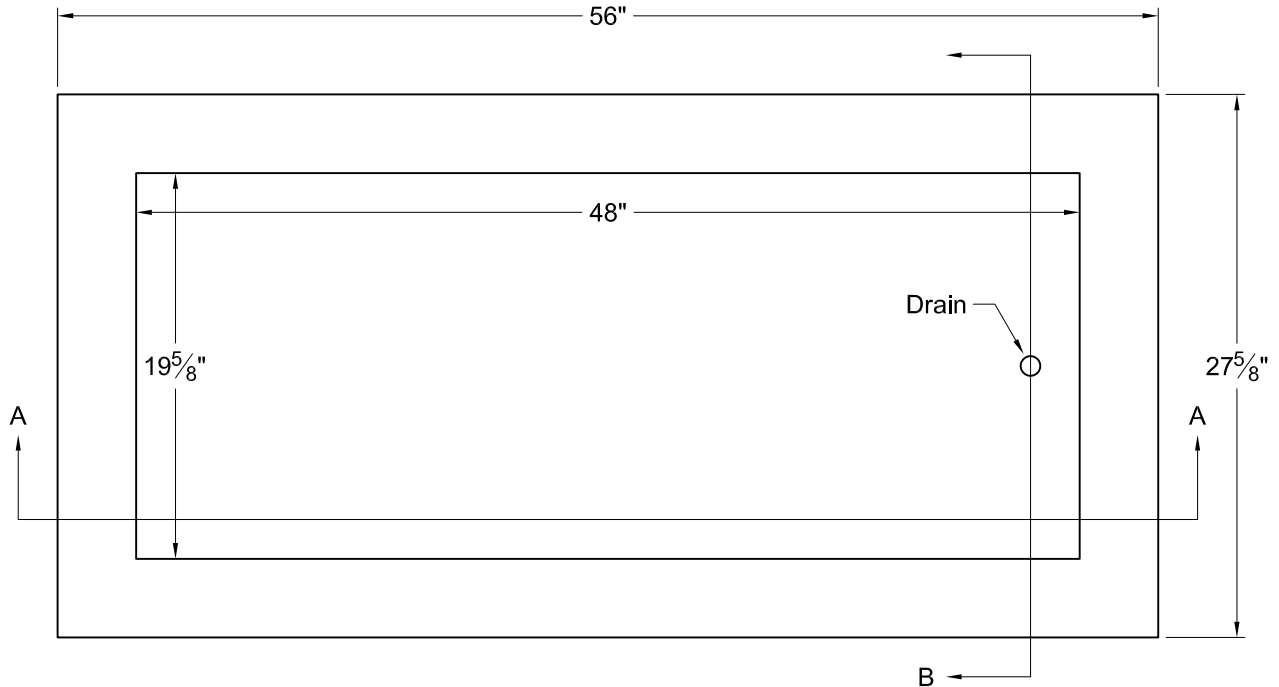

Notes:

1. This dimension assumes a $\frac{1}{2}$ " thick runway surface will be used on top of the asphalt or concrete runway. If a surface of a different thickness, or no added surface is used, this dimension must be changed so that the top of the take-off board and the top of the finished surface are at the same elevation.
2. The bottom of the take-off board recess must be flat and level.
3. A drain hole at the low end of the recess is required.

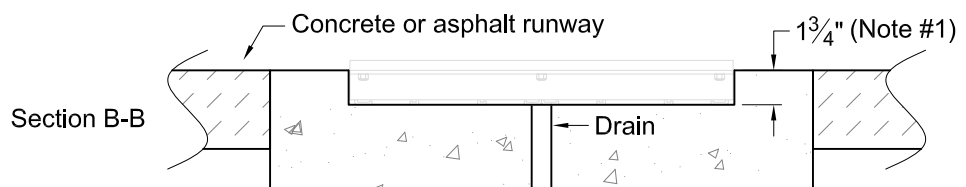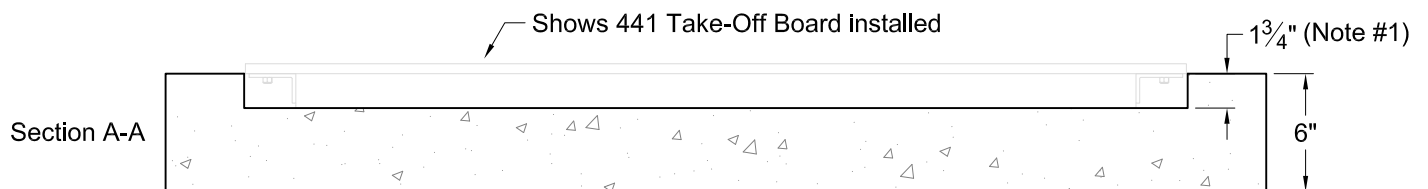

THIS WARNING IS GIVEN IN COMPLIANCE
WITH CALIFORNIA'S PROPOSITION 65:

WARNING

This product contains chemicals known to the
State of California to cause cancer, birth defects
or other reproductive harm.

suggestions@gillathletics.com

Copyright ©2012 by Litania Sports Group, Inc. All rights reserved.

GILL ATH
09-14-12
INST441