




## 444 - COLLEGIATE TAKE-OFF BOARD SYSTEM CUSTOMER INSTRUCTIONS

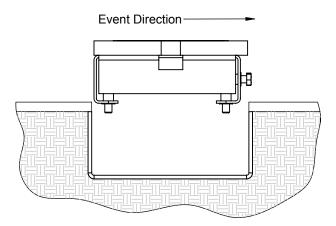

Place the Take-Off & Base Board Assembly (44410) in the Tray (443) so that the locking blots (M2787) face the sand pit.

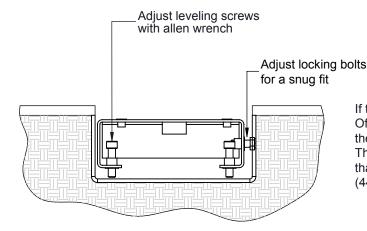

If the board needs adjusting, remove the Take-Off board (44404) and an allen wrench to adjust the leveling screws (M2530) from the top down. The locking bolts (M2787) can be adjusted so that the base board (44402) sits tight in the tray (443).

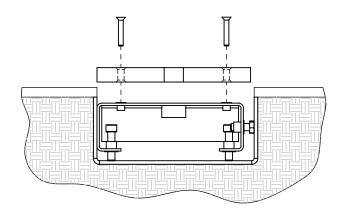

Replace the Take-Off board (44404) and secure it in place with four screws (M2257).

THIS WARNING IS GIVEN IN COMPLIANCE WITH CALIFORNIA'S PROPOSITION 65: <u>WARNING</u> This product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

GILL ATH 10/23/2015 INST444

Copyright @2015 by Gill Athletics. All rights reserved.