

SPRINGLOADED BACKSTOP INSTRUCTIONS

STEP 1 - FIND CENTER OF FIELD (GOAL POST).

STEP 2 - MEASURE 10 FEET EACH SIDE FROM CENTER. (Fig. 1)

STEP 3 - LOWER EACH LEG, LOCK INTO POSITION.

**STEP 4 - AT 20 FT. INTERVALS, SET BASES SQUARELY ON CENTER.
WEAVE NET BETWEEN EACH POST. (Fig. 2)**

STEP 5 - INSTALL STEERHORNS ON NET TAGS AT 20 FT. INTERVALS. (Fig. 3)

STEP 6 - RAISE POST TO MAXIMUM HEIGHT, SNAP IN PIN. (Fig. 4)

Fig 1.



Fig 2.

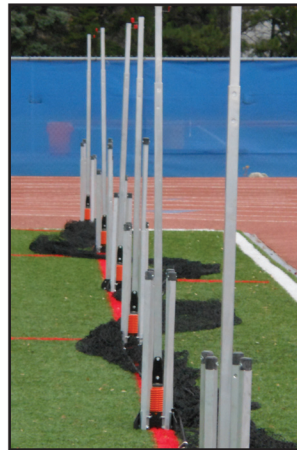


Fig 4.

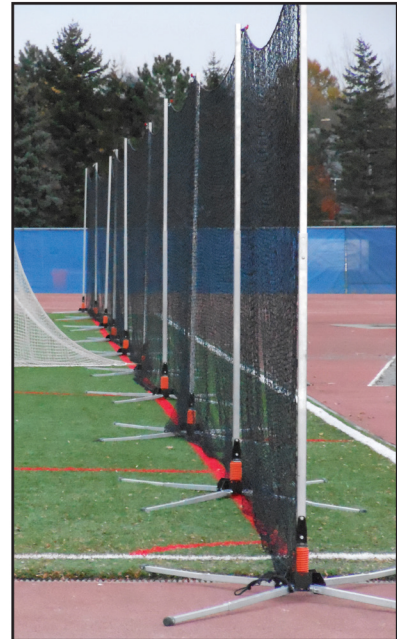


Fig 3.



* LOWER POSTS WHEN NOT IN USE. SANDBAGS NEEDED IN HIGH WIND AREAS.