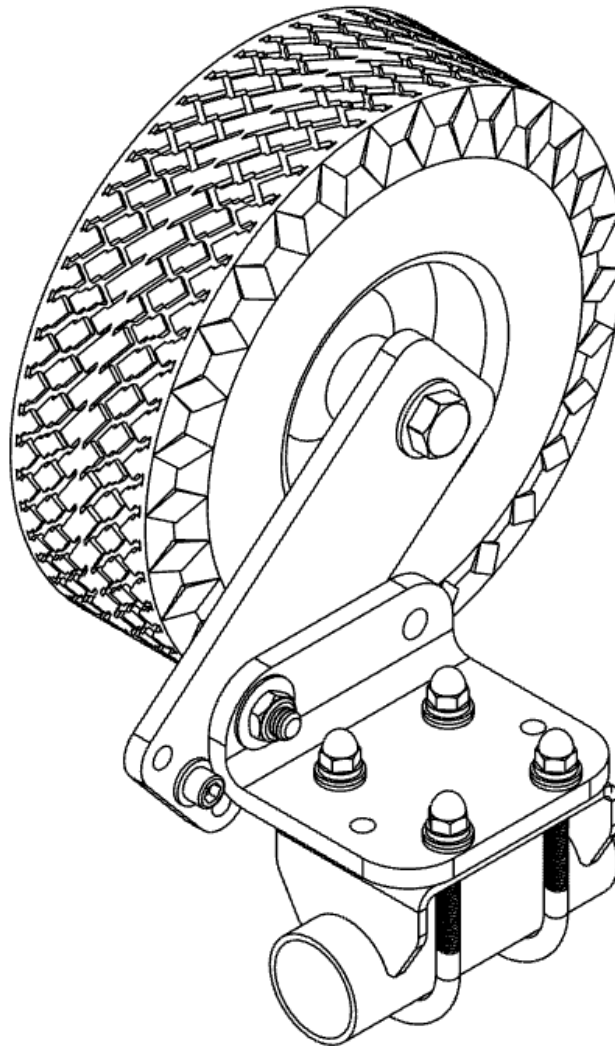









-- CSGWK--
(CLASSIC STYLE GOAL WHEEL KIT)
Installation Instructions






Call Jaypro Sports Equipment at 1-800-243-0533
during regular business hours for technical support.

www.jaypro.com

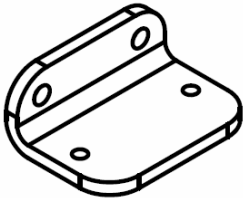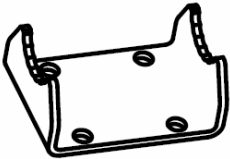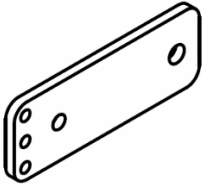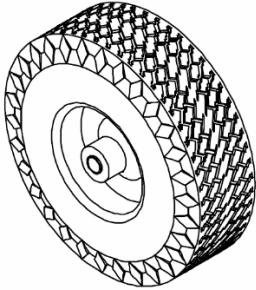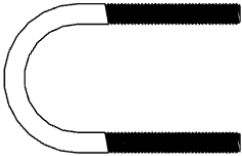CSGWK
CLASSIC STYLE GOAL WHEEL KIT

ITEM	IMAGE	DESCRIPTION	QTY
1		WHEEL KIT BASE BRACKET	4
2		WHEEL KIT CLAMP BRACKET	4
3		CSGWK LEVER	4
4		WHEEL 10" x 4" NO FLAT TIRE	4
5		3/8"-16 x 3 3/8" LONG Ø2" U-BOLT, ZP	8
ITEM	IMAGE	DESCRIPTION	QTY

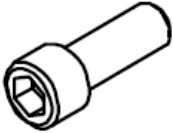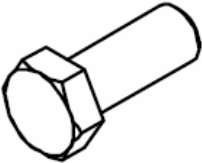ITEM	IMAGE	DESCRIPTION	QTY
6		1/2"-13 THIN NYLON LOCK NUT, ZP	4
7		5/8"-11 THIN NYLON LOCK NUT, ZP	4
8		3/8"-16 x 1" SOCKET HEAD, SS	4
9		1/2"-13 x 1-1/2 HEX CAP SCREW, SS	4
10		5/8"-11 x 3 1/2" HEX HEAD, SS	4
11		3/8" FLAT SAE, SS	40
12		1/2" WASHER FLAT STD, SS	12
13		5/8" FLAT WASHER, SS	12
14		3/8"-16 NYLON LOCK NUT, ZP	4
15		3/8"-16 SELF LOCK ACORN NUT, ZP	16
16		3/8" MEDIUM SPLIT LOCK WASHER, SS	16
ITEM	IMAGE	DESCRIPTION	QTY

IMPORTANT NOTE:

- Unpack all parts and check against parts list to ensure that all have been included.
- Inspect all parts for damage. Report any damages to the trucking company.
- Two people are required to safely move any portable soccer goal.
- The CSGWK wheel kit is designed to attach to the base members on either side of the goal.
- The wheel kit may be located at the rear of the goal or front of the goal, as desired. Locating the wheels at the rear requires lifting the front of the goal to move.
- Four wheels, (2) CSGWK wheel kits, may be install to eliminate lifting all together.
- BEFORE EACH USE CHECK EQUIPMENT FOR PROPER CONNECTING HARDWARE AND STRUCTURAL INTEGRITY. REPLACE DAMAGED OR MISSING HARDWARE IMMEDIATELY.
- USE OF THIS EQUIPMENT OTHER THAN INTENDED, MAY BE HAZARDOUS.
- ALTERATION OR MODIFICATION OF THIS EQUIPMENT MAY BE HAZARDOUS AND RESULT IN INJURY. FOR REPAIR OR REPLACEMENT, CONTACT YOUR DEALER OR JAYPRO SPORTS.

***** ASSEMBLY INSTRUCTIONS REQUIRES 3 PEOPLE *****


TOOLS REQUIRED:

- (1) 9/16" & 3/4" & 15/16" Socket Wrench and Box Wrench
- (1) 5/16" Allen Wrench
- (1) 3/8" Drive Torque Wrench (240 inch pounds)
- (1) Level

- Unpack all parts and check against parts list to ensure that all have been included.
- Inspect all parts for damage. Report any damages to the trucking company.

Wheel Kit Goal Assembly:

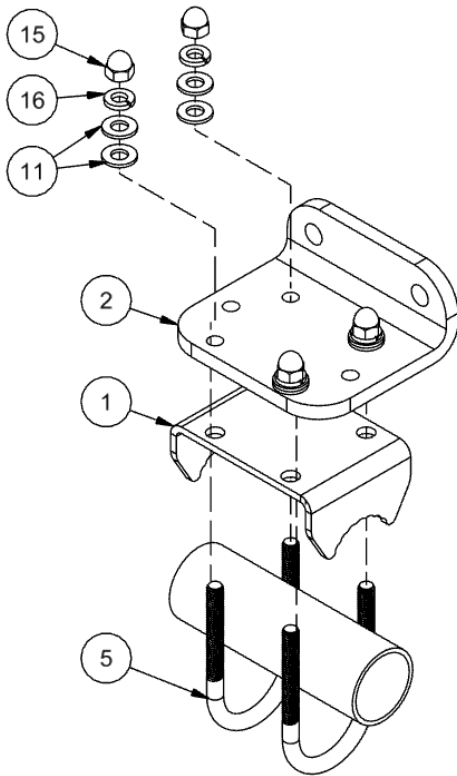
1. Attach mounting bracket to goal using 3/8" U-Bolt as shown.
2. Make sure threads of U-Bolt are equally exposed so one side does not bottom out inside Acorn nut, see detail.
3. Equally tighten down on Acorn nuts. Do Not tighten one at a time but rotate and tighten nuts evenly.
4. Tighten nuts until snug and make sure top of bracket is level.
5. Fully tighten all four nuts to 240 inch pounds.



1	1	WHEEL KIT BASE BRACKET
2	1	WHEEL KIT CLAMP BRACKET
11	10	3/8" FLAT SAE, SS
15	4	3/8-16 SELF LOCK ACORN NUT ZP
16	4	3/8" MEDIUM SPLIT LOCK WASHER, SS
ITEM	QTY	DESCRIPTION



NOTE:

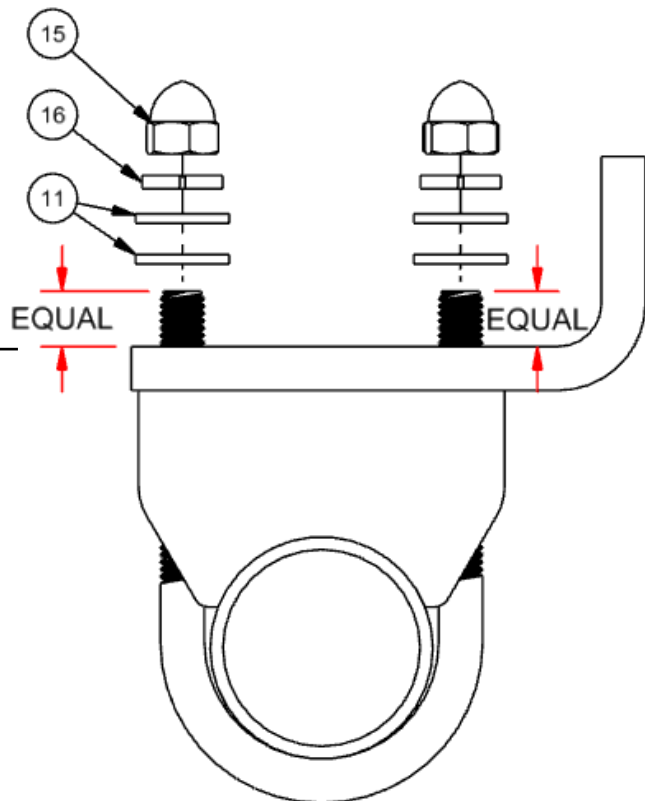If Acorn nuts are not sufficiently tightened the wheel assembly will twist on the pipe over time.



Wheel Assembly:

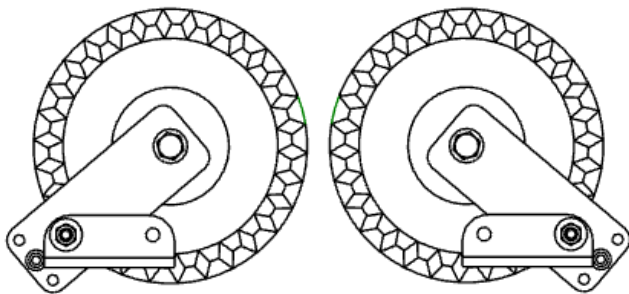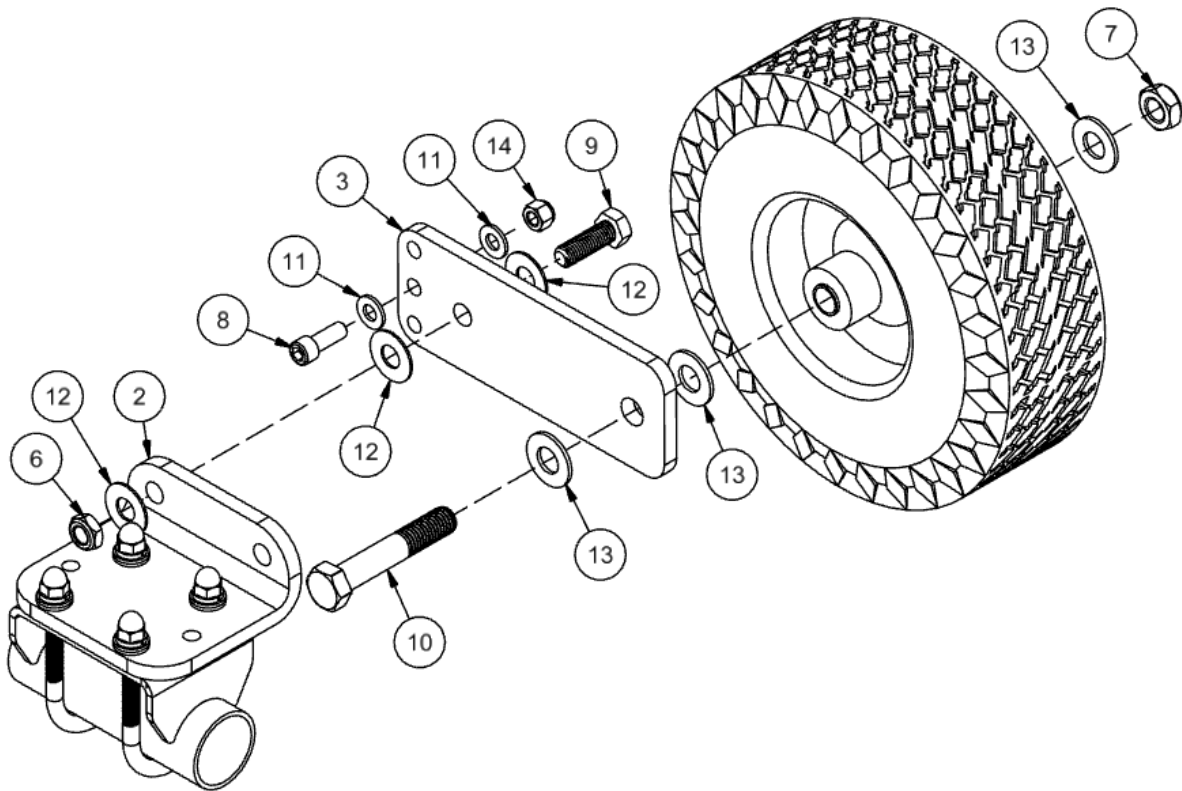1. Assemble wheel to lever and base bracket as shown.
NOTE LEFT / RIGHT SIDE ASSEMBLY.




Each goal will need a left and right.

2	1	WHEEL KIT BASE BRACKET
3	1	CSGWK LEVER
6	1	1/2"-13 THIN NYLON LOCK NUT, ZP
7	1	5/8"-11 THIN NYLON LOCK NUT, ZP
8	1	3/8"-16 x 1" SOCKET HEAD, SS
9	1	1/2"-13 x 1-1/2 HEX CAP SCREW, SS
10	1	5/8"-11 x 3 1/2" HEX HEAD, SS
11	10	3/8" FLAT SAE, SS
12	3	1/2" WASHER FLAT STD, SS
13	3	5/8" FLAT WASHER, SS
14	1	3/8"-16 NYLON LOCK NUT, ZP
ITEM	QTY	DESCRIPTION

Wheel Kit Operation:

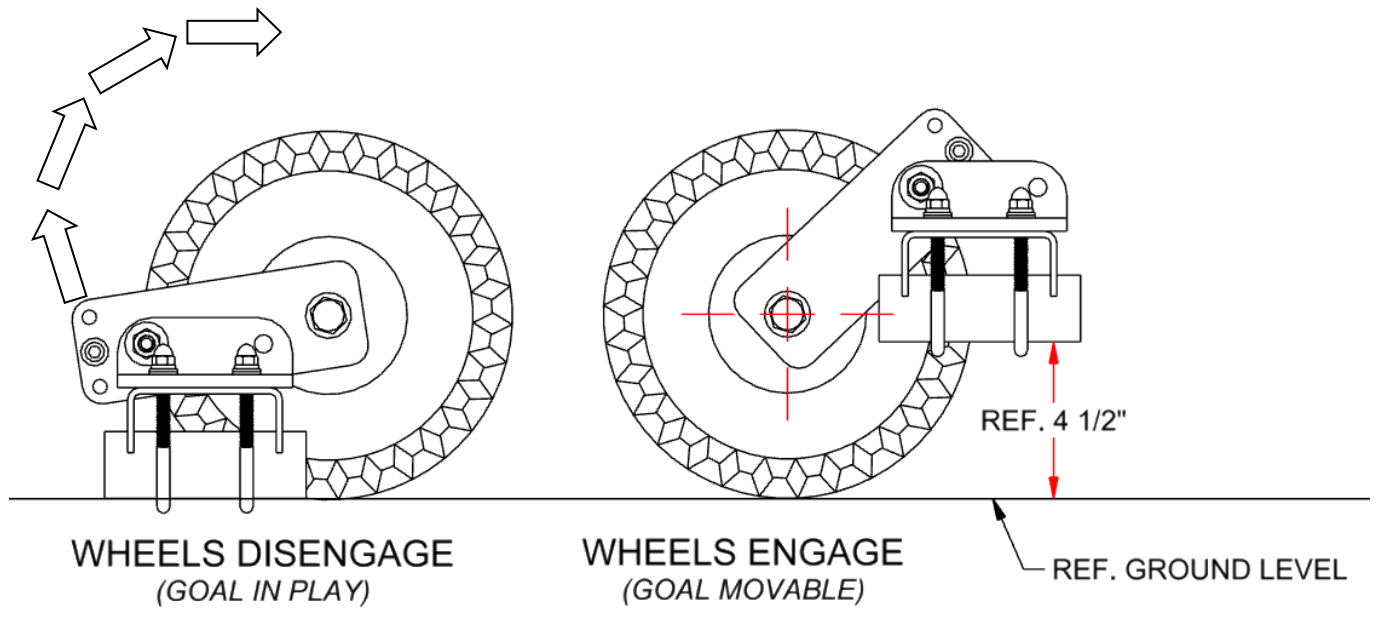1. Lift up the goal by grabbing the pipe, just enough to rotate the bracket.
2. Move the wheel by rotating the bracket as illustrated below.



Maintenance:

- Periodically check all hardware to make sure it is properly tightened.
- If wheel assembly rotates on the pipe it must be reset and tightened.

