


## ASSEMBLY INSTRUCTIONS FOR 9B6305 CLUB SHELTER

\*THIS UNIT MUST BE ASSEMBLED BY A MINIMUM OF TWO QUALIFIED PERSONS\* PORTABLE-ONLY SHELTERS MUST BE STORED IN A SECURE AREA WHEN NOT IN USE.

- 1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify Kwik Goal immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
- 2. Read through entire instruction before beginning assembly and installation.

NOTE: Components may be packaged in one or more additional boxes.

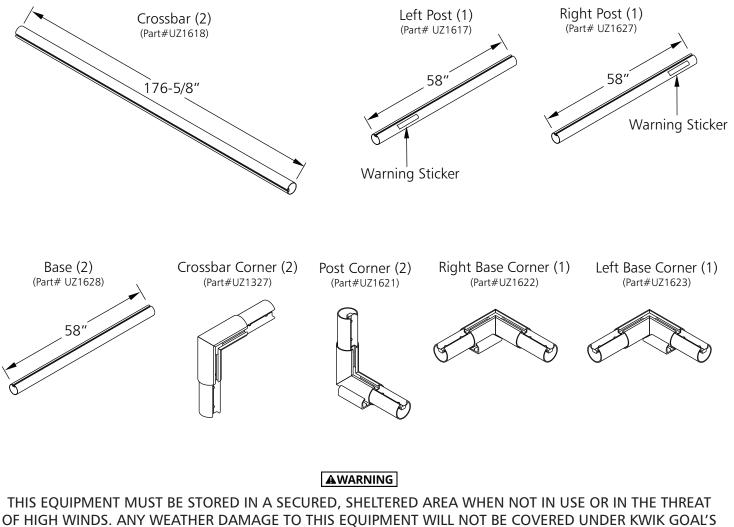


LIFETIME GUARANTEE. DO NOT LEAVE THIS EQUIPMENT UNATTENDED.


140 Pacific Drive Quakertown, PA 18951 (P) 215-536-2200 / (P) 800-531-4252 / (F) 215-536-4309 / (F) 800-778-8869 Visit our website @ kwikgoal.com ©2018, Kwik Goal Ltd.



- 1. All Kwik Goal shelters must be moved by qualified personnel who are experienced in moving field equipment.
- 2. A minimum of two qualified, experienced people are required to move shelter.
- 3. Do not attempt to lift or move shelter in windy conditions.
- 4. Shelters must not be left unattended and unsecured.
- 5. Shelter must be on level, flat ground at all times.
- 6. Use extreme caution when pushing shelter. Excessive force can overturn shelter. Always push at lowest point on shelter frame possible.
- 7. Do not push shelter directly from the front to rear or rear to front. Push from end to end.

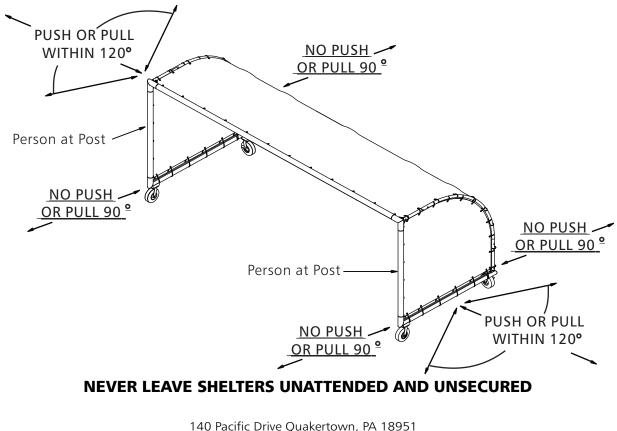

140 Pacific Drive Quakertown, PA 18951 (P) 215-536-2200 / (P) 800-531-4252 / (F) 215-536-4309 / (F) 800-778-8869 Visit our website @ kwikgoal.com © 2015 Kwik Goal Ltd.

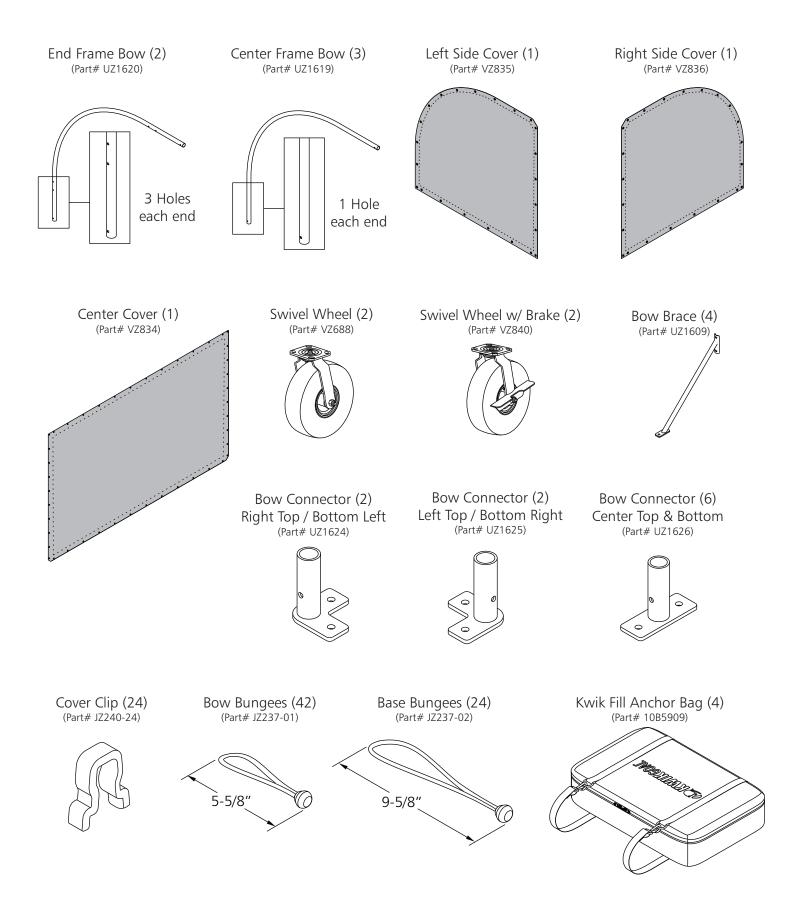

### 

# Note: Hardware is packed separately in one or more boxes. Open all boxes and layout all sealed hardware packs before beginning assembly.

#### Frame Hdw (Part#JZ238)

5/16" X 1" Hex Bolts (Part# TZ330)	(16)
5/16" Square Nut (Part# TZ400)	(14)
5/16" Lock Washer (Part# TZ174)	(16)
5/16" Flat Washer (Part# TZ4)	(16)
3/8" X 1" Socket Head (Part# TZ323)	(24)
3/8" Square Nut (Part# TZ247)	(24)
3/8" Lock Washer (Part# TZ65)	(24)


### Assembly Tools




#### Bow Hdw (Part# JZ239)

5/16" X 2" Hex Bolt (Part# TZ184)	(6)
5/16" X 2" Carriage Bolt (Part# TZ401)	(12)
5/16" Hex Nut (Part# TZ173)	(12)
5/16" Lock Nut (Part# TZ5)	(6)
5/16" Lock Washer (Part# TZ174)	(12)
5/16" Flat Washer (Part# TZ4)	(24)
3/8" X 7/8" Hex Bolt (Part# TZ249)	(24)
3/8" Lock Washer (Part# TZ65)	(24)
3/8" Flat Washer (Part# TZ60)	(24)

3. Hardware for steps 3 through 7 is in Frame Hdw pack. Attach swivel wheels w/ brakes to right & left base corners as shown.

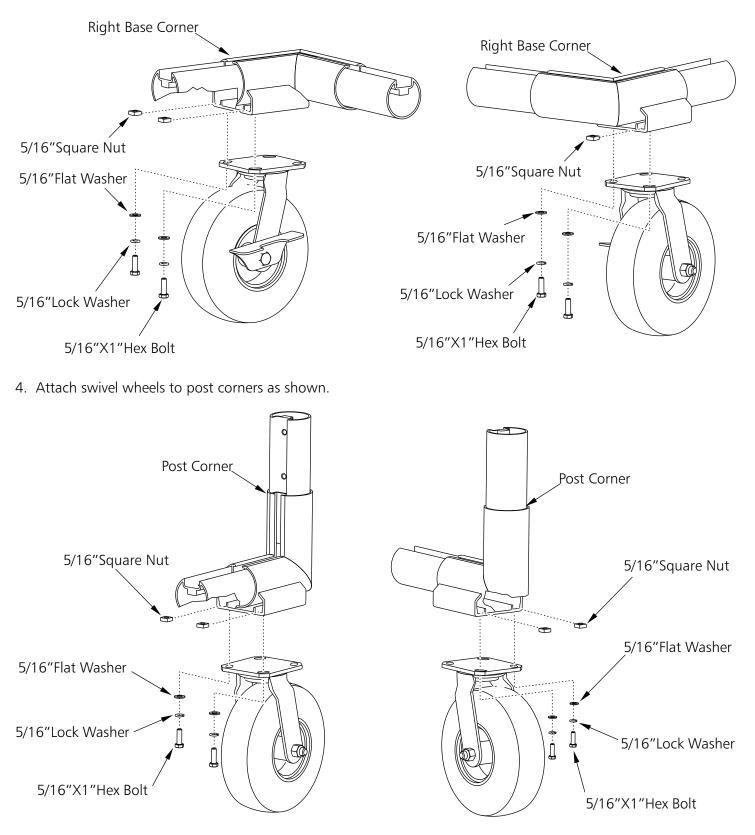


5. Assemble crossbar, posts, crossbar corners, and post corners. NOTE: Square nuts will float loose in channels until used later. Do NOT tighten bolts at this time.

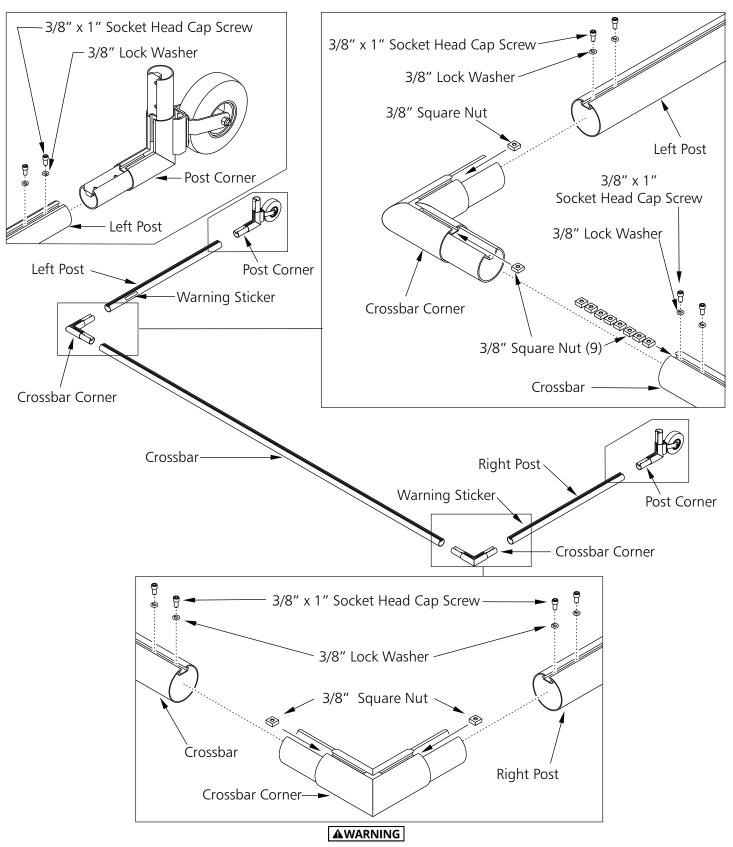

THIS EQUIPMENT MUST BE STORED IN A SECURED, SHELTERED AREA WHEN NOT IN USE OR IN THE THREAT OF HIGH WINDS. ANY WEATHER DAMAGE TO THIS EQUIPMENT WILL NOT BE COVERED UNDER KWIK GOAL'S LIFETIME GUARANTEE. DO NOT LEAVE THIS EQUIPMENT UNATTENDED.


6. Assemble crossbar, bases, left and right base corners. NOTE: Square nuts will float loose in channels until used later. Do NOT tighten bolts at this time.

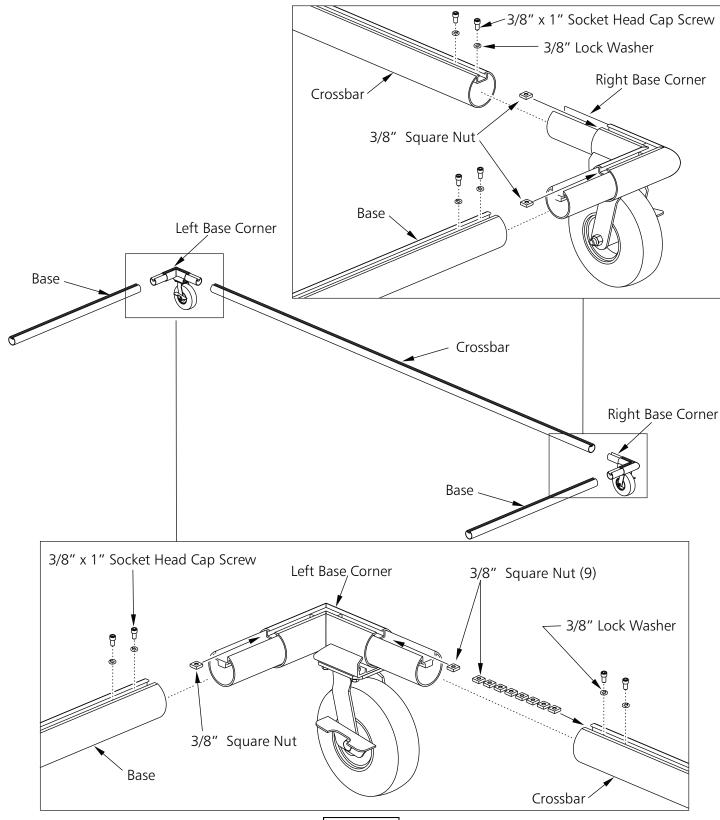


#### 

THIS EQUIPMENT MUST BE STORED IN A SECURED, SHELTERED AREA WHEN NOT IN USE OR IN THE THREAT OF HIGH WINDS. ANY WEATHER DAMAGE TO THIS EQUIPMENT WILL NOT BE COVERED UNDER KWIK GOAL'S LIFETIME GUARANTEE. DO NOT LEAVE THIS EQUIPMENT UNATTENDED.

7. Attach assembled base to post corners as shown. Note: Tighten all bolts at this time.

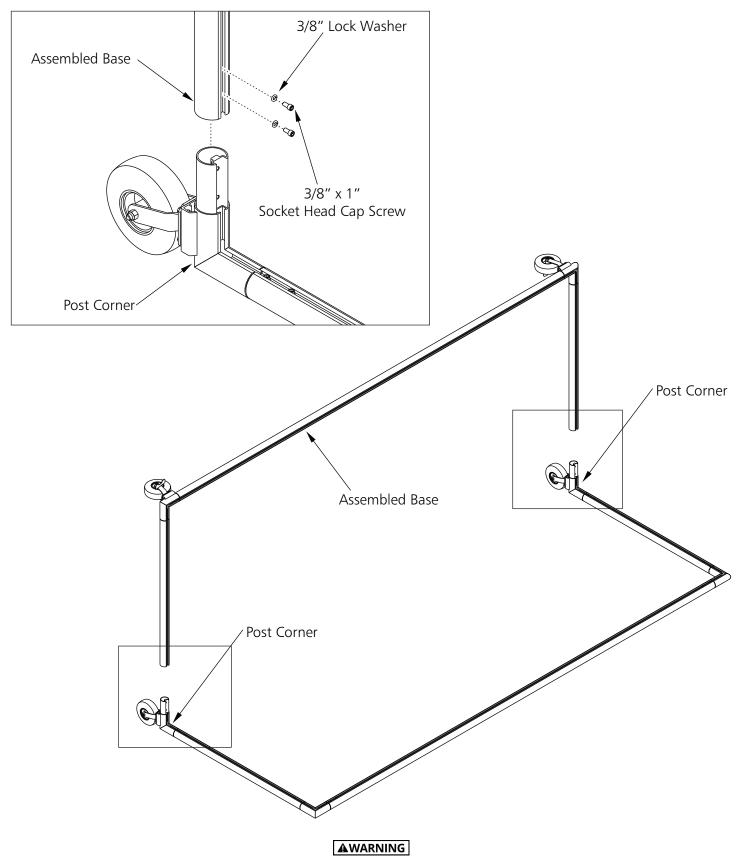


8. Hardware for steps 8 through is in13 **Bow Hdw** pack. Attach right & left top bow connectors to assembled frame using 3/8" square nuts at crossbar corners as shown.

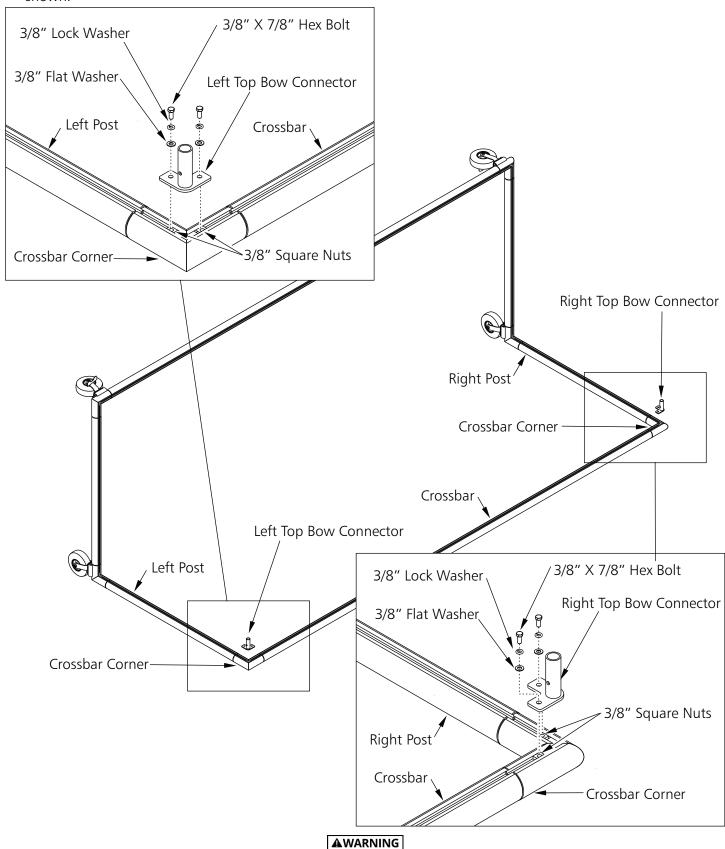


THIS EQUIPMENT MUST BE STORED IN A SECURED, SHELTERED AREA WHEN NOT IN USE OR IN THE THREAT OF HIGH WINDS. ANY WEATHER DAMAGE TO THIS EQUIPMENT WILL NOT BE COVERED UNDER KWIK GOAL'S LIFETIME GUARANTEE. DO NOT LEAVE THIS EQUIPMENT UNATTENDED.


9. Starting at left top bow connector push five 3/8" square nuts towards the right top bow connector. Skip one 3/8" square nut and attach center bow connectors to crossbar at locations shown.

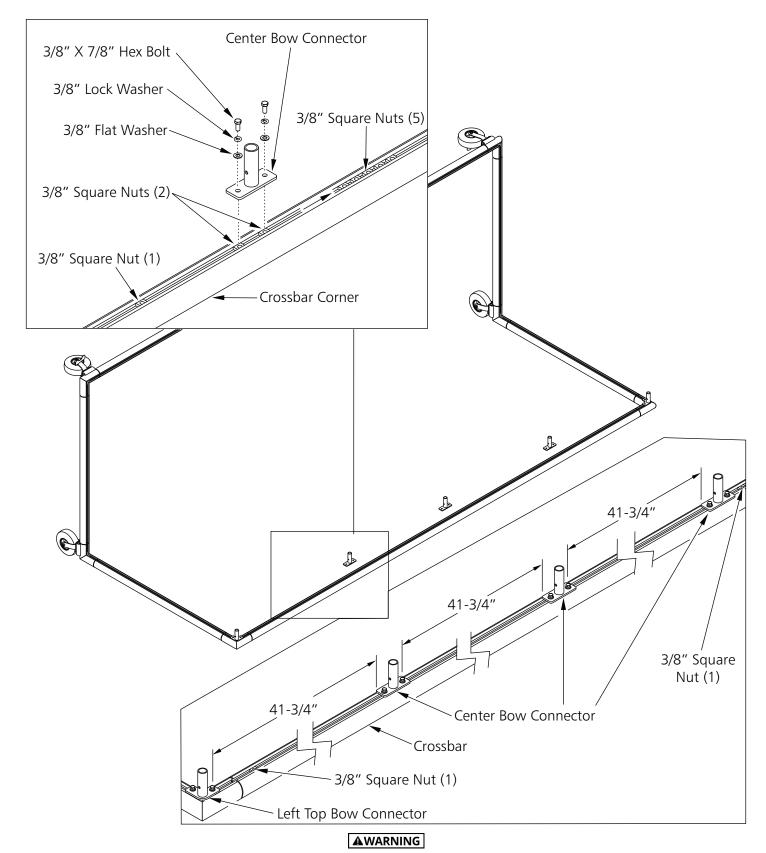


10. Assemble left and right end frame bows as shown.

Note: May need to draw 5/16" X 2" carriage bolt head into hole by just using 5/16" flat washer and 5/16" hex nut first then remove 5/16" hex nut add lock washer. Do NOT tighten bolts at this time.

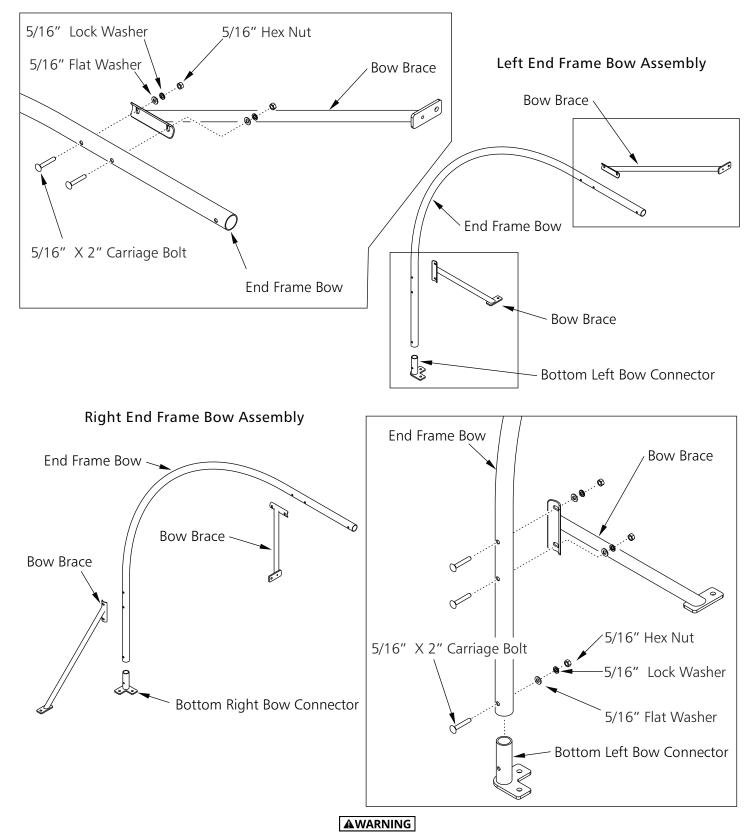

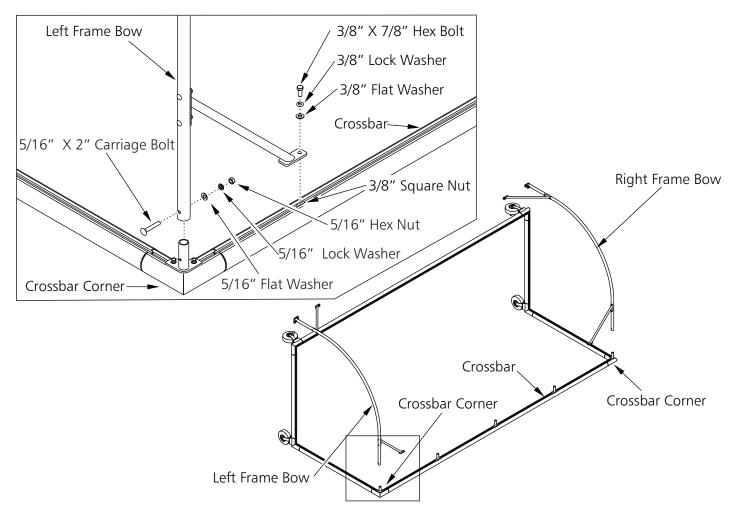


12. Attach left and right frame bow to base corner and crossbar using 3/8" square nuts. Square up all parts and tighten bolts at this time.

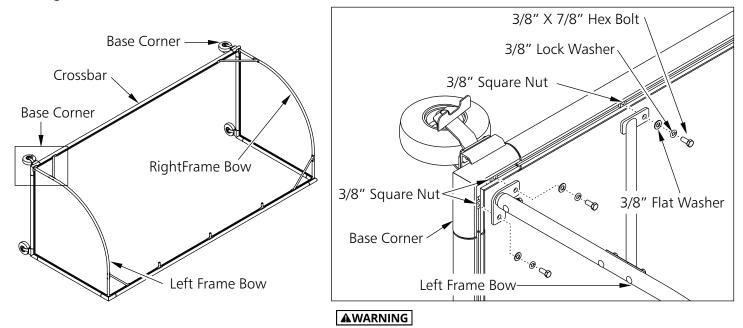


THIS EQUIPMENT MUST BE STORED IN A SECURED, SHELTERED AREA WHEN NOT IN USE OR IN THE THREAT OF HIGH WINDS. ANY WEATHER DAMAGE TO THIS EQUIPMENT WILL NOT BE COVERED UNDER KWIK GOAL'S LIFETIME GUARANTEE. DO NOT LEAVE THIS EQUIPMENT UNATTENDED.

13. Attach one center bow connector to all three center frame bows.

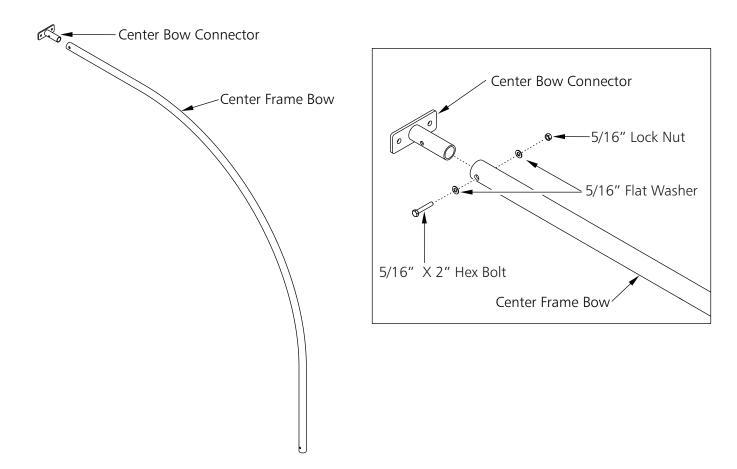



14. Attach center frame bows to crossbar at center bow connector locations.

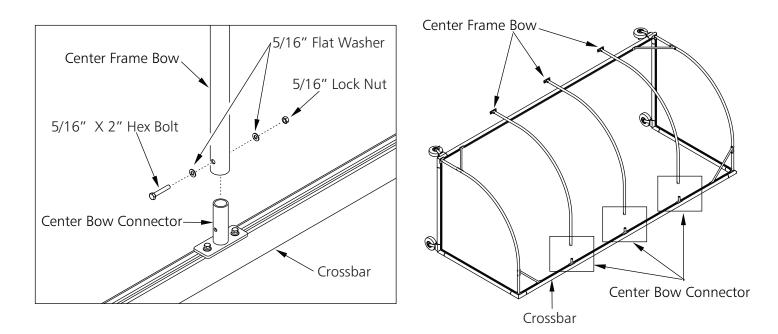


### 

15. Attach center frame bows to crossbarusing 3/8" square nuts at locations shown.

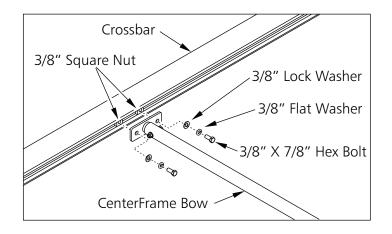


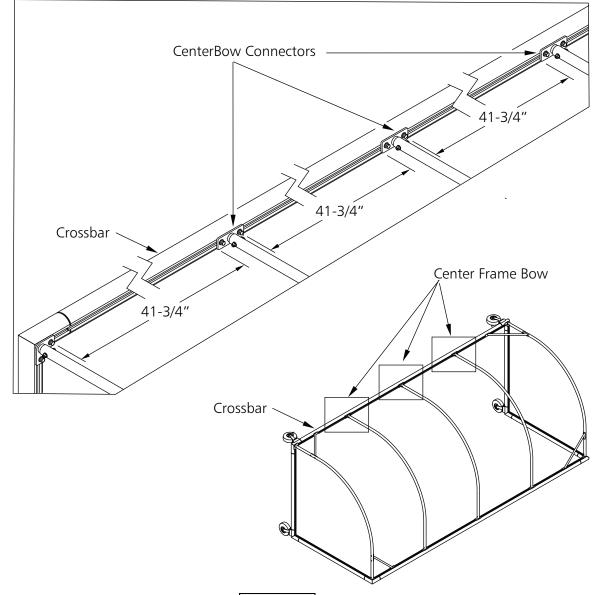

16. Lay out center cover along crossbar with angled corners toward crossbar and hem edge up. Making sure center cover is evenly spaced between left and right post, attach center cover to left crossbar corner with cover clip as shown.

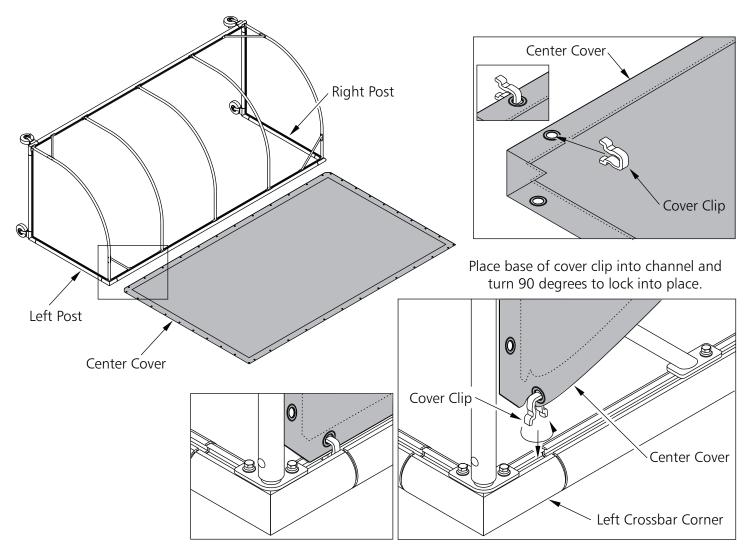


17. Attach center cover to left frame bow at grommet with bow bungee as shown. Repeat steps 16 & 17 to attach right side of center cover to shelter frame.

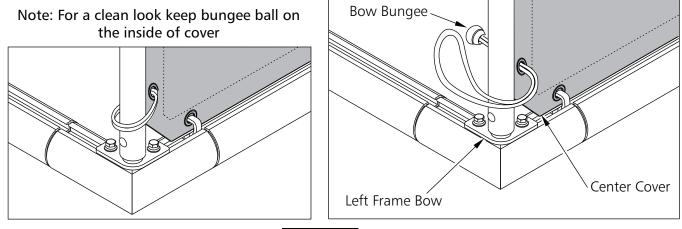


### 


- 18. Attach center cover to crossbar at all grommet locations with cover clips.
- 19. Pull center cover over frame bows, starting at one base corner, attach center cover to base at all grommeted locations with base bungees. Attach center cover to frame bows on left and right sides as shown. Note: One person hold corner of center cover while the other attach bungees base corner and bow.

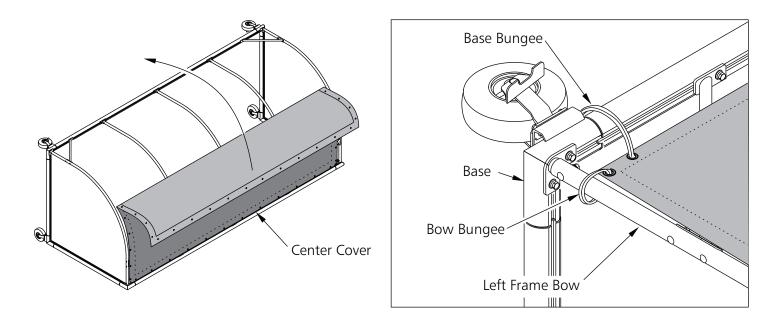


20. After center cover is completly attached, turn shelter up on wheels and engage brakes on swivel wheels w/brake.

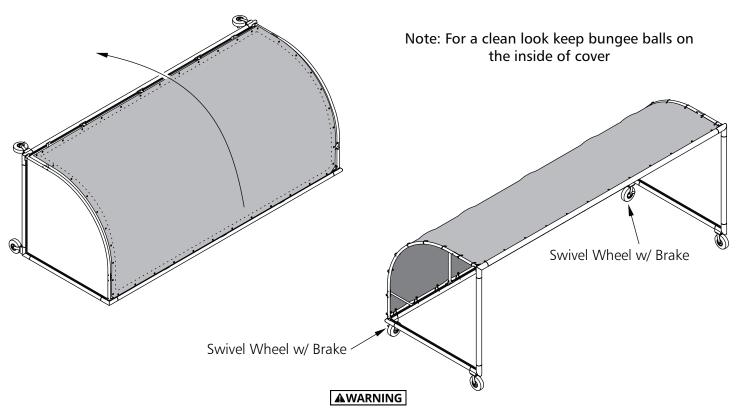

21. On left side cover, find angled corner and with the hem edge inside, attach angled corner to frame bow with bow bungee. With bow bungee holding corner, attach left side cover to the left post with cover clips.

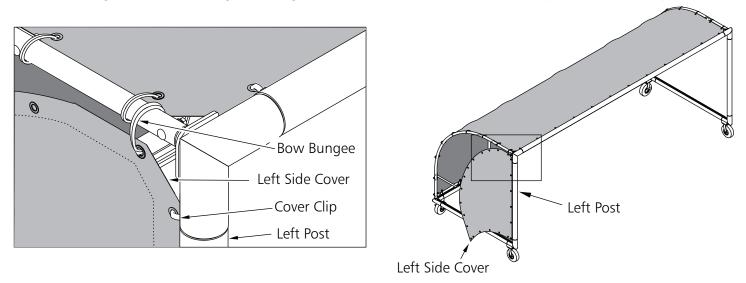


22. Attach left side cover to base and bow starting at the left base corner. Note: Be sure to use base and bow bungees in proper locations.

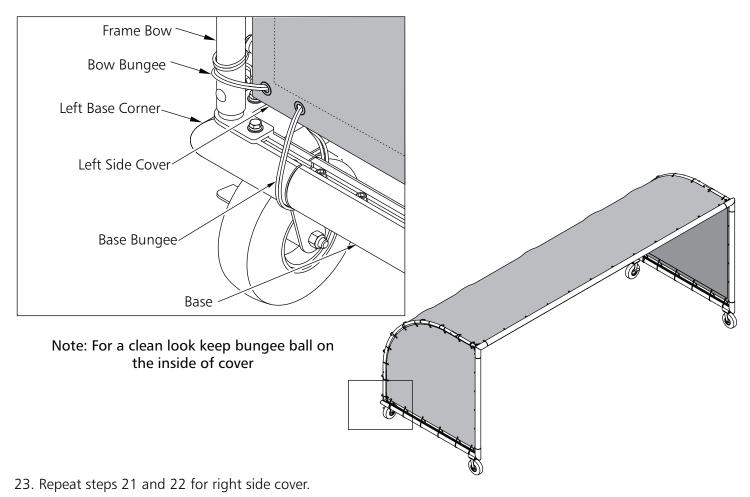

## 

24. Disengage brakes on swivel wheels w/ brakes and move into desired location. To hold shelter in place, fill all four Kwk fill anchor bag according to instructions. Attach Kwik fill anchor bags to shelter base at locations as shown. Also engage brakes on swivel wheel w/ brake.

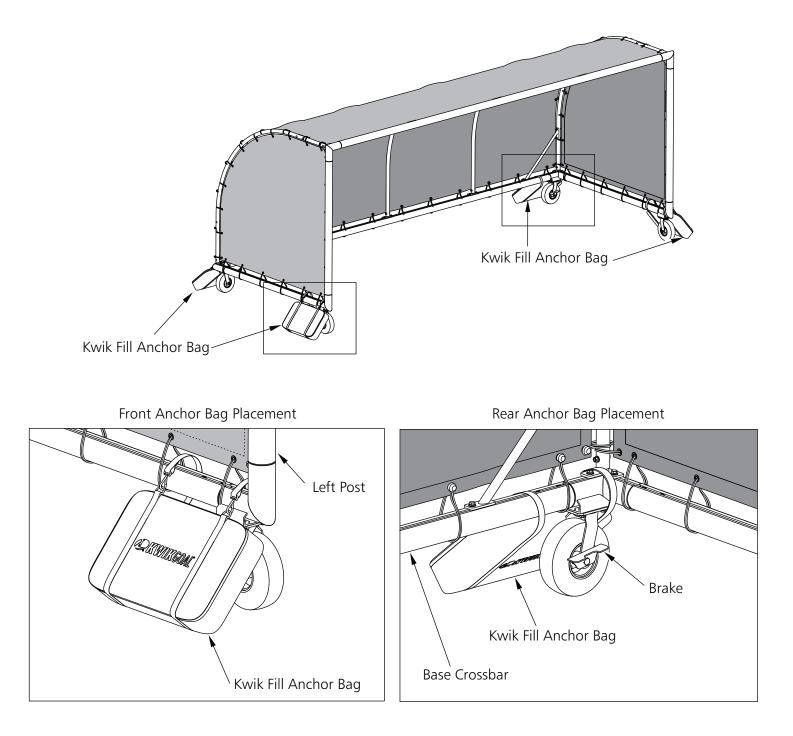

Go to kwikgoal.com for additional product information.

##