

No. 245 ULTRA-FLEX® GOAL MOUNTING INSTRUCTIONS

IMPORTANT NOTE - REMOVAL OF COVER IS NOT NECESSARY FOR INSTALLATION

PARTS LIST		
No.	Qty.	DESCRIPTION
1	1	GOAL ASSEMBLY
2	1	NET
3	4	3/8" x 3-1/2" Lg. CARRIAGE BOLT (Grade 5)
4	4	3/8" FLATWASHER
5	4	3/8" LOCKWASHER
6	4	3/8"HEX NUT
7	4	THREAD PROTECTOR
8	1	WIRE NET SUPPORT
9	1	1/4" x 1/2" Lg. MACHINE SCREW


 Place two carriage bolts (3), flatwashers (4), lockwashers (5) and hex nuts (6) loosely as shown thru the upper two holes of the backboard (and direct-mount feature if applicable).

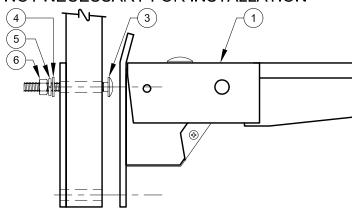

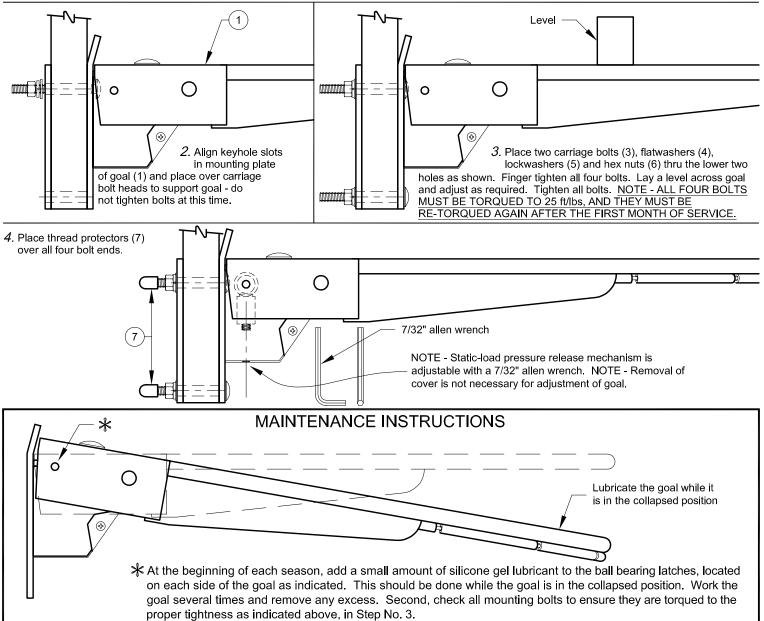

THE OWNER OF THIS EQUIPMENT MUST SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

INSTALLATION OF NET ON No. 245 ULTRA-FLEX ® GOALS

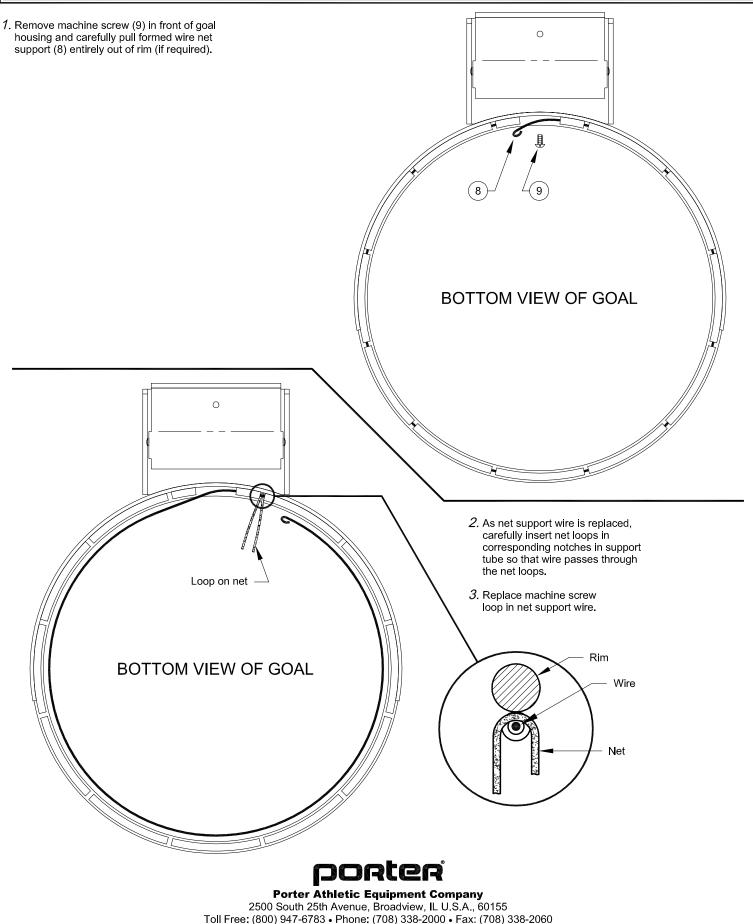

w.w.w.porter-ath.com