




www.powermaxequipment.com
855-232-4666

TA154 - POWERMAX SLED Assembly Instructions

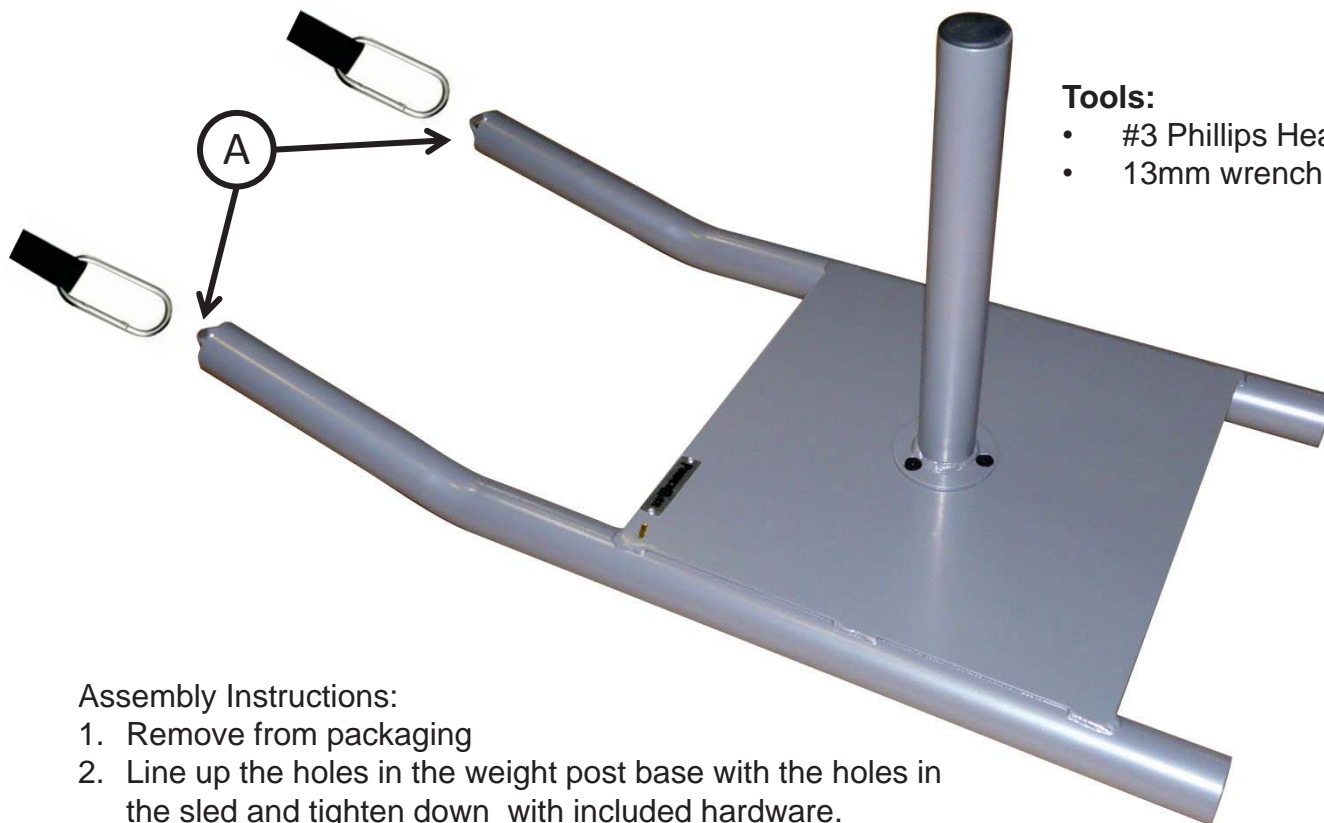


Tools:

- #3 Phillips Head Screwdriver
- 13mm wrench or socket

Assembly Instructions:

1. Remove from packaging
2. Line up the holes in the weight post base with the holes in the sled and tighten down with included hardware.
3. Connect one end of each lead strap to the metal loop (A) at the front of the runners using the carabiners.

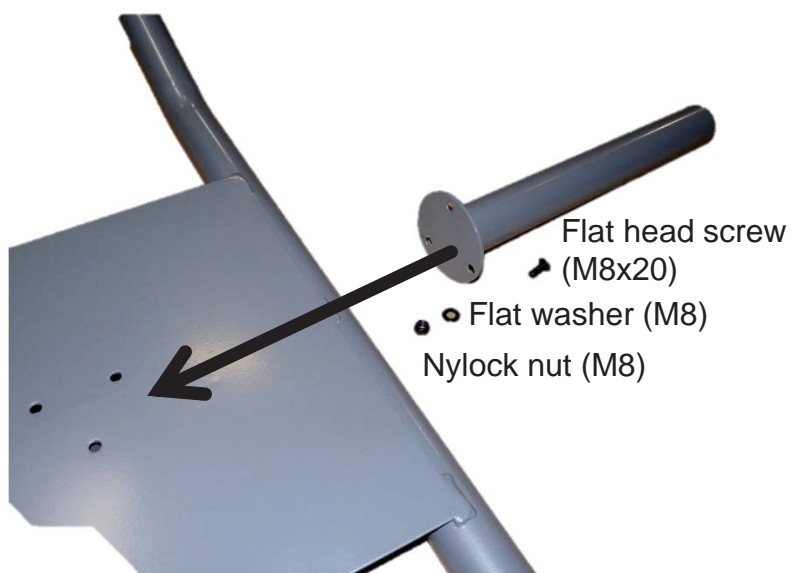

WARNING: Cancer and Reproductive Harm –
For more information go to www.p65warnings.ca.gov