




# 65LB DRY LINE MARKER #BBDLM65X ASSEMBLY STEPS

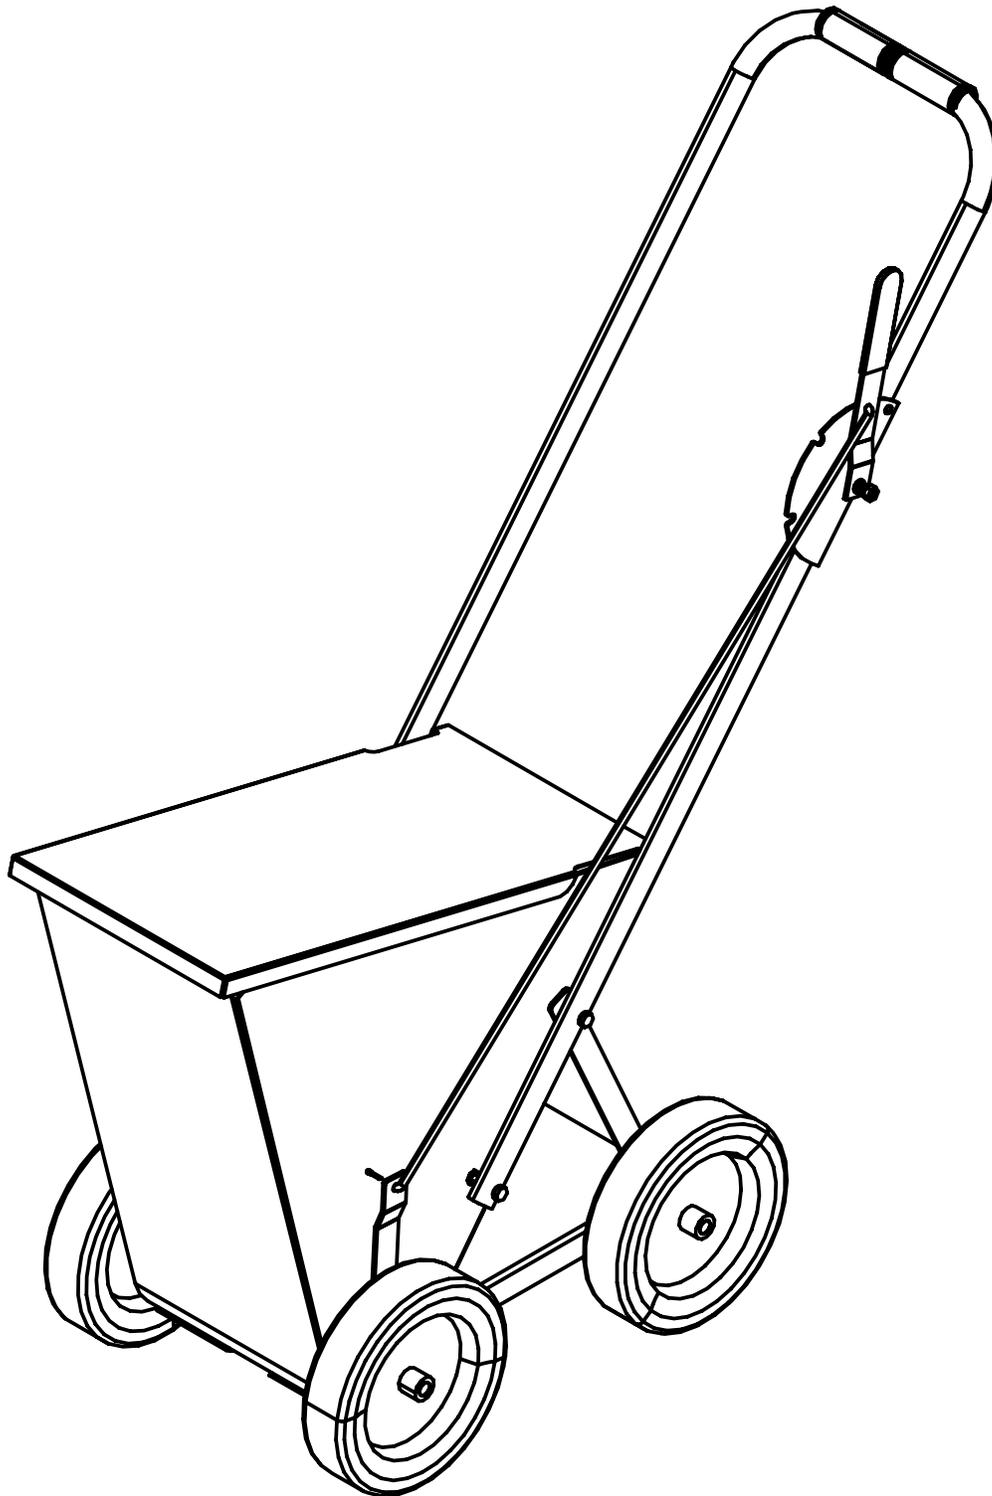

BBDLM65X





## 65LB DRY LINE MARKER #BBDLM65X ASSEMBLY STEPS

### STEP 1

Align the hole on the Bucket panel with the hole in the Support plate and the upper hole in the Handle frame (2). Attach the three parts together with 2 Hex bolts (5), 4 Washers (7) and 2 Lock Nuts (8).

Connect the bottom end of Handle Frame (2) to the Bucket (1) using 2 Hex Bolts (5), 4 Washers (7) and 2 Lock Nuts (8). See Figure 1.

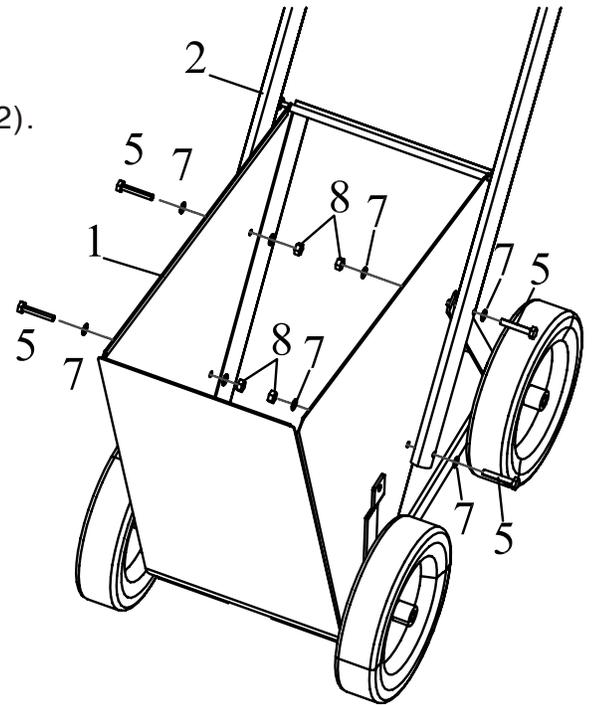


FIGURE 1

### STEP 2

Attach the Notched Plate (4) to the Handle Frame with one Hex Bolt (6), one Washer (7) and one Lock Nut (8). Secure it in place with one Screw (9). See Figure 2A.



Install the Lever (3) onto the Hex bolt (6) that fixes Notched Plate (4), using one Spring (11), one Washer (7) and one Lock Nut (8). Do not over-tighten the nut.

### STEP 3

Connect the bottom end of the Lever and Rod Assembly (3) to the Adjusting Lever. Lock it into place with one Forelock (10).

BBDLM65X



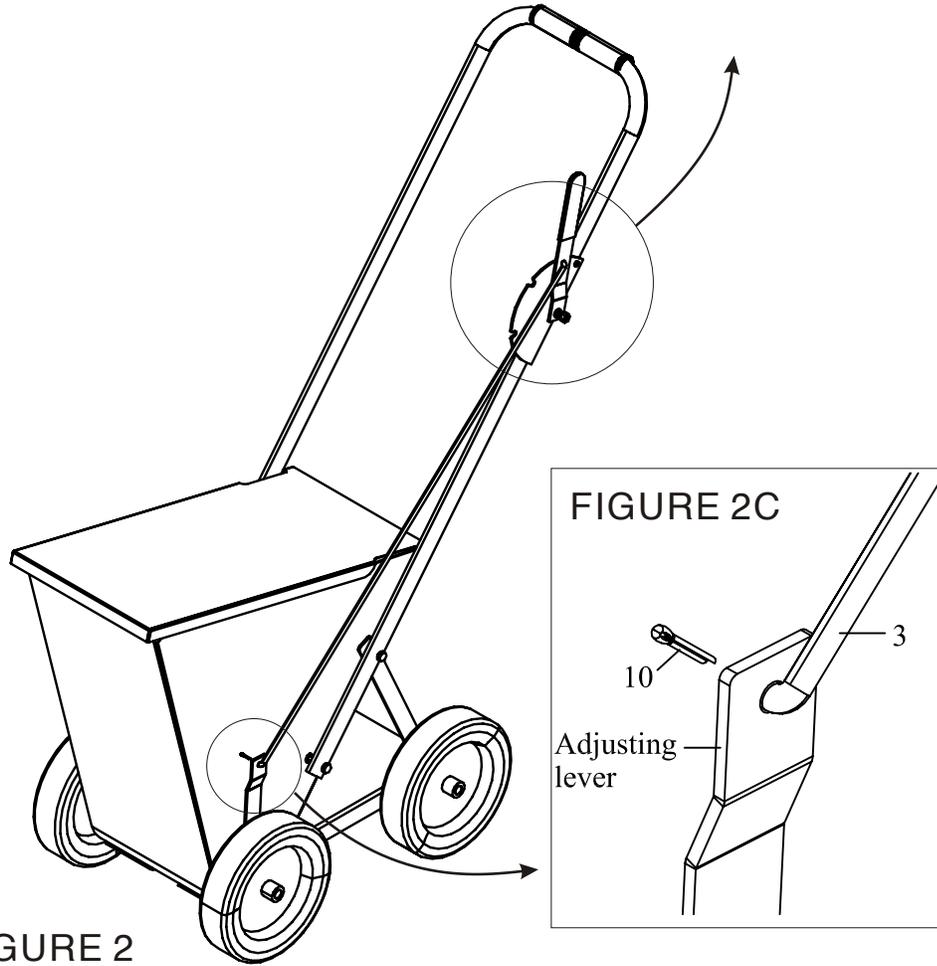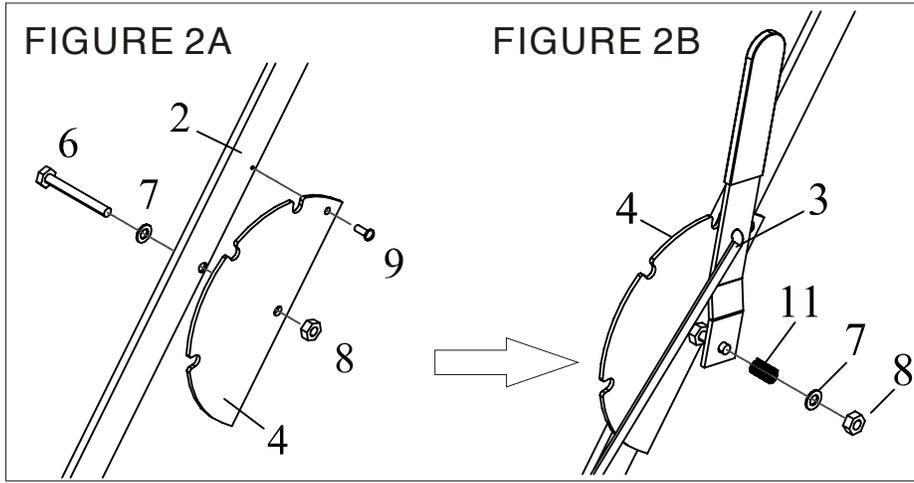

BBDLM65X