


## 90 DELUXE BATTING TEE

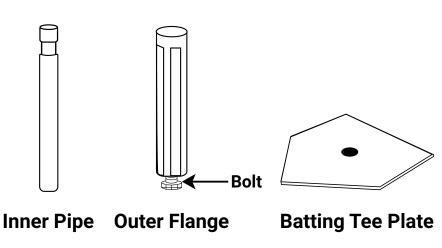

## **ASSEMBLY**

- 1. Unscrew the bolt from the outer flange completely.
- 2. Put the bolt through the hexagonal slot in the plate and then screw the outer flange again to the bolt.
- 3. The inner pipe that will hold the ball will go in the outer flange and the height can be adjusted as desired.

