




# HEAVY DUTY PRO STEEL REGULATION HOCKEY NET

52 in.

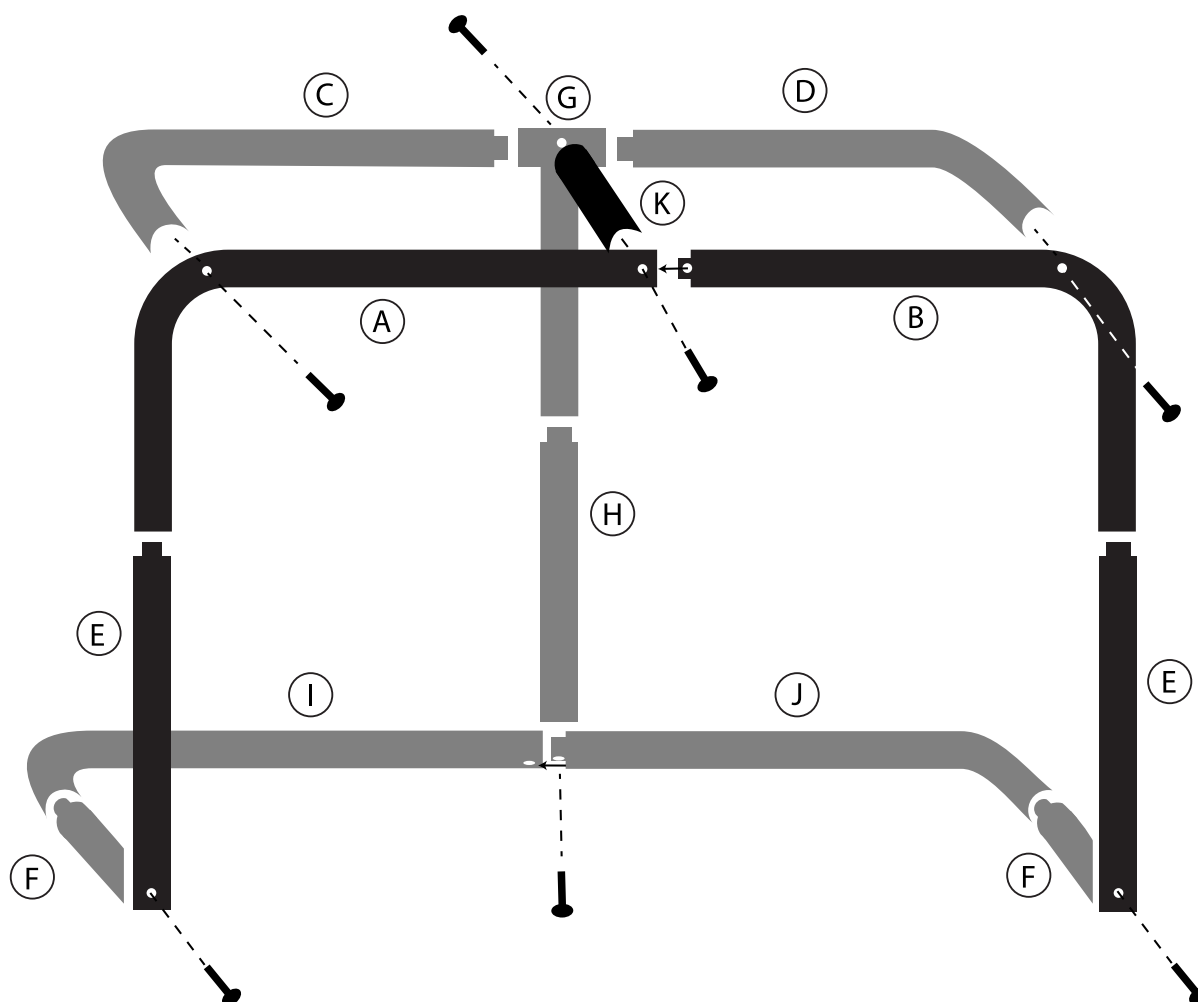

- 1) Remove all parts from packaging and carefully remove pipe plugs without damaging the pipe openings.
  - 2) Begin by gathering parts (A) - (K).
  - 3) Ensure you have enough room to begin the assembly (10 ft x 5 ft)
  - 4) Begin the assembly from the base and work your way to the top.
  - 5) Refer to diagram for instruction
- (\*Note: Connections may fit snug so if necessary use a rubber mallet)

# Assembly Instructions

Position the mesh by lining the red tabs to the two top corners and secure with the "zip ties" provided.

