
# STEEL MAT MOP COCOA MOP

## **ASSEMBLY GUIDE**

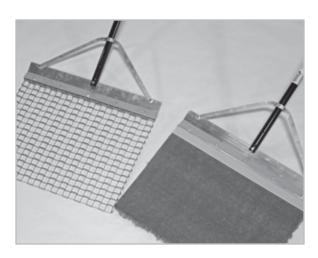





**BEACON** ATHLETICS

# STEEL MAT MOP & COCOA MOP

Your satisfaction is our ultimate goal. Please contact us online at beaconathletics.com/contact/ or call 800-747-5985 if you have any questions.

#### **PARTS & HARDWARE**

Handle [1]

Braces [2]

Cocoa Mop or Steel Mat Mop [1]

#### Hardware Bag:

- **A)** 3/4" bolt (1/4x20) [2]
- B) 2" bolts [1]
- C) 1-5/8" bolt (1/4x20) [1]
- **D)** 1/4" lock nuts [4]


#### **SET-UP**

- Slide handle on to mop plate as shown in the photo below.
- 2) Install bolts, lock nuts and braces according to the main photo (right).
  Do not tighten bolts. The braces must attach to the handle as shown in the photo below: one on top, one on bottom.
- 3) When the braces are properly aligned, tighten all lock nuts.
- 4) Hang up from the handle for storage.

Braces must attach to handle as shown: one on top, one on bottom.





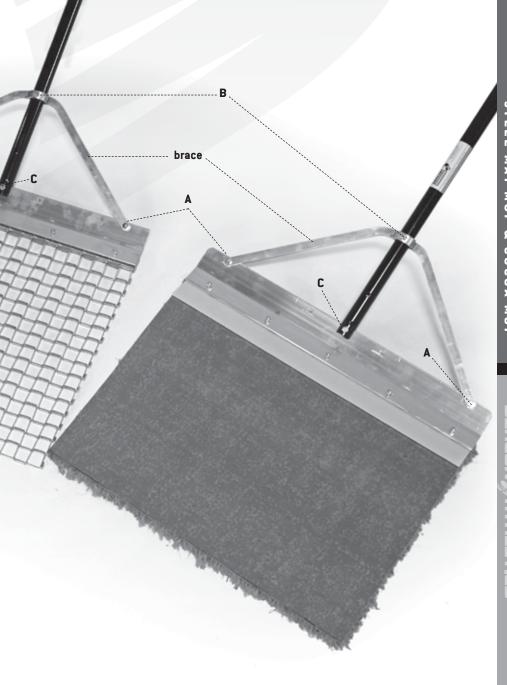

### Consider these Beacon Built field maintenance products...









**Get the weight right** with either the Beacon X-Drag Kit Field Kit or Adjustable Weight Nail Drag System. Both allow you to adjust the weight of your drag with Beacon Field Weights. The correct weight depends upon many factors, and field weights will put you in control.









Improve your efficiency and accuracy with these tried and true Beacon products.

The Level Board lets you cover a much wider area to cut down high spots, making your leveling more effective and the heavy-duty aluminum Mound Slope Gauge gives you an accurate indication of your mound slope.

Contact us or visit BeaconAthletics.com



BeaconAthletics.com | 800-747-5985 | fax 608-836-0724

8233 FORSYTHIA STREET, SUITE 120, MIDDLETON, WI 53562

© Copyright 2018, Beacon Athletics.. All Rights reserved. This material may not be republished, rewritten or redistributed including electronically cached without the prior written consent of Beacon Athletics.