


PPR-15G INSTALLATION GUIDE

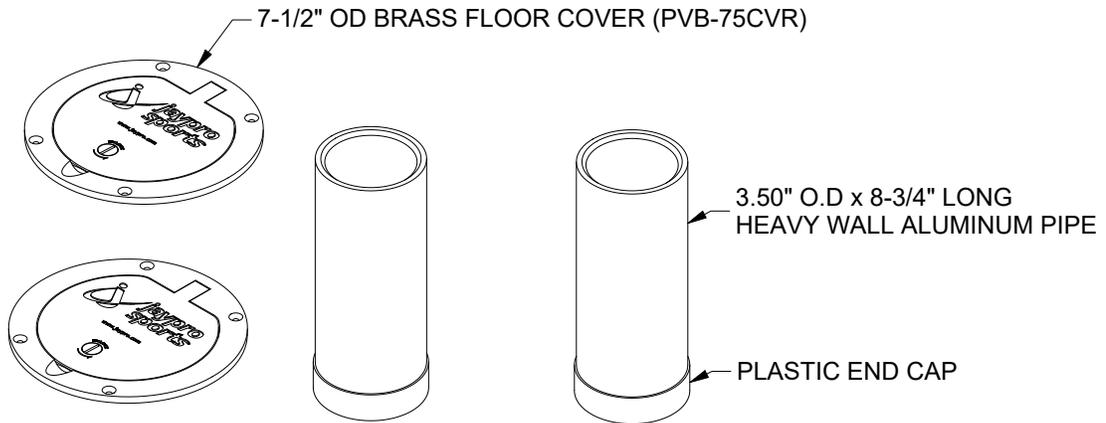


FEATURES:


- > 10" DEEP INDOOR FLOOR SLEEVE FOR WOOD OR SYNTHETIC FLOOR.
- > DESIGNED TO FIT 2-7/8" O.D. UPRIGHTS.
- > SLEEVE CONSTRUCTED OF 3.50" O.D. x 8-3/4" LONG HEAVY WALL ALUMINUM PIPE.
- > INCLUDES FLOOR SLEEVE COVER (PVB-75CVR)
- > SOLD IN PAIRS.

INSTALLATION:

1. See court layout to locate footings and sleeves.
2. Using the proper anchoring material to set the sleeves in place is essential for a good, lasting installation. Use only Hydraulic Cement, also known as Non-Shrink Grout. DO NOT USE bagged concrete mix or similar materials. Hydraulic cement is fast setting, non-shrinking and prevents hairline cracks from forming and propagating. Several brands of hydraulic cement are available at hardware stores. Beware of some that set too fast – under 15 minutes. Rockite® works quite well and provides up to 15 minutes of working time and sets-up in 30 minutes. Other acceptable brands include Embecco 885, Super Flow-Rock®, Master Builders® MasterFlow 713 or 885, Quikrete® FastSet, Sakrete® Non-Shrink Construction Grout.

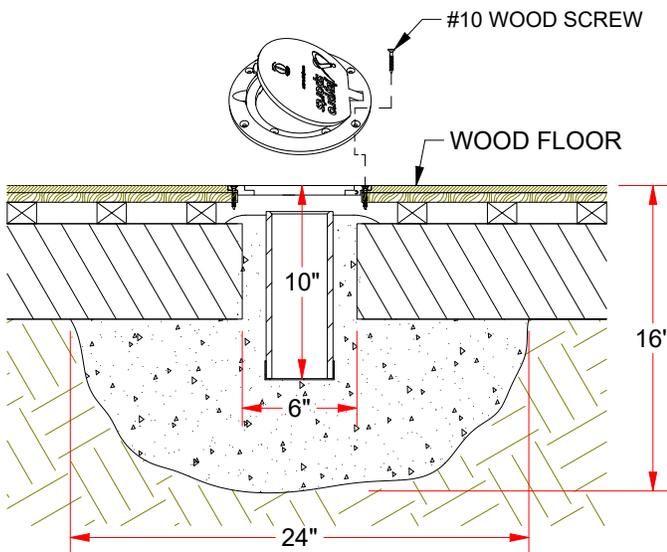

TYPICAL INSTALLATION
IN A WOOD FLOOR

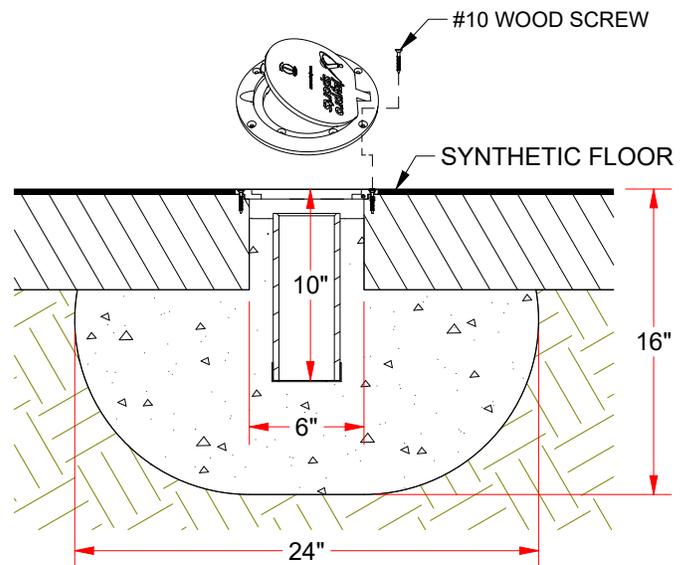

TYPICAL INSTALLATION
IN A SYNTHETIC FLOOR

