

Other CH Anchors

Volleyball Poles	Flag Poles
Boundary Markers	Foul Poles
Mailbox 4x4 Post	Fencing

CH Dig Out Tool



\$20



CH Foul Pole Set

To install CH Foul Poles you get
2 CH 1 1/2" Anchors and 2 CH
Foul Poles 10ft long powder
coated Red, 5ft CH extensions
available.



To order additional CH Drivers, Anchors and DigOut Tools
contact **Anthem Sports, LLC** at **(800) 688-6709**.

For questions about installation and additional product
information, contact Robert Potthast at RMP Sports, Inc. at
(815) 477-1350 rmpsports@yahoo.com

CH Base Anchor & Driver System

Installation Instructions


RMP Sports, Inc. CH Driver & Anchor Products

1818 Woodhaven Drive
Crystal Lake, IL 60014
815-477-1350

rmpsports@yahoo.com

www.chdriverandanchor.com

READ ME FIRST!

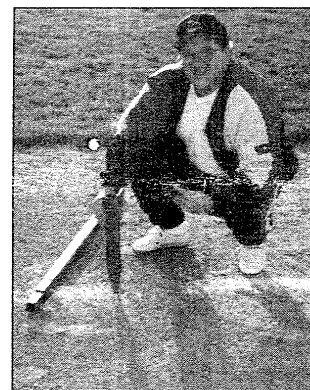


**For Information &
Orders**

Anthem Sports, LLC
(800) 688-6709

Parts are supplied for 1 1/2" (red) or 1" (white) installations.

CH Bolco 1" Parts List
CH Driver (2 parts - red)
CH Bolco Anchor 1" (white)
CH Bolco Adapter (white)

CH Hollywood 1 1/2" Parts List
CH Driver (2 parts - red)
CH Hollywood Anchor 1 1/2" (red)
CH Bolco Adapter (white)

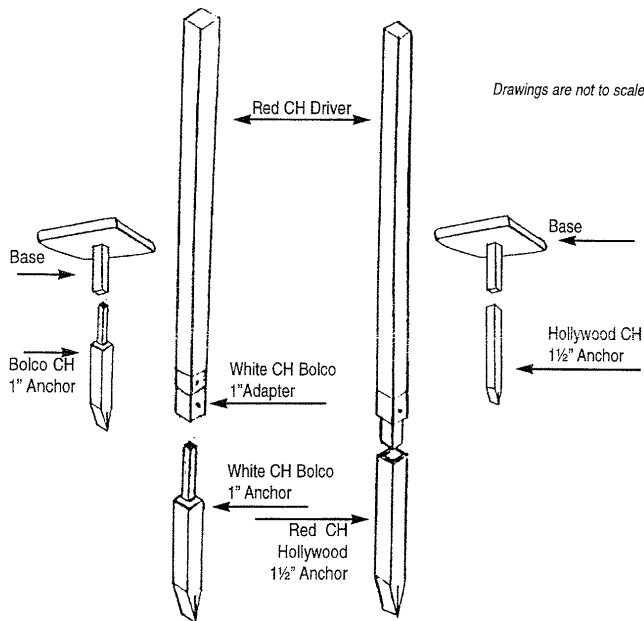

To avoid injury or product damage, Do Not Use this product in any other way unless it has been approved by the manufacturer.

CAUTION

Wear protective hearing and eye gear while using this device. Always contact all utility companies to locate any underground utilities before installation.

Refer to **Quick & Helpful Tip Sheet** for Assistance

To Install CH Hollywood (1 1/2") Anchor

1. Find the point where you want your base. Mark it.
2. Remove the CH (white) Adapter from the driver shaft if it is attached.
3. Slide the red CH 1 1/2" Anchor onto the end of the driver.
4. Begin to drive the red CH 1 1/2" Anchor into the ground with the driver. Check with a level to make sure that it is going in straight.
5. When the anchor is about 2" below the ground, put the base on.
6. Make sure base is square and level.

To Install CH Bolco (1") Anchor

Find the point where you want your base. Mark it.

1. Put the CH (white) Adapter at the base of the driver. Using the bolt and tap provided, fasten tightly.
2. Slide the white CH 1" Anchor onto the end of the driver.
3. Begin to drive the white CH 1" Anchor into the ground with the driver. *Check with a level to make sure that it is going in straight.*
4. When the anchor is about 2" below the ground, put the base on.
5. Make sure base is square and level.


To Move or Reposition CH Base Anchor

(Ideal for temporary fields & fields with multiple base lengths.)

1. Attach CH Driver to the CH anchor.
1. Push N S E & W (rock) to loosen.
2. Grab the CH anchor with pliers or hand and pull out of ground.
3. Fill hole with normal infield soil.
4. For best results, moisten soil and tamp down. (You can use the end of the driver to tamp.)
5. Make sure surface is level.
6. Proceed with instructions above.

To Replace Existing Concrete Anchors


1. Remove old concrete anchor.
2. Fill hole with normal infield soil, moisten and tamp.
3. For best results, let area settle thoroughly and add dirt as needed.
4. Make sure surface is level.
5. Proceed with instructions above for CH 1 1/2" or 1" Anchors.

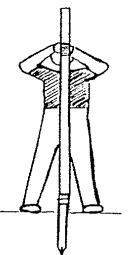

Double First Base / Pitching Rubber Installation

- 1st Drive the first CH Anchor about $\frac{3}{4}$ of the way in.
- 2nd Install the double base and let the stem mark where the second CH Anchor should go.
- 3rd Remove the double base.
- 4th Drive the second CH Anchor in about $\frac{3}{4}$ of the way.
- 5th Install the double base again to make sure the CH Anchors are lined up properly.
- 6th Adjust CH Anchors if needed and drive them in two inches below grade.
- 7th Install double base and play ball.

Below is a general sketch of baseball diamond components. Refer to your base manufacturer's manual for diagrams and pertinent installation instructions.

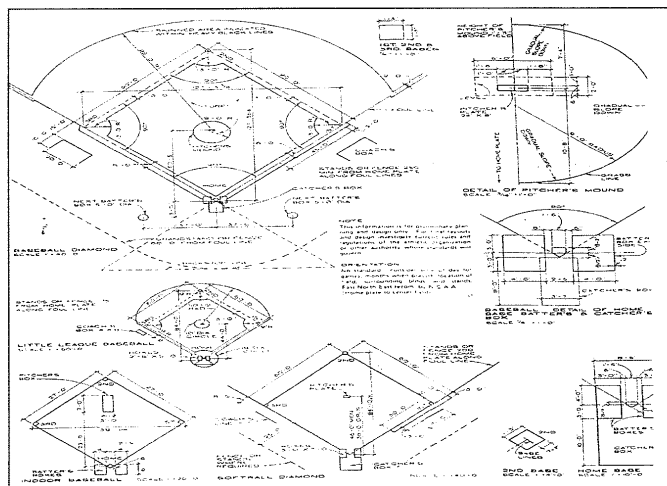

Ask about CH Standard Anchors (Hollywood Style)

1. Galvanized.
2. Lower price.
3. Lighter for shipping.
4. Works with CH Driver.

RMP SPORTS, Inc.
CH Driver & Anchor Products
 1818 Woodhaven Drive
 Crystal Lake, IL 60014
 (815) 477-1350 RMPsports@yahoo.com
www.chdriverandanchor.com

Quick & Helpful Tips

1. To find the center point of the base for driving the CH Anchor, turn the base upside down exactly where you want it. Then outline it by writing in the dust. Remove the base and drive the CH Anchor into the center of the square you drew.
2. Use a level to help keep the anchor going in the ground straight. You can also hold the level in a way to site or square up to the other bases.
3. The **CH Dig Out Tool** can save a lot of time and aggravation. It is especially designed to remove dirt easily.
4. If you need foul poles, use a CH 1 1/2 (Hollywood style) Anchor and install it where you want your foul pole. Order a CH Foul Pole at any length you desire and slide it in the anchor. This is great for fields with no fence or a low fence.

To install CH Foul Poles, you need:

- CH (Hollywood Style) 1 1/2" Anchors
 CH Foul Poles are 11ft high with 5ft extensions all powder coated bright red.
5. If your anchor is full of hard-packed dirt, take a cup of water and pour it in the anchor to loosen the dirt.

The CH Anchor and Driver System is Recommended by the Greater Crystal Lake World Series Association for the CABA 15 Year Old World Series held annually in Crystal Lake, Illinois



"This new and innovative procedure for the setting of base anchors will revolutionize the baseball and softball grounds keeper's jobs. The quick and accurate means of driving in the base anchors will save time, money and energy. Congrats to RMP Sports, Inc. and their CH Base Anchor & Driver System!"

Floyd D. Perry, Jr.

*Grounds Maintenance Seminars
 sportsTURF magazine's 1996 Manager of the Year*

Tools and Instructions Needed to Install CH Base Anchors on a 90' Diamond

Tools:

1. One level.	4. One light hammer.
2. One 100ft tape measure.	5. Five 16 or 20 penny nails.
3. One 200ft tape measure.	6. 1 ball of string 330ft or longer.

Important Note: **Inspect Anchors periodically to make sure that they are still installed correctly and at the right depth.**

Instructions:

1. Locate where you want home plate to be.
2. Drive a nail at the point of home plate and tie the end of the string to it.
3. Locate where you want either the right field foul pole (approximately 330 feet from home plate for a baseball diamond).
4. Drive one of CH Anchors into the ground (with CH Driver) where you want the foul pole to be. Drive the CH Anchor just below the surface of the ground.
5. Insert the foul pole and wrap the string around it at ground level. After pulling the string tight you should have a direct line from home plate to the foul pole.

6. To Locate First Base:

Hook the 100 foot tape measure to the nail at home plate and measure 90 feet along the tight string towards the inserted foul pole. Drive a nail at this point. This will be the back outside corner of first base.

7. To Locate Second Base:

Hook the 100 foot tape to the nail at first base and go 90 feet to where you think second base will most likely be.

8. Hook the 200 foot tape to the nail at the point of home plate and measure 127 ft, 3 and 3/8 inches to where you think second base will be.

9. Drive a nail where the two tapes cross over. This is the center point of second base.

10. To Locate Third Base:

From the nail at second base measure 90 feet towards third base and from the nail at the corner of home plate measure 90 feet towards third. Drive a nail where they come together. This is the back corner of third base.

11. Undo the end of the string at the right field foul pole and walk around the outside of the nail at second base and take the string to the nail at third base.
12. Without pulling any of the nails over pull the string tight from first to second, and then from second to third.
13. Wrap the end of the string around the nail at third base.

14. At this point you will have outlined the infield outer corners.

15. Set the base upside down on the inner side of the three corners.
16. Using the fifth nail mark around the outside of the bases in the dirt.
17. Remove the bases and drive CH Anchors (with CH Driver) in the center of the squares at first second and third.
18. Install home plate with the point home plate pushed up against the nail.
19. Finding the left field foul pole.

Find the string attached to the nail at home plate. Take it and stretch it past the outer part of third base 330 feet down the line.

20. Make sure the string is straight and tight and drive one of CH Anchors (with CH Driver) at about 330 feet for baseball.
21. Insert CH Foul Pole and remove all nails.

Important Note: When driving in CH Anchors with CH Driver always use a level to make sure you are driving the CH Anchors in the ground straight. You can also use the level to line up other bases to keep everything square.