


## REQUIRED TOOLS AND MATERIALS:




- (2) Stepladders 8 ft. (2.4 m)




- (1) Allen Wrench (1/4")



- (1) Allen Wrench (5/16")



- (1) Phillips Screwdriver





9/16"



9/16"

- (2 each) 9/16" Wrenches and/or Socket Wrenches and Sockets (Deep-Well Sockets are Recommended).

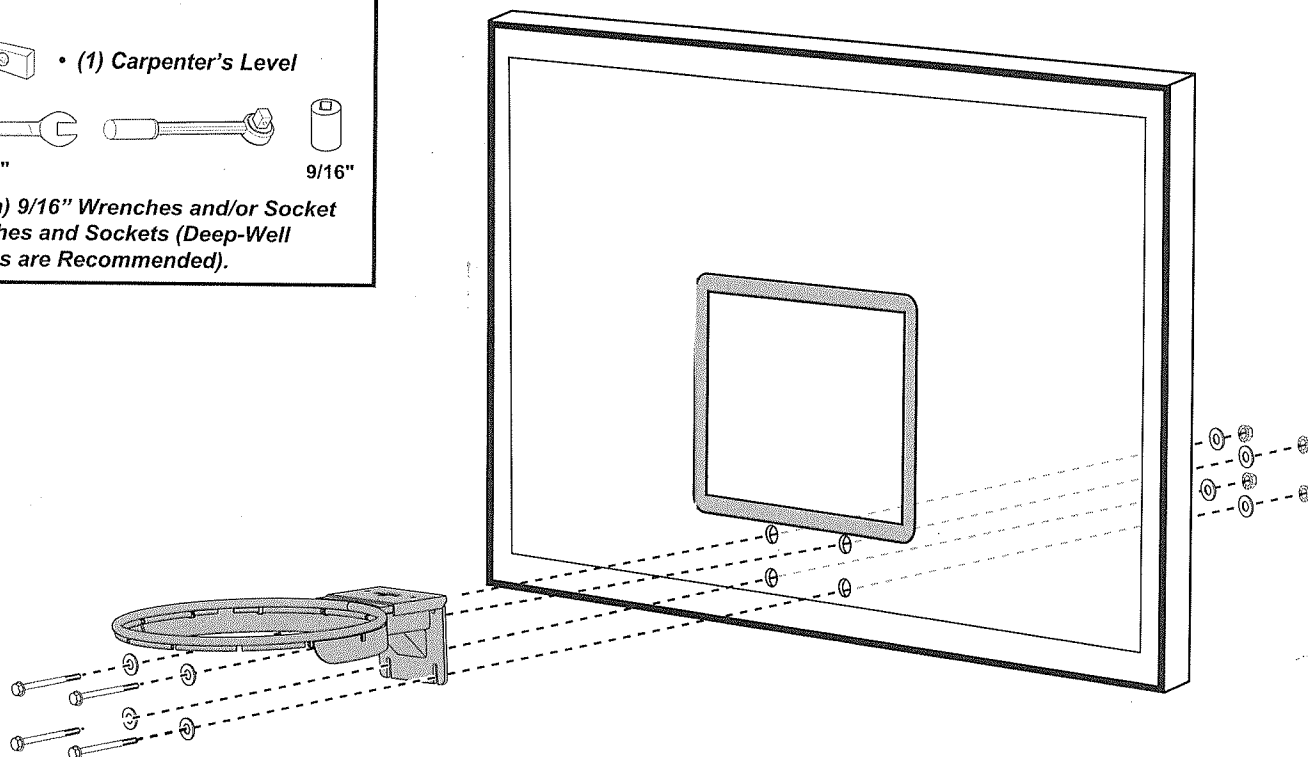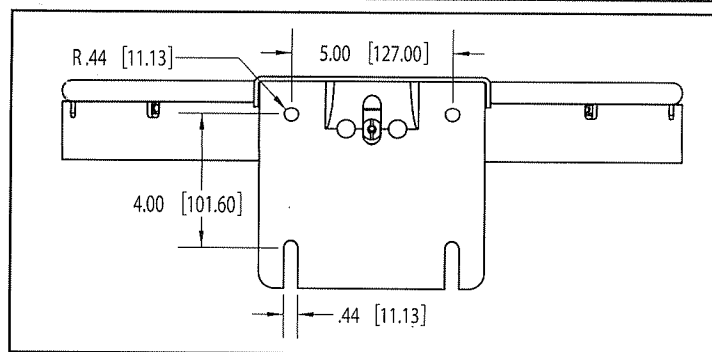

## INSTALL NET

- Remove nylon net-holder from the rim.
- Reinstall while inserting all net loops into slots along ring.
- Position spring lock between ring slots at the position indicated.

