



## **-- LG-1X Lacrosse Goal -- Installation Instructions**










Call Jaypro Sports Equipment at 1-800-243-0533  
during regular business hours for technical support.

[www.jaypro.com](http://www.jaypro.com)

# LG-1X

## PARTS LIST (QTY: EACH GOAL)

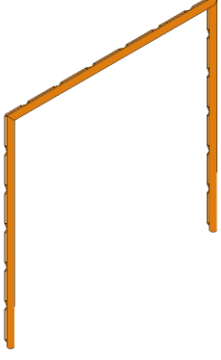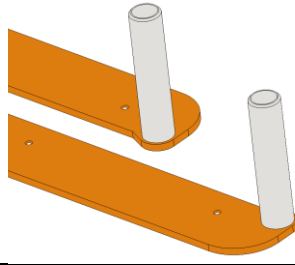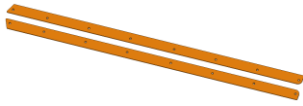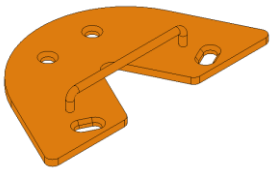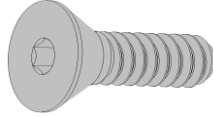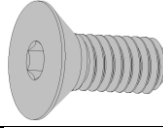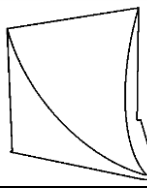ITEM	IMAGE	DESCRIPTION	QTY
1		Goal Upright	1
2		Goal Bases ( <i>LEFT &amp; RIGHT PAIRS</i> )	1
3		Goal Covers ( <i>LEFT &amp; RIGHT PAIRS</i> )	1
4		Goal Cover Rear Plate	1
5		5/16" x 7/8" Long Flat HD Socket Screw	16
6		5/16" x 5/8" Long Flat HD Socket Screw	4
7		Net w/ Lace ( <i>SOLD SEPARATELY</i> )	1
ITEM	IMAGE	DESCRIPTION	QTY

## **Table of Contents**


### **IMPORTANT NOTICE:**

- 1) BEFORE EACH USE CHECK EQUIPMENT FOR PROPER CONNECTING HARDWARE AND STRUCTURAL INTEGRITY. REPLACE DAMAGED OR MISSING HARDWARE IMMEDIATELY.
- 2) NEVER ALLOW ANYONE TO CLIMB OR HANG ON THE NET OR GOAL FRAME. AS SERIOUS INJURY OR DAMAGE TO THE EQUIPMENT MAY OCCUR.
- 3) USE OF THIS EQUIPMENT OTHER THAN INTENDED, MAY BE HAZARDOUS.
- 4) ALTERATION OR MODIFICATION OF THIS EQUIPMENT MAY BE HAZARDOUS AND RESULT IN INJURY. FOR REPAIR OR REPLACEMENT, CONTACT YOUR DEALER OR JAYPRO SPORTS.


### **Tools Require:**

1	3/16" Allen Wrench	1	Socket Wrench
1	Tape Measure	1	Lithium Grease


- Unpack all parts and check against parts list to ensure that all have been included.
- Inspect all parts for damage. Report any damages to the trucking company.
- Tools required: tape measure, step ladder

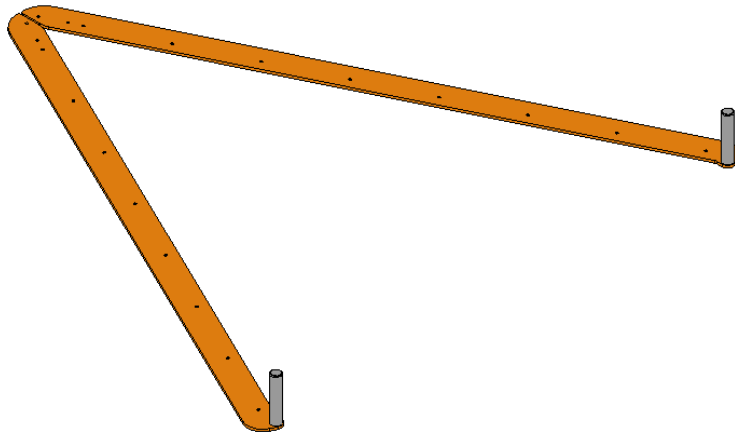


1. Lay out both left and right base members on the ground.

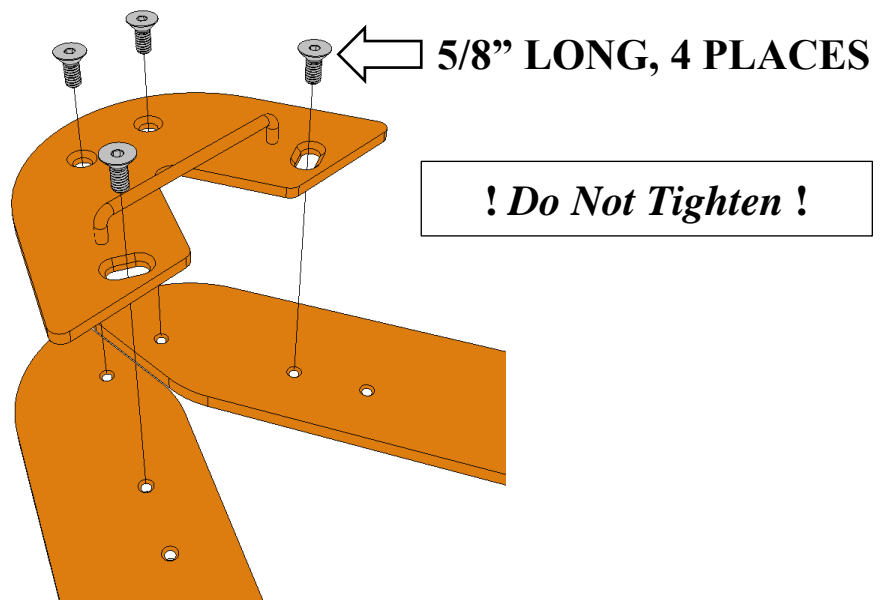


2. Loosely attach the rear corner plate, as shown. Do not tighten the screws but allow the base members to freely move.

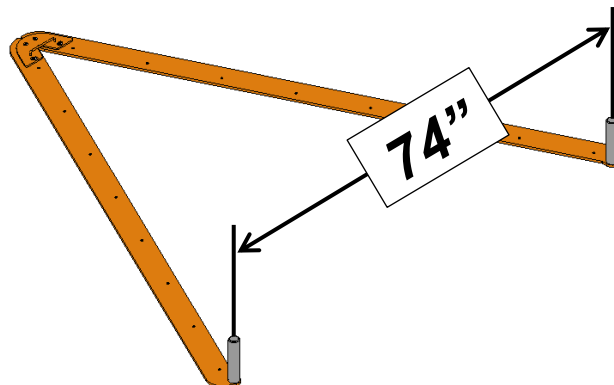

3. Space the front inserts at roughly 74" apart, center to center.

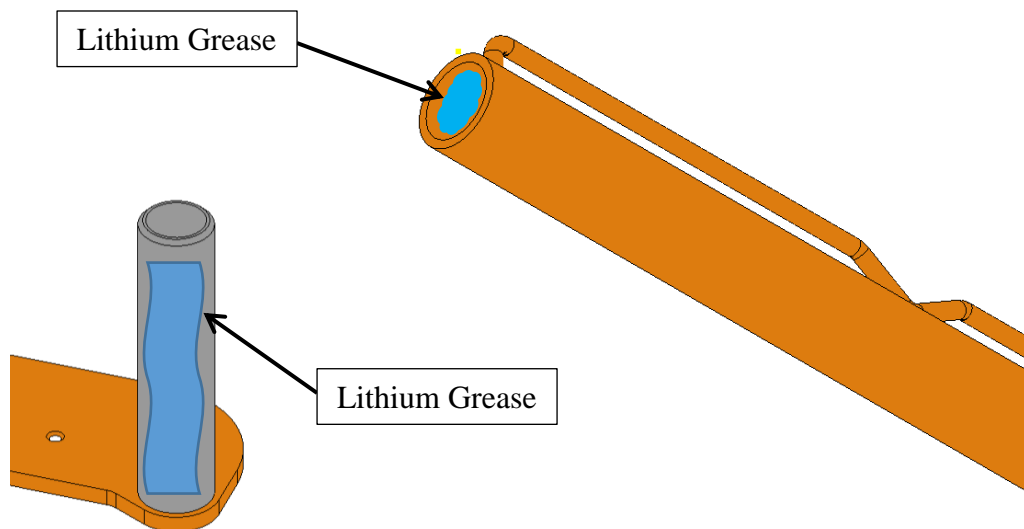

4. Apply some lithium grease to both inserts and the inside of the uprights



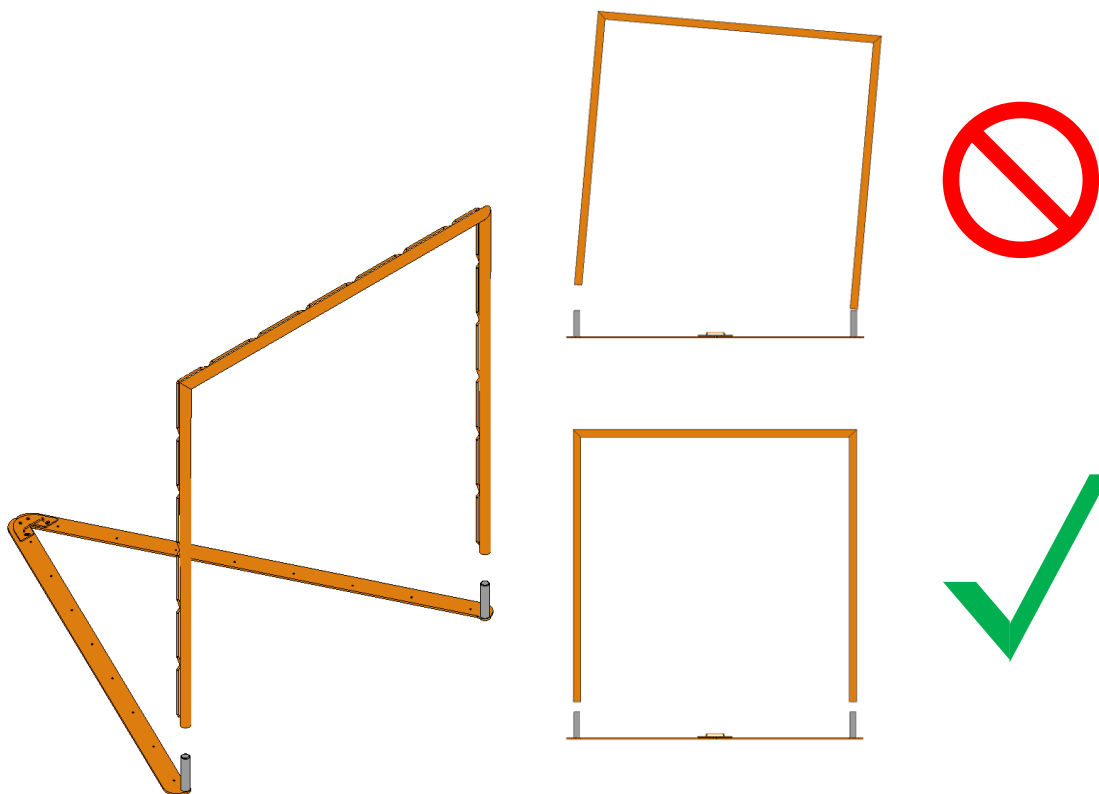


5. Carefully slide the uprights onto the inserts – this is a two person job. Note: To avoid binding, it is very important that both uprights be slid onto the inserts in unison.
6. Once the front goal is fully slid down over the inserts, fully tighten the screws holding to rear corner plate.

7. Lay the net out and identify the top corner. Using a zip tie or piece of string, attached the center of the net to the center of the crossbar. Make any adjustments necessary to ensure the net is centered.
8. Lace the net to the face of the goal (see the lacing detail below).
9. Secure both sides of the net to the base by sandwiching it between the base and top plate. Loosely install all the top plate screws before tightening.
10. Lace the back corner of the net to the net rail on the corner piece.



LACE NET THRU BENT RODS

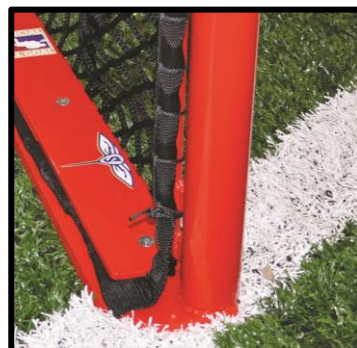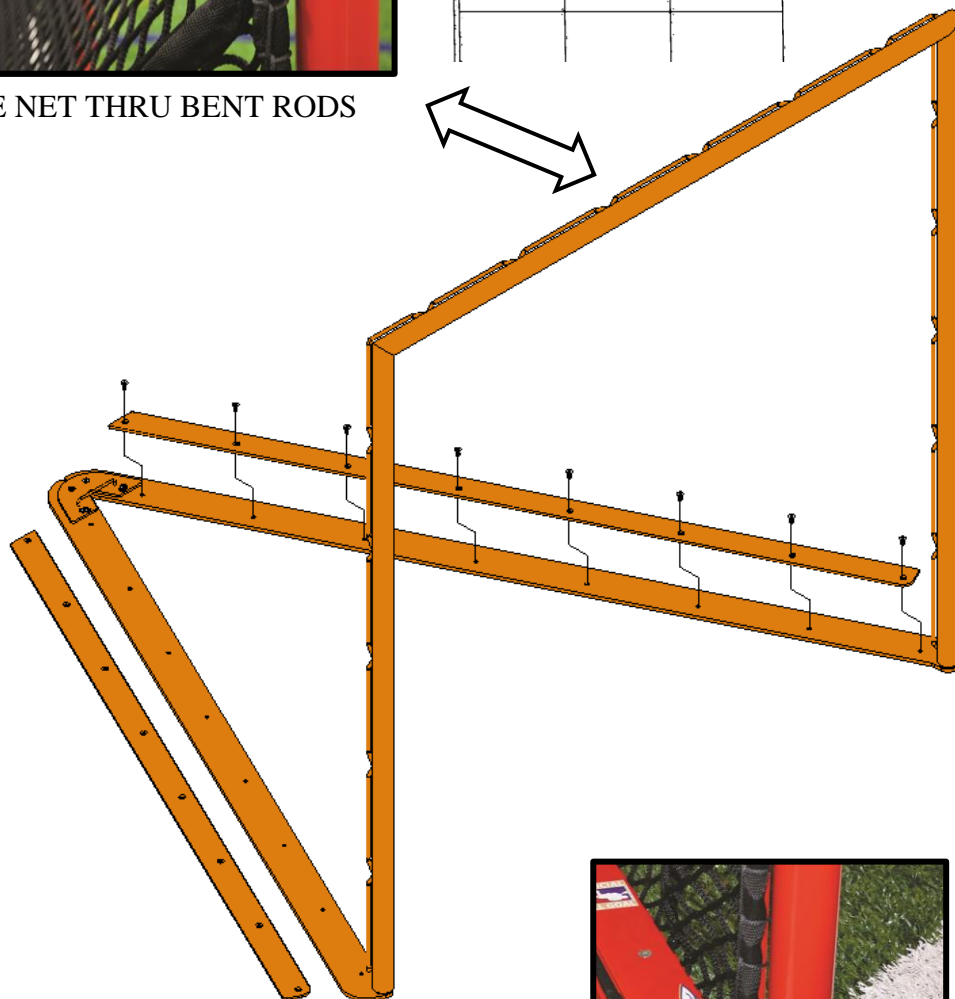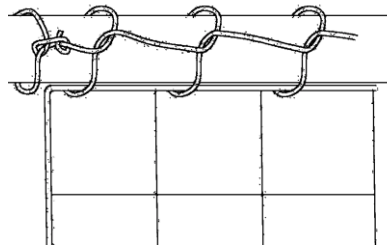

SANDWICH NET BETWEEN PLATES