


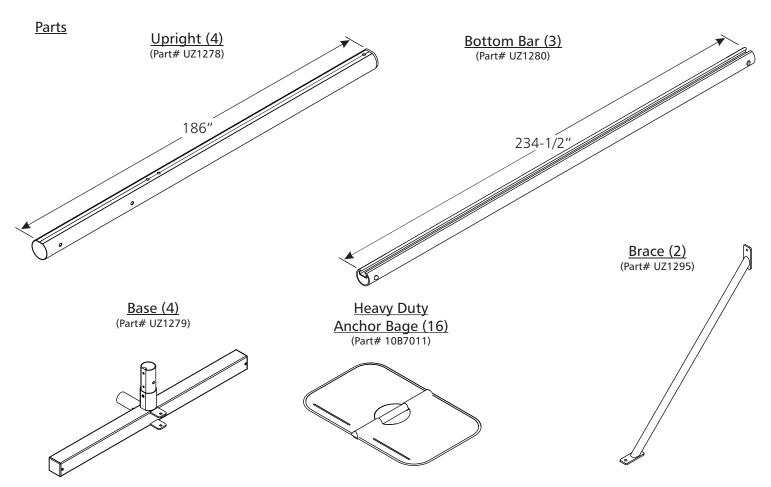


All Kwik Goal products carry a **Lifetime Guarantee**. For help with guarantee issues, visit **kwikgoal.com** and click on the **Lifetime Guarantee** logo or contact customer service at 1-800-531-4252.

ASSEMBLY INSTRUCTIONS FOR 7E201 PORTABLE BACKSTOP

- 1. Unpack all parts and check for damage that may have occurred during shipping. If damage has occurred, notify trucking company immediately. Lay out all parts. Remove all cardboard and packaging immediately. Wet or damp packaging may damage contents.
- 2. Read through entire instruction before beginning assembly and installation.



WARNING

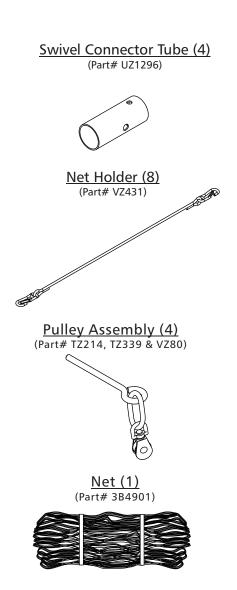





Rope Cleat (4) (Part# VZ569)



Square Nut & Stud (2)
(Part# TZ336)

Hardware

Note: Hardware may be packaged separately in one or more boxes. Open all packages before beginning assembly.

8-32 X 5/8" Flat Head Screw (Part# TZ314	4) (8)
1/4" Flat Washer (Part# TZ147)	(4)
1/4" Lock Nut(Part# TZ19)	(4)
3/8" Flat Washer (Part# TZ189)	(6)
3/8" Lock Washer (Part# TZ301)	(2)
3/8" Nut (Part# TZ166)	(2)
3/8" Lock Nut (Part# TZ197)	(4)
3/8" X 3" Threaded Stud (Part# TZ337)	(2)
3/8" X 3-1/2" Carriage Bolt (Part# TZ340)	(4)

Snap Link (4) (Part# VZ82)



Net Clip (40) (Part# VZ116)



Assembly Tools

7/16" & 9/16" Wrenches

27' Rope (Part# VZ377)




Phillips Screw Driver

(4)



3. Attach swivel connector tube to all bases as shown.


NOTE: Tighten 3/8" lock nuts only until flush with end of carriage bolts.

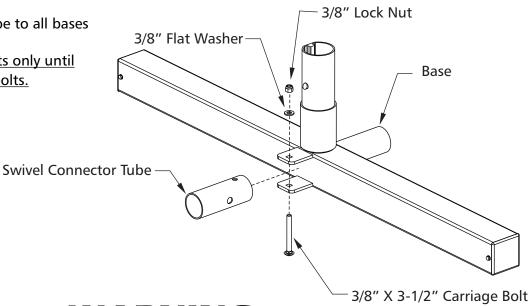

WARNING


4. Set assembled bases and bottom bars in desired location and connect together with snap buttons.


Note: Bases at each end of unit must be connected to the fixed tube of the base assembly.

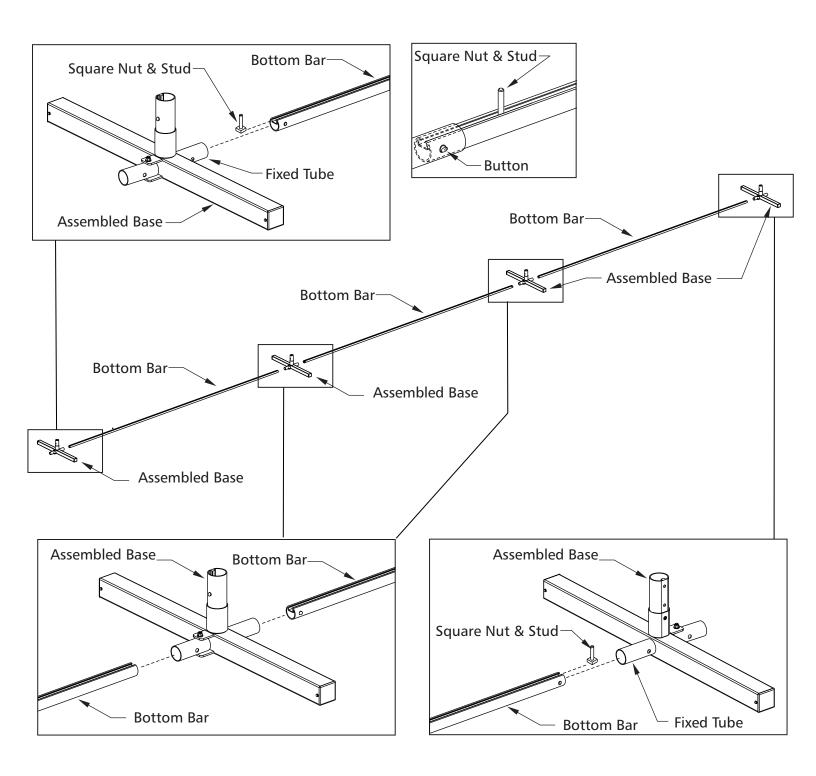


WARNING


5. Fill each of the 16 heavy duty anchor bags with 40lbs of sand or gravel. Set 4 heavy duty anchor bags on each assembled base as shown.

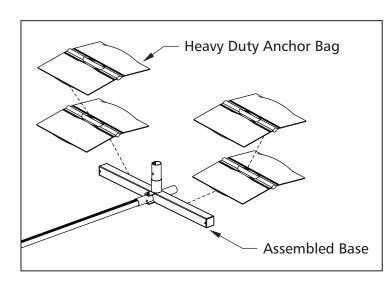

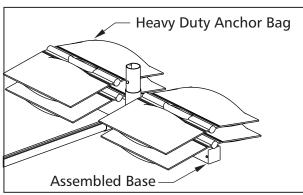


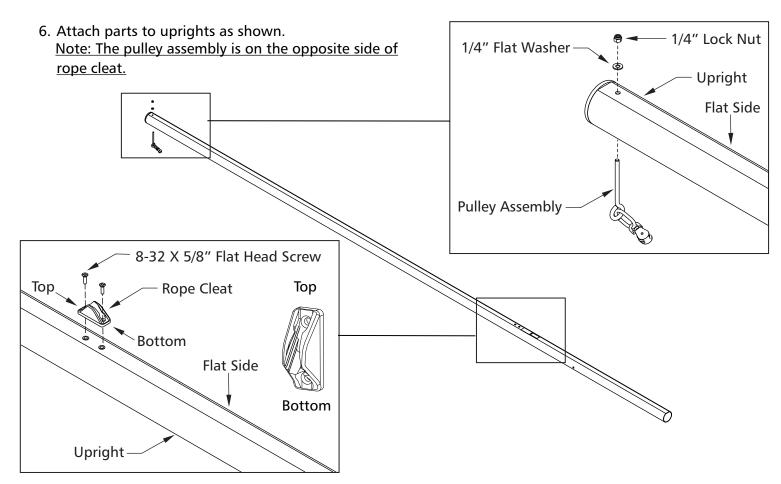

WARNING

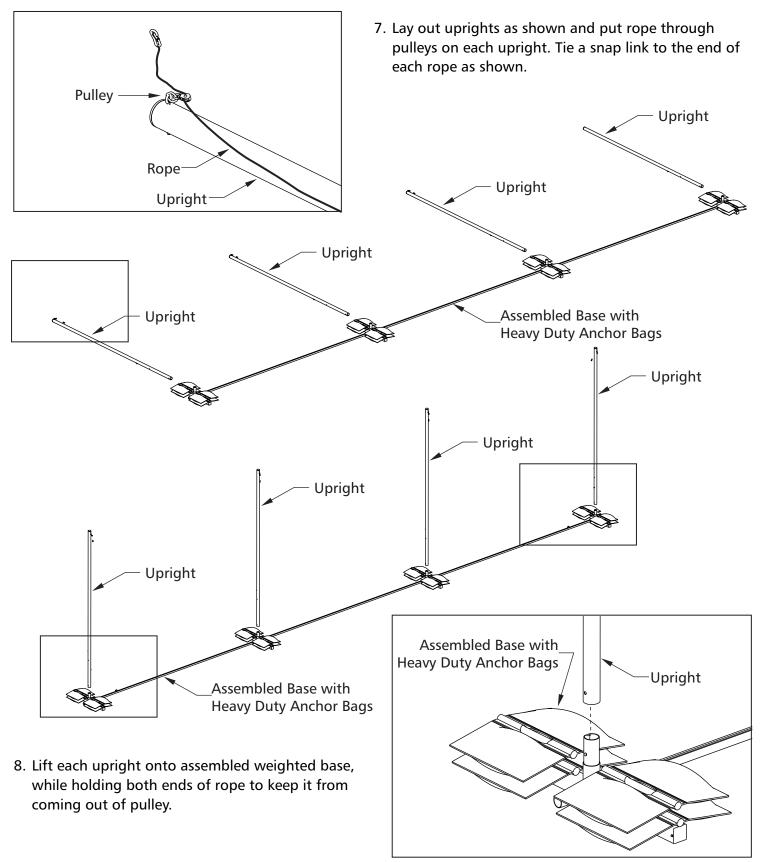


WARNING

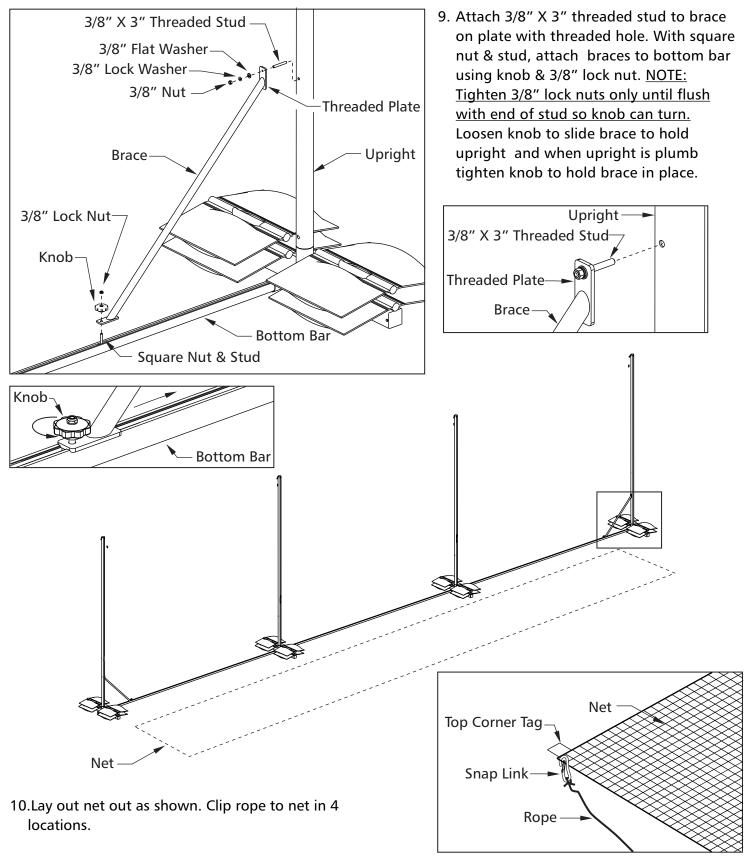


WARNING

11. Starting at one end, hoist net and attach net holders to the perimeter rope of net approximately 17" from the top corner. Then wrap net holder around upright and attach to the perimeter rope again 17" from the first clip.

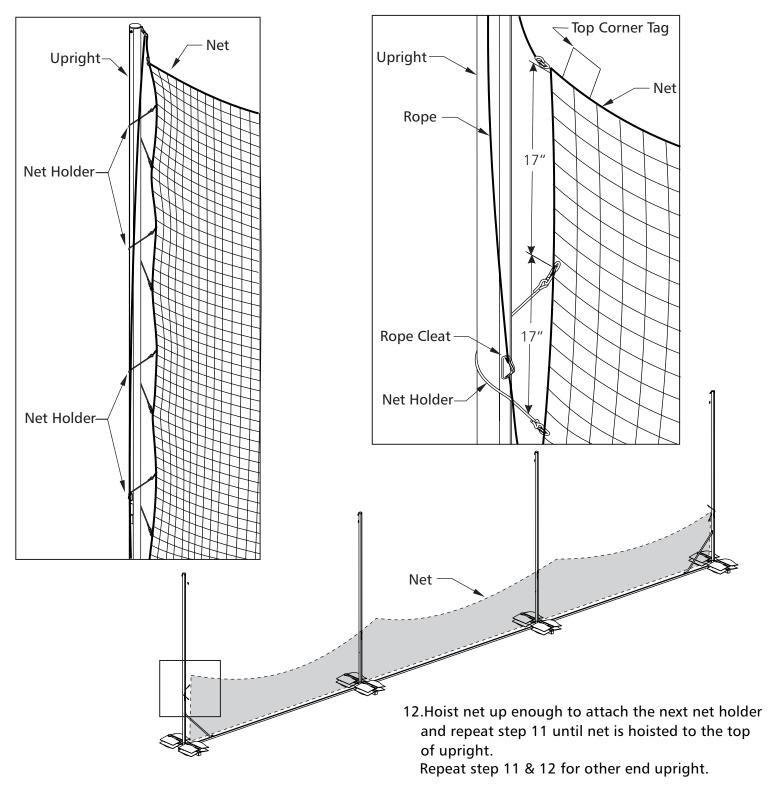

WARNING

13. Complete net raising by hoisting net on two center poles. To secure bottom of net, attach net to bottom bar of backstop with net clips. Place perimeter rope of net in clip and put base of clip into channel and turn 90 degrees to lock into place. Space net clips evenly throughout base, see below for approximate spacing.

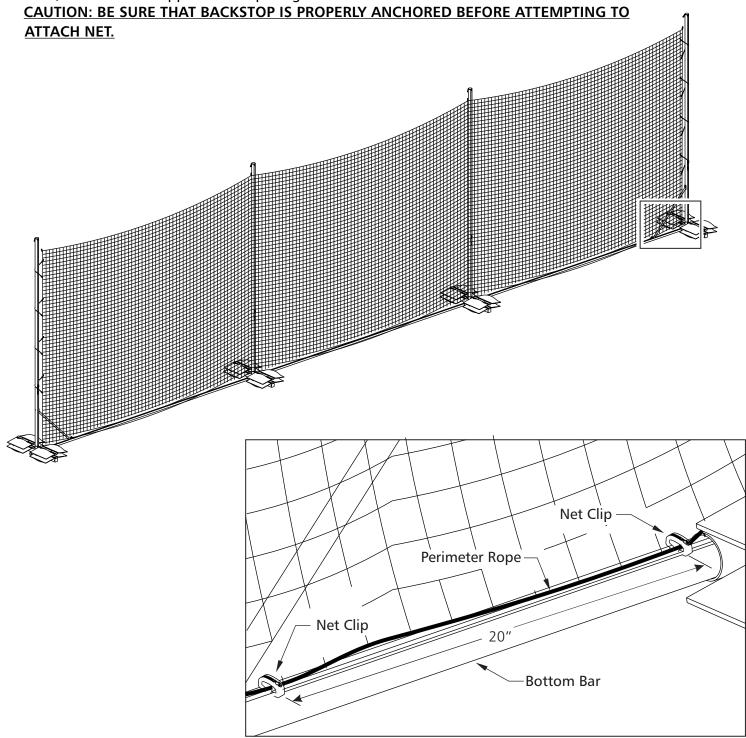

WARNING

14. This unit can be set up to conform to irregular boundaries, such as arcs.

OVER HEAD VIEW

