INSTALLATION INSTRUCTIONS


PARTS LIST		
Item No	o. Qty.	Description
1	1	Cover Plate Assembly
2	1	Floor Sleeve Weldment
3	1	Inside Pipe Cap
4	3	#8 x 3/4" Lg. Flat Head Wood Screw
5	1	Cover Removal Key


FLOOR SLEEVES No. 770, 772, 773, 790, 792, 870, 872, 873

WARNING

READ ALL INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING TO INSTALL THIS EQUIPMENT.

- This sleeve must be installed with the top of the sleeve exactly 1/2" below the FINISHED FLOOR elevation. See Detail "A".
- Contact the architect or flooring contractor, if necessary, to determine the total finished floor thickness and the height that the sleeve should extend above (for wood floors) or below (for synthetic-type floors) the top of the concrete slab.
- Sleeves for end uprights should be installed with a 3° tilt, away from the court. Use a digital level to measure the 3° tilt. All sleeves for center uprights must be installed plumb. See Detail "A".
- The center-to-center of the sleeves must be held to the dimensions shown in the chart in Detail "A", so that standard game nets can be used.
- Existing floors before coring holes in existing floor slabs, check with owner, architect or contractor for locations of any electrical wiring, conduit, etc. that may be concealed in the floor at the sleeve locations. Locate sleeves as required.
- NOTE Before beginning sleeve installation, inspect the inside diameter of this sleeve for damage (dents or out-of-round) and check fit over game standard upright (3-1/2", 3", or 2-3/8" diameter) to ensure proper fit, before allowing to set-up in grout or concrete footing.

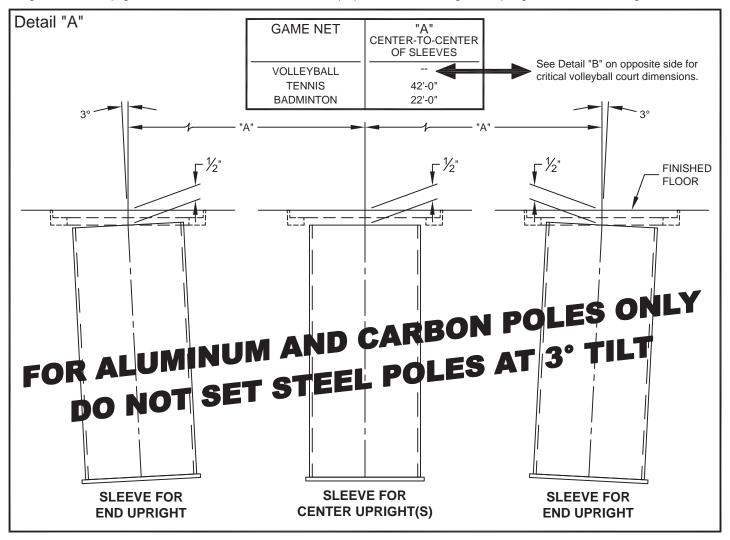

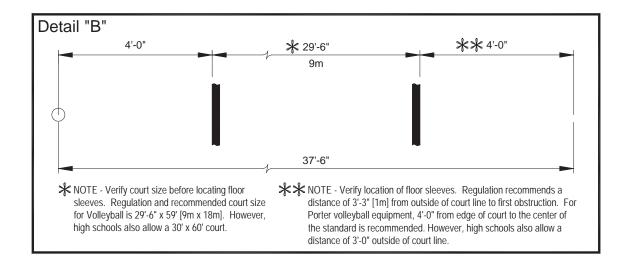

★ WARNING: This product can expose you to Titanium Dioxide, which is known to the State of California to cause cancer. For more information go to www.p65warnings.ca.gov.



Toll Free: (888) 277-7778 • Phone: (217) 367-8438 • Fax: (217) 239-2255 www.porterathletic.com