



*"When The Game Is On The Line"*

# Model PS-84

---

7' x 7' Collegiate Pitcher's Screen



## INTRODUCTION

These instructions outline the assembly and use of the **Pitcher's Screen Model ps-84**. If you need additional information or support in the assembly and use of the Pitcher's Screen you can reach the Jaypro Sports customer support team, Monday through Friday, 8:00 AM to 5:00 PM Eastern time at 800-243-0533.

Replacement nets are available through your dealer or by calling Jaypro Sports.

## SAFETY

All netting deteriorates through use and exposure to the elements. For safe operation and continued high performance from this equipment, inspection and maintenance must be performed before each use. Inspect the net for broken mesh, tears, or other signs of weakness. Questionable nets should be immediately removed from service and replaced.

Use of this equipment other than intended, may be hazardous. Alteration or modification of equipment may be hazardous. For repair or replacement, please call your dealer or Jaypro Sports.

## EQUIPMENT AND MATERIALS

Allen Wrenches  
Wrench Set

Wrench Set  
Rubber Mallet


Optional-Loctite Thread Lock



## BEFORE YOU START

Check to confirm that your Pitcher's Screen has shipped with all hardware. If any hardware or components are missing, contact the Jaypro Customer Support Team.

ITEM	QTY	DESCRIPTION	ITEM	QTY	DESCRIPTION
1	1	LEG BASE	11	2	WHEEL
2	1	WHEEL BASE	12	1	NET
3	1	BASE PIPE	13	2	TUBE CAP
4	1	CROSS PIPE	14	11	M8 x 40 mm SCREW
5	1	UPRIGHT	15	11	M8 CURVED NUT
6	1	LOWER UPRIGHT	16	2	M12 x 65 mm HEX BOLT
7	1	TOP UPRIGHT	17	2	M12 WASHER
8	1	TOP CROSSBAR	18	2	M12 NUT
9	2	TEE	19	2	#14 SELF TAPPING SCREW
10	2	WHEEL BRACKET			

# PARTS IDENTIFICATION

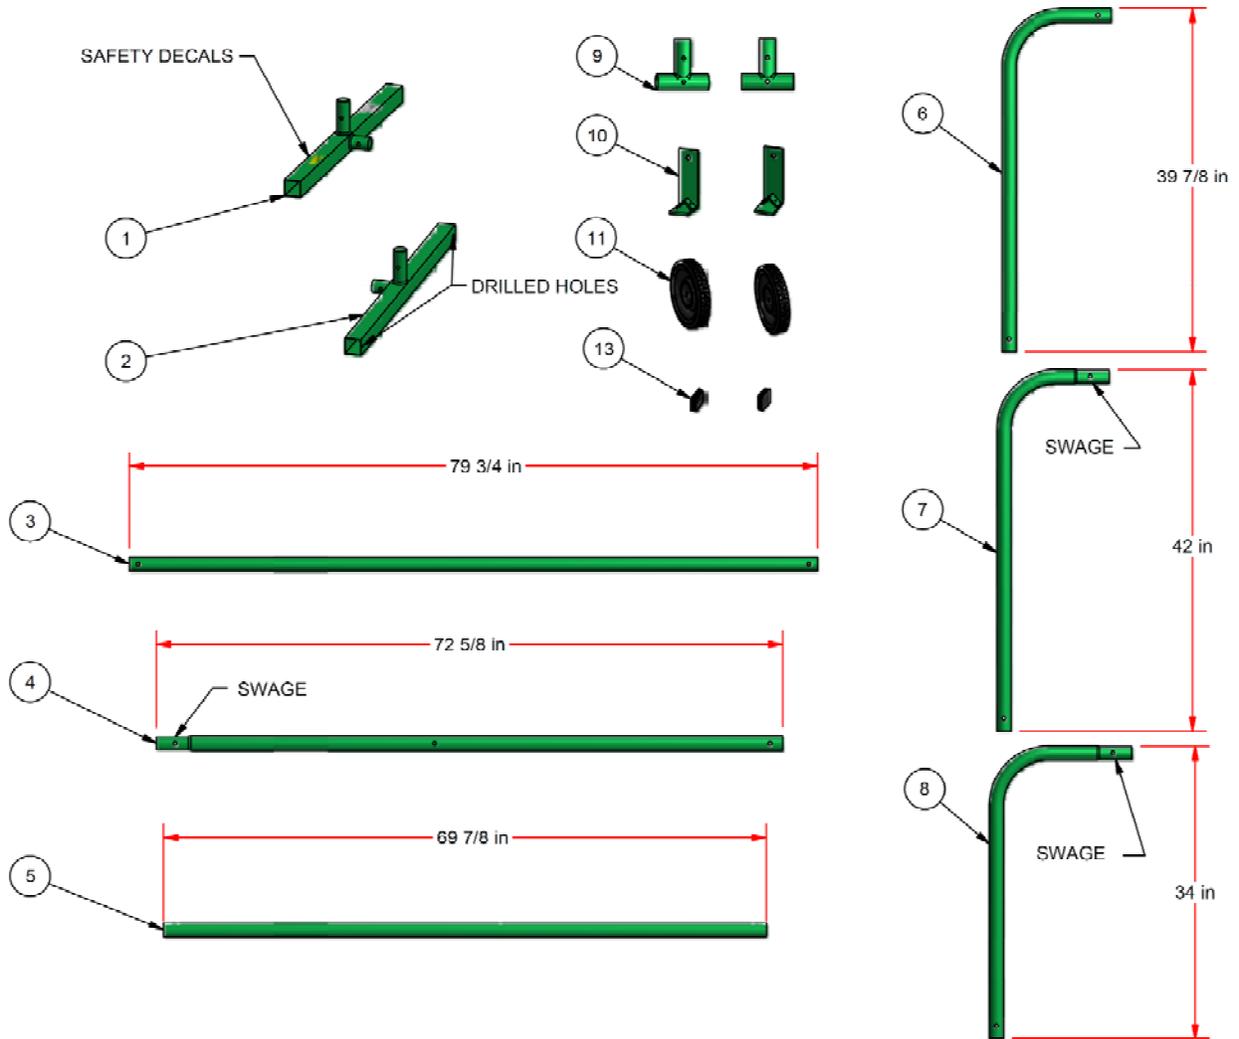


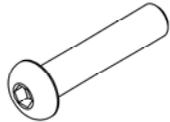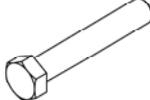 <p>ITEM 14 M8 x 40MM SCREW</p>	 <p>ITEM 15 M8 CURVED NUT</p>	 <p>ITEM 16 M12 x 65MM BOLT</p>
 <p>ITEM 17 M12 WASHER</p>	 <p>ITEM 18 M12 NUT</p>	 <p>ITEM 19 #14 SCREW</p>


## ASSEMBLY

1. Lay out frame pipes as shown in **Figure 1** and assemble together by using fasteners shown in **Figure 3** Loctite may be used on these screws to ensure assembly. Important, the tee fittings slide onto the pipes as shown in **Figure 3**.
2. Once the frame is completely assembled, fully tighten all fasteners.
3. Slip net onto frame.
4. Push end plugs **Item 9** into leg base see **Figure 1** Use rubber mallet if necessary.
5. Put wheels onto wheel bracket. Do not over tighten, wheels should turn freely. See **Figure 4**. Wheel bracket fits into wheel base as shown in **Figure 2** and is secured with one self tapping screw shown in **Figure 4**.


**Figure 1 Model PS-84 Included Components and Hardware**

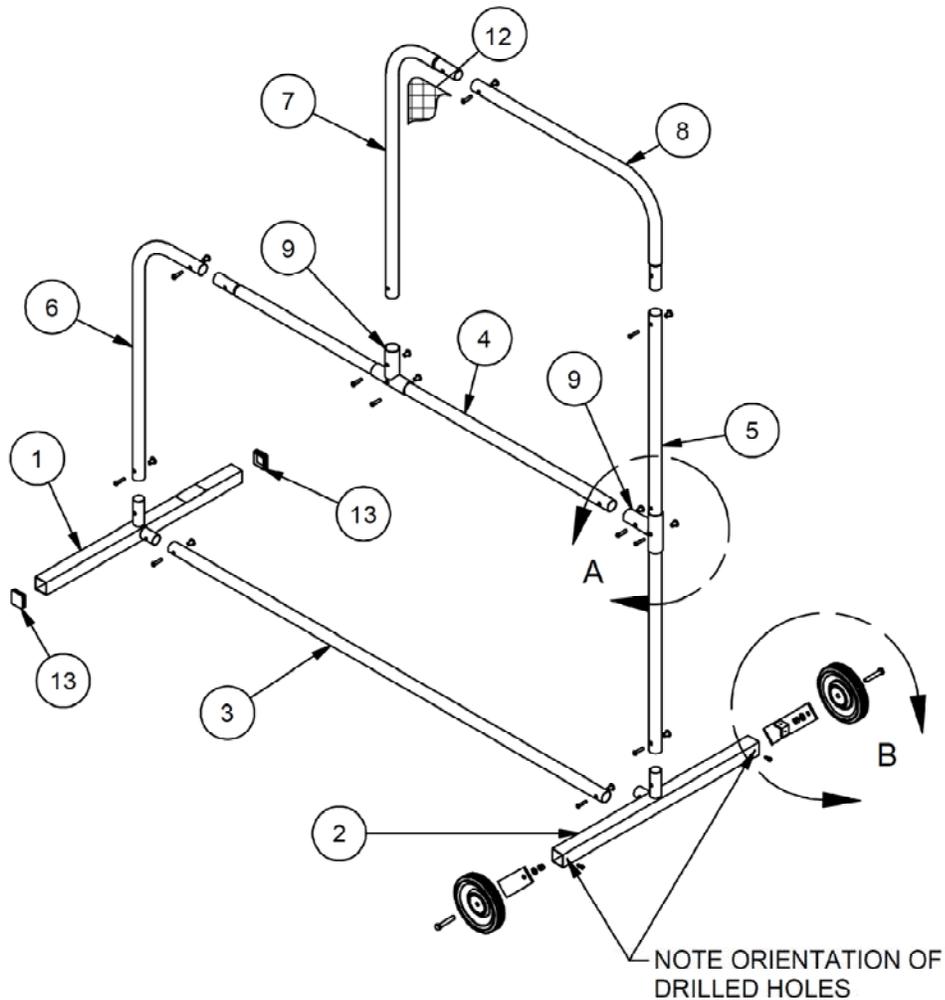

**Figure 2 Wheel Orientation**

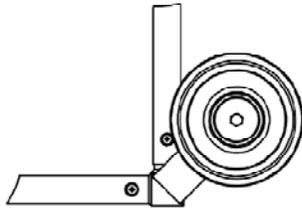

**Figure 3 Tube Assembly**

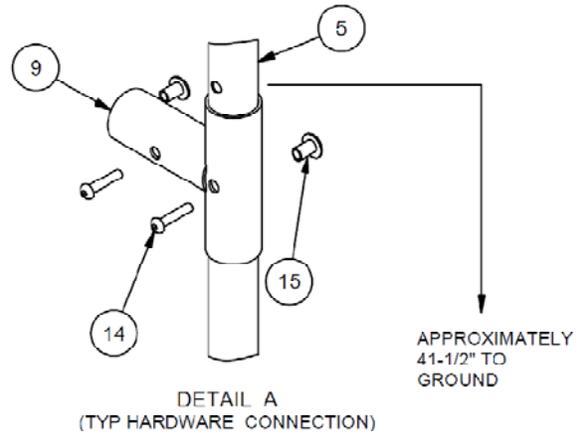

**Figure 4 Wheel Assembly**

