

# BA125/185

12 OR 18 BALL CADDY



Customer Service  
(800) 247-7668

PARTS LIST					
Item	Qty	Description	Item	Qty	Description
A	10	1/2" Cap Screws	E	4	Casters
B	10	Bolt Spacers	F	2	Frame Sides (Packaged Separately)
C	5	Horizontal Bars (Packaged Separately)	G	1	3/8" Hex Bit

- ◆ Inspect all contents prior to installation. Report any missing parts to dealer immediately.
- ◆ Read all instructions before proceeding.

1. Orient the *Frame Sides* so that the big holes are on the outside of the unit. Place the *Bolt Spacers* (B) on to the *Cap Screws* (A). Insert the *Cap Screws* (A) into the holes in the *Frame Sides* (F), making sure that they go into the tube and so that the heads of the *Cap Screws* (A) are flush with the outside wall. USE CAUTION TO KEEP THE SPACERS ON THE CAP SCREWS.
2. Line up the *Horizontal Bars* (C) with the holes in the *Frame Sides* (F) (See Figure 1). Tighten the
3. *Cap Screws* (A) using the *3/8" Hex Bit* (G).
3. Insert the *Casters* (E) into the bottom of *Frame Sides* (F).

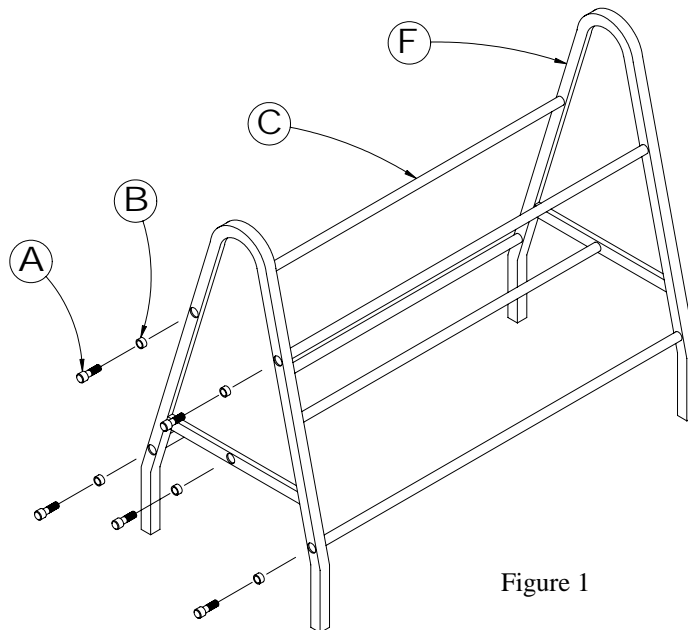


Figure 1

## **Instructions for Applying BA125/185 ABC Ready to Apply Vinyl Lettering**

1. Prepare a solution of water and a very small amount of dish soap or other mild detergent.
2. Make sure the surface that the lettering is to be applied to is clean.
3. Apply the solution liberally to the clean surface.
4. Carefully peel the stiff, clear backing sheet from the lettering making sure that the letters stay affixed to the front contact sheet.
5. Carefully locate the remaining sheet containing the letters with the sticky side down on the product so that the letters are straight and centered as desired. The soap solution will allow some movement of the lettering.
6. With an edge of a credit card or similar object, squeegee the bubbles and solution from under the lettering making sure the entire image does not slip or slide.
7. After all bubbles are removed with the credit card and after insuring that the image is straight, allow to dry for approximately 1 hour.
8. Again using the credit card, make sure all letters are affixed, then remove the front paper from the lettering sheet and remove excess solution with a dry cloth.
9. Using the edge of the credit card make sure all bubbles are removed and that all letters are affixed.