


FITG00300 - LOCATOR CUP KIT			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	00242-000	FLOOR ANCHOR	2
2	FEET00041	LOCATING CUPS	2
3	HDWE06163	1/2-13 X 3/4" SCREW	2

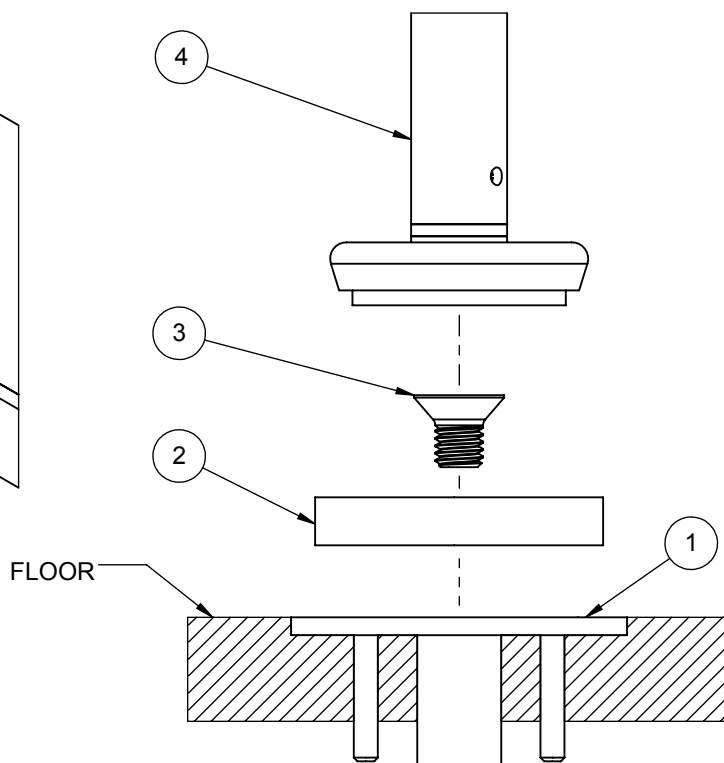

1. Roll portable backstop into position with the backboard located in the exact playing position.
2. Lower both of the portable's leveling assemblies (4) until they contact the floor.
3. Mark the floor at the point where the levelers contact the floor. This will aid in accurately locating the No. 00242-000 floor anchors (1).
4. Raise both leveling assemblies and roll the portable backstop out of the way.
5. Install the No. 00242-000 floor anchors per the instructions included with the floor anchors. Locate the anchors according to the marks made in step number 3 and use the 1/4-20 x 1.5" screws (provided with floor anchor) to attach them directly to the wood floor.
6. Screw locating cup (2) into floor anchor using 1/2-13 x 0.75" screw (3). Repeat on other side.
7. Portable backstop can now be rolled back into position and leveling feet lowered into locating cups.