


## ANCHOR INSTALLATION INSTRUCTIONS:

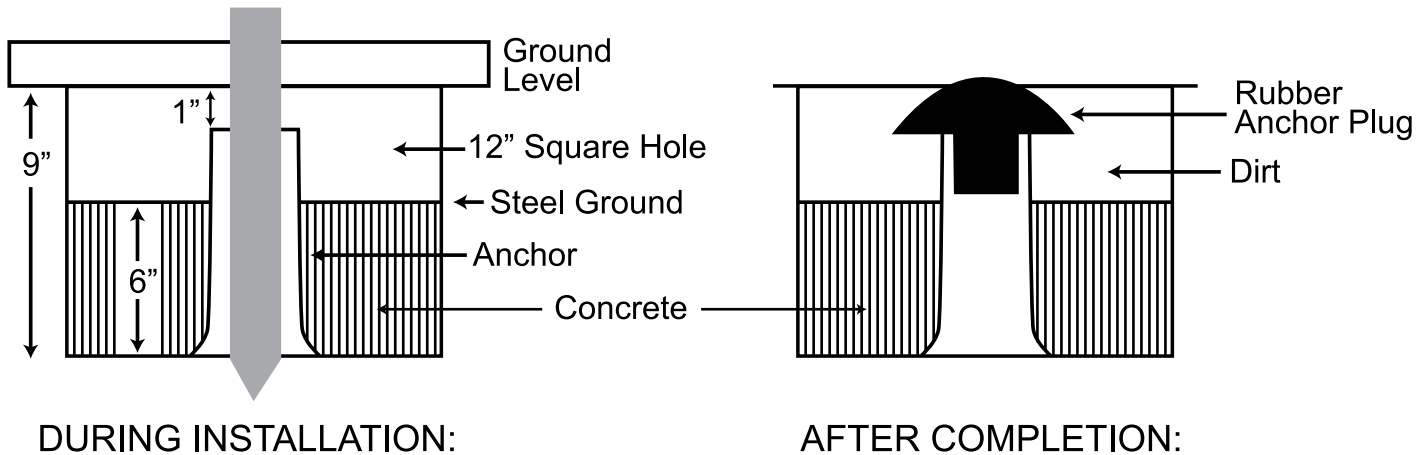

1. Locate the base paths and lay out the field.
2. Install or mark position of home plate to first and third bases. Square bases with center line of field running from home plate through the center of the pitcher's rubber.
3. Measure the proper distance from first and third bases to second base. Straight lines of the proper length measured from each base will meet at the proper location for second base. This location should be in line with an extension of the straight line from home plate through the center of the pitcher's rubber.
4. Dig a 12" x 12" hole, 9" deep at each base location.
5. Drive a 1½" square wooden stake into the center of hole. This stake should be 6¾" inside each of the two base lines at the point of intersection. A level or a plumb bob should be used to check this. (The stake will be removed later so it should not be lodged too tightly in the ground.)  
**NOTE: IT IS IMPORTANT THAT A STAKE BE USED TO KEEP THE STEEL GROUND ANCHOR STRAIGHT AND PREVENT CONCRETE FROM SEEPING UP INSIDE THE GROUND ANCHOR. IF CONCRETE SEEPS INTO THE GROUND ANCHOR, THE BASE PAN STANCHION TUBE MAY NOT FIT COMPLETELY INTO THE ANCHOR AND THUS PROTRUDE ABOVE GROUND LEVEL.**
6. Slide ground anchor over the stake with the anchor extensions at the bottom. Press the anchor into the soil until the top is 1" below the ground level of the area surrounding the base.


**Stock #: B072**

Made in China by CHAMPRO Sports® T310  
Division of Wilson Hunt International, Ltd., Wheeling, IL

**NEED HELP?** Live support: 847-279-2600  
Email: [help@champrosports.com](mailto:help@champrosports.com)

## BASE ASSEMBLY INSTRUCTIONS:

1. Place the wide end of the male post over the square hole of the base so that the post points toward the sky.

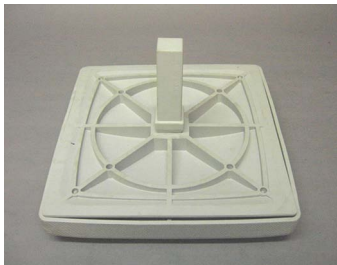

2. Press down firmly to insert wide end of the post into the square hole.




## IF BASE RELEASES:

1. Place the base cover on the ground, upside down, so that the nipples face upward.



2. Pull the base plate and post out of the anchor (out of the ground).

3. Turn over the base plate and post.

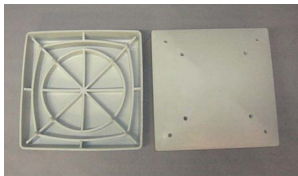

4. Place the base plate and post on top of the nipples, lining up the holes in the base plate to the nipples in the base cover.



5. Press down firmly. (The base is properly attached when all four corner nipples are nearly flush with the underside of the base plate and the inner most four nipples cannot be pushed in any further)



6. Replace fully assembled base cover, base plate and post into the ground anchor again before resuming play.



7. Make sure the base lays level on the ground.

